


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618

Address: 6475 Las Positas Rd. Livermore, CA 94551

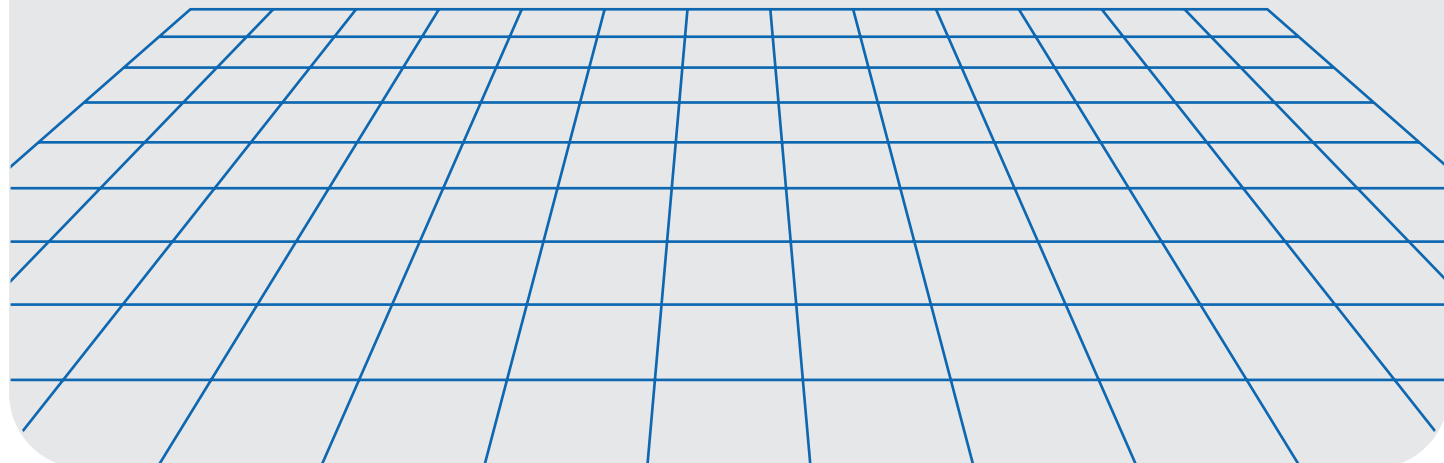


FlexiSpot

User Manual

Electric Recliner

Item No. Bloomsbury

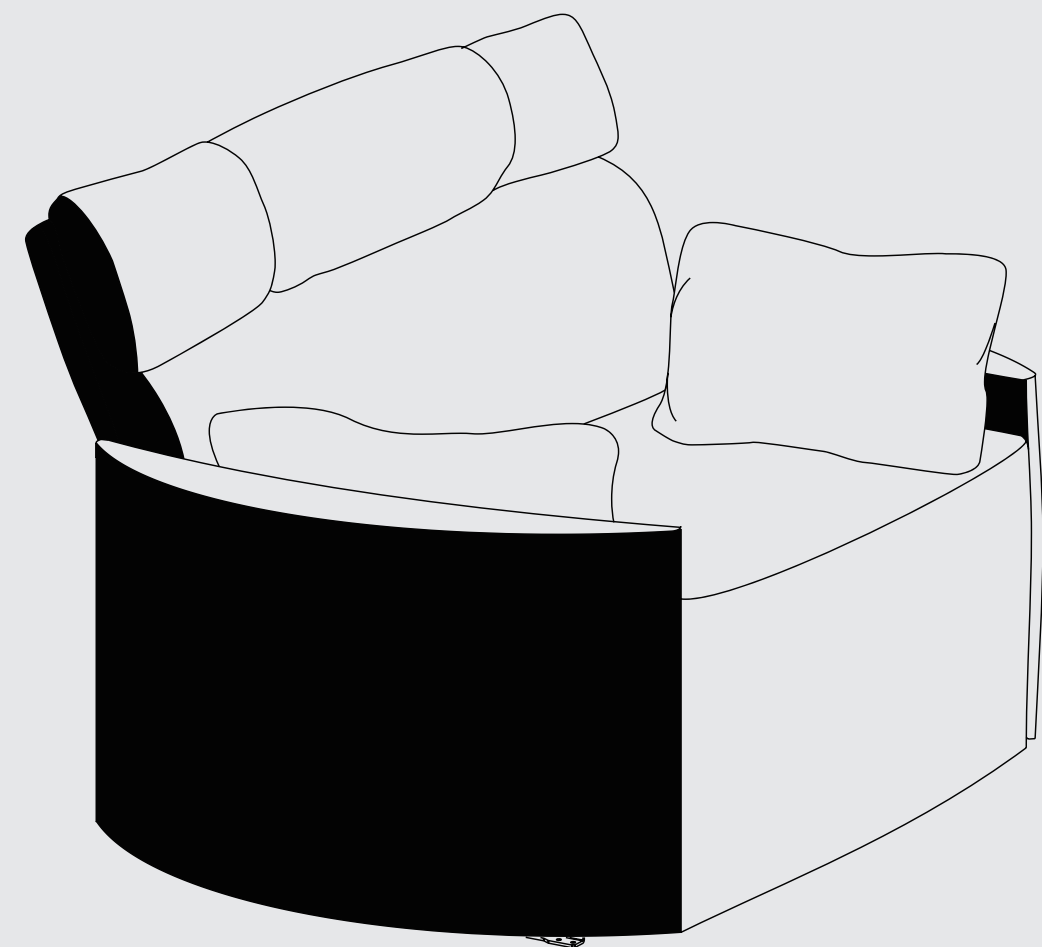

INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE

Materials


Main Materials	Usage Areas
Fabric	Main structure
Foam	Internal padding
Carbon steel pipe	Frame
Wood panel	Armrests and backrest

Product Specifications


Product Dimensions		43 x 53.5 x 40 inch
Cushion Dimensions	Seat Depth	22.8 inch
	Seat Width	35.4 inch
	Seat Height	20 inch
	Armrest Height	24.4 inch

Note: Dimensions are measured manually, so the actual product may vary by 1-2". Please refer to the actual product for precise measurements.


Installation Preparation

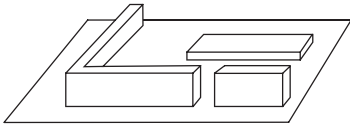

Assemble on flat floor to avoid scratches






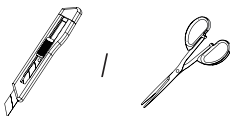


Prepare a knife or scissors

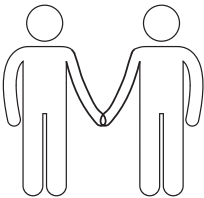

Installation should be done with two or more people

Components List

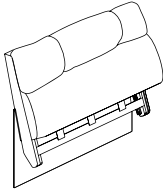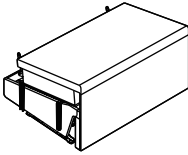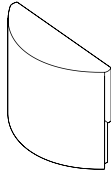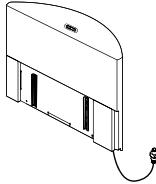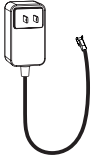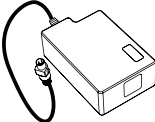
① Backrest padding x1 	② Recliner base x1 	③ Left armrest x1 	④ Right armrest x1 
⑤ Cushion x2 	⑥ Power adapter x1 	⑦ Control Box x1 	

Kind Reminder
The diagrams are for installation guidance and safety warning purposes only. The appearance and details of the product shall be subject to the actual item received.

Assembly Instructions

01


- 1. Remove all parts from the packaging and place them on a clean, flat surface.
- 2. As shown in the diagram, align the slots on both sides of the backrest with the connectors on the base. If alignment is difficult, gently adjust by hand until the connectors fully insert into the slots. Press firmly until you hear a clear "click", indicating the backrest is securely attached.
- 3. Tip: Hold the backrest from the upper section during insertion to avoid injury.

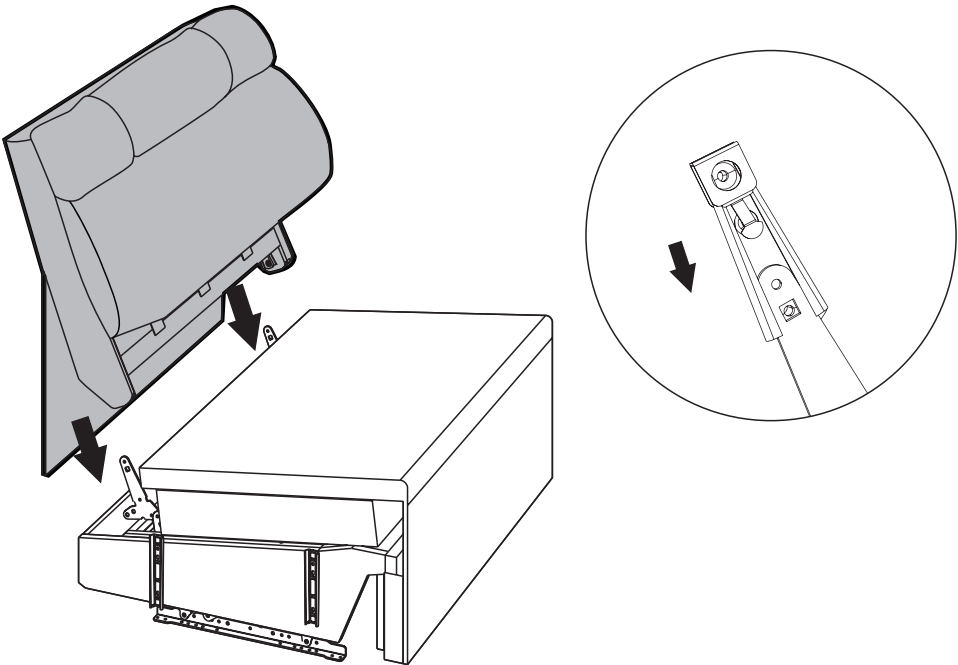

02


Install the left and right armrests by inserting them into the recliner base.

⚠ Avoid pinching wires while installing the right armrest.

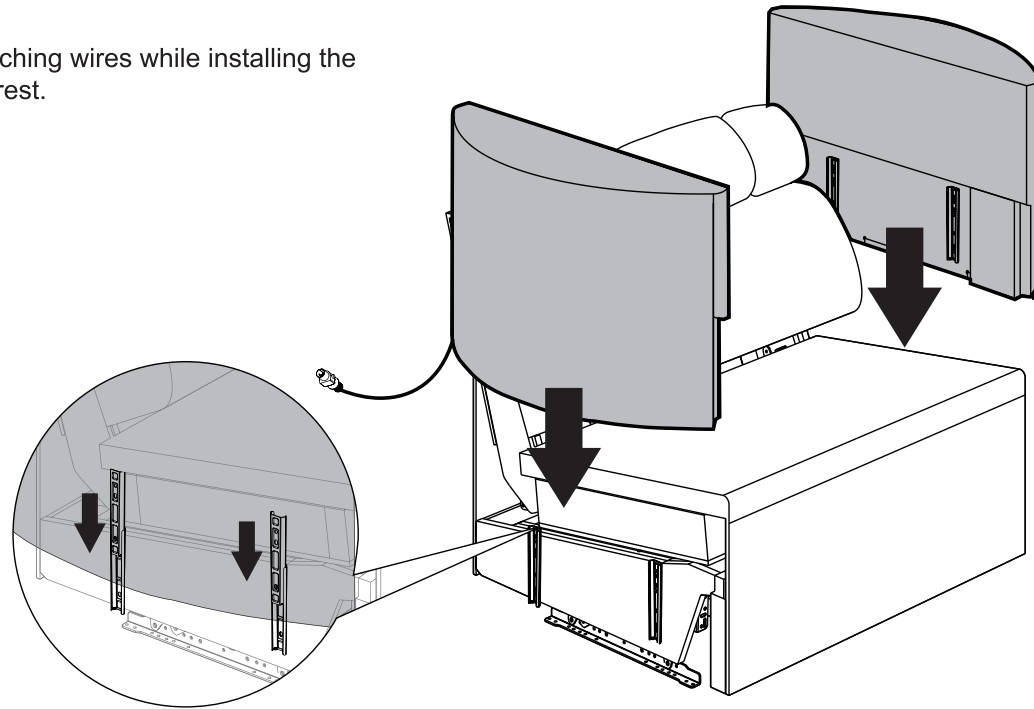

03

Please complete the wiring as shown in the diagram.

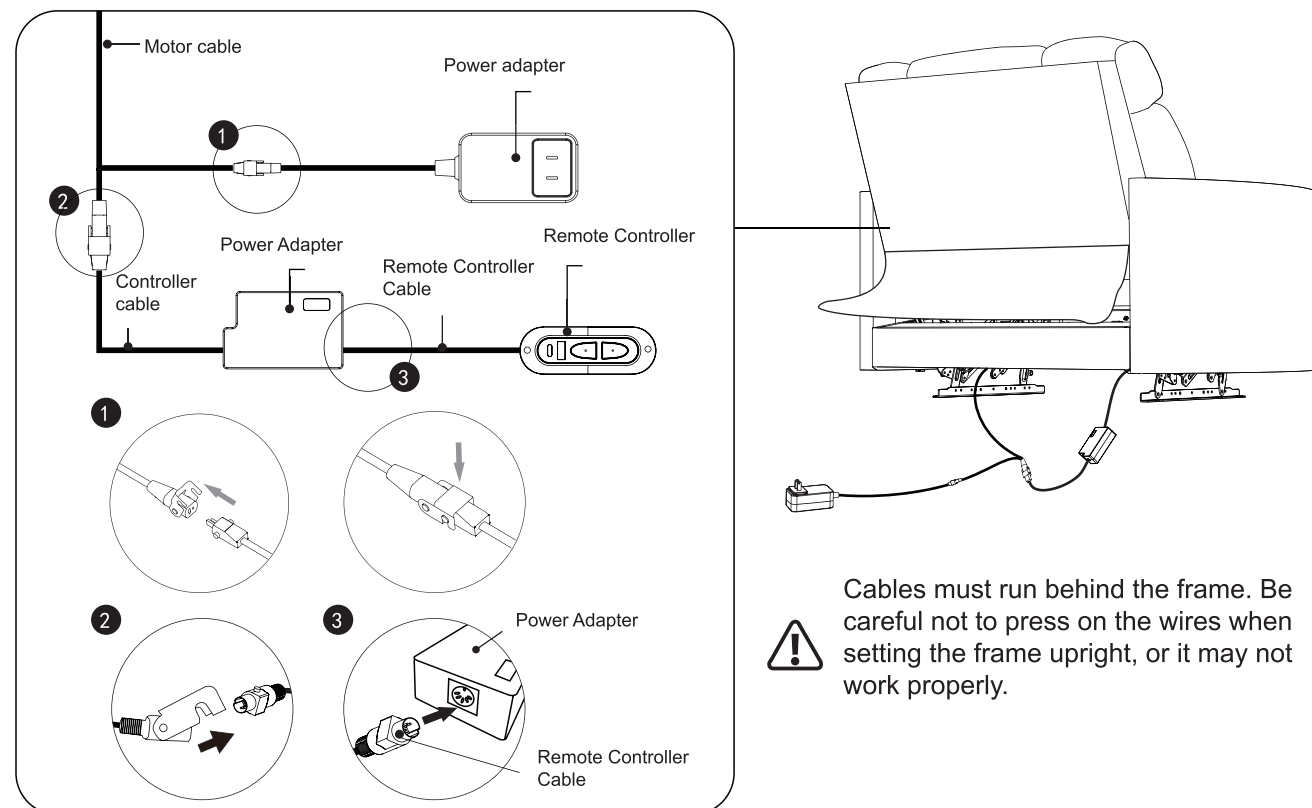


04

First, organize the backrest upholstery. Secure the Velcro to the lower rear section of the frame as shown in the illustration.


Next, connect the adapter to the power supply. Use the hand controller to adjust the sofa to the reclining position (fully extended).

⚠ Velcro on the inside of the back flap.

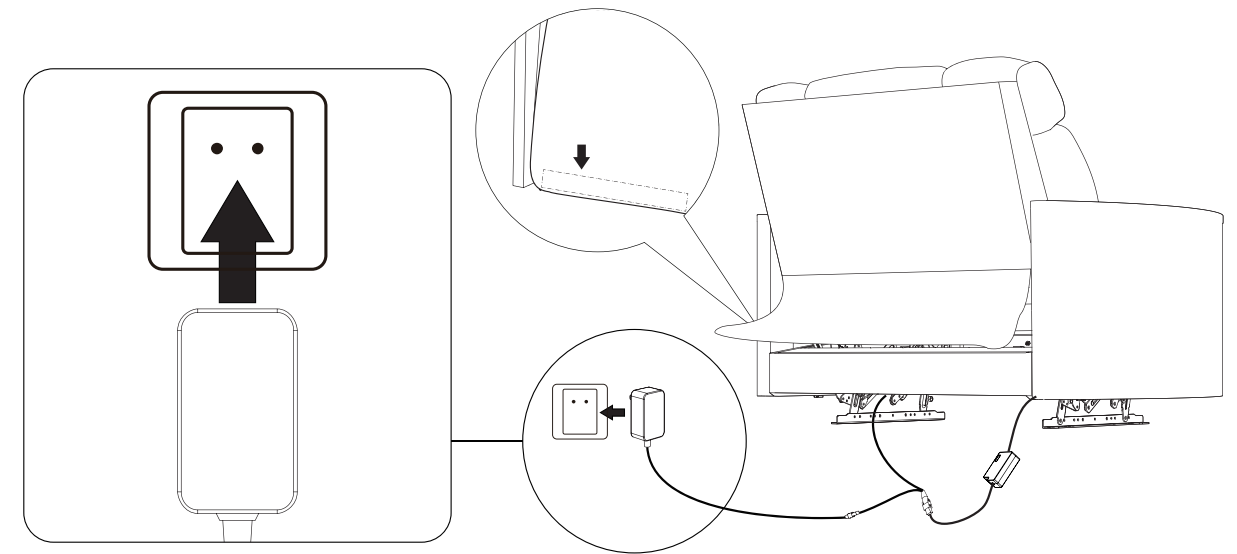

05

Align the backrest with the seat cushion. Once the Velcro is securely fastened, use the remote to fully retract the footrest. Your chair is now ready for use.

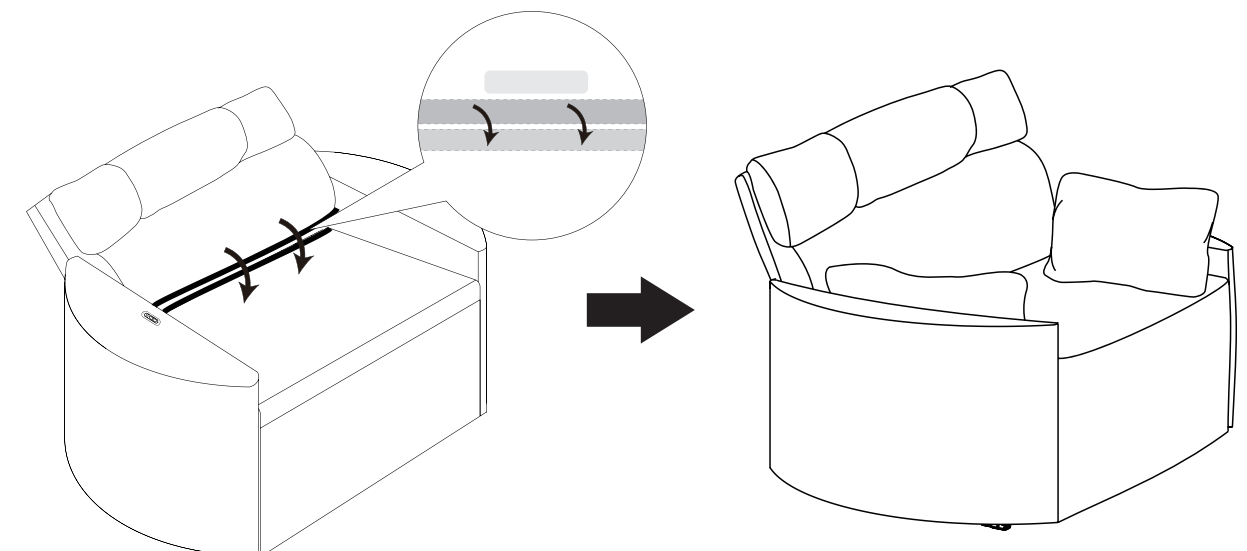


Switch Function Instructions

Type-c

Close

Open

USB

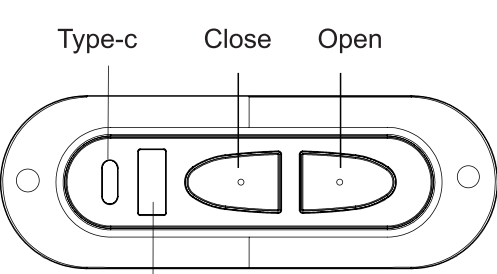


	Control the recliner to open Press and hold the button to gradually open the recliner to the reclining position.
	Control the recliner to close Press and hold the button to gradually close the recliner to the sitting position.


Anti-Pinch Function Instructions

The anti-pinch function is preset at the factory and ready for use. If you experience abnormal sensitivity or the function fails during use, please follow these steps to reset the system:

1. Reset the Recliner
- Use the hand controller to run the recliner until it is in the fully closed (upright) position.
2. Initialization
- While in the seated position, press and hold both the Open & Close buttons on the hand controller simultaneously for 15 seconds.
3. Calibration
- The user must be seated on the recliner for this step. Press and hold (do not tap) the Open/Close buttons to run the recliner through one complete cycle—from fully reclined to fully closed.

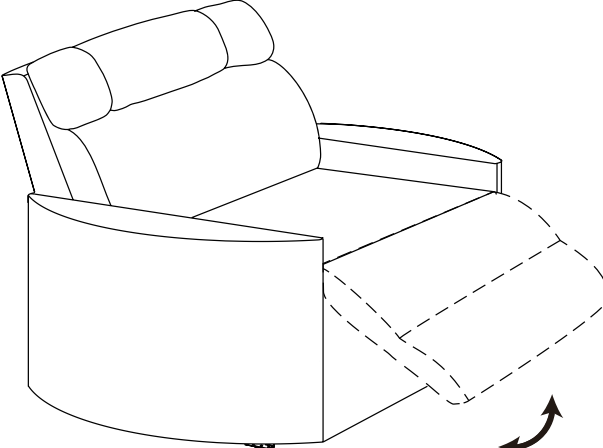

 Triggered by Obstruction

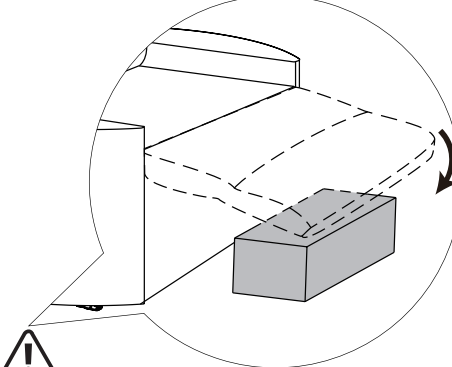




Once the anti-pinch function is triggered, you must either press the 'Open' button once or wait for 15 seconds before the recliner can be closed or reset.

Warning




Do not sit on or apply pressure to the armrests

Do not press backrest after reclining

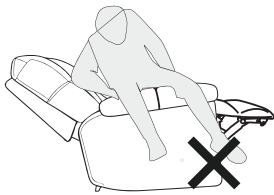


Do not get off the chair while it is reclined

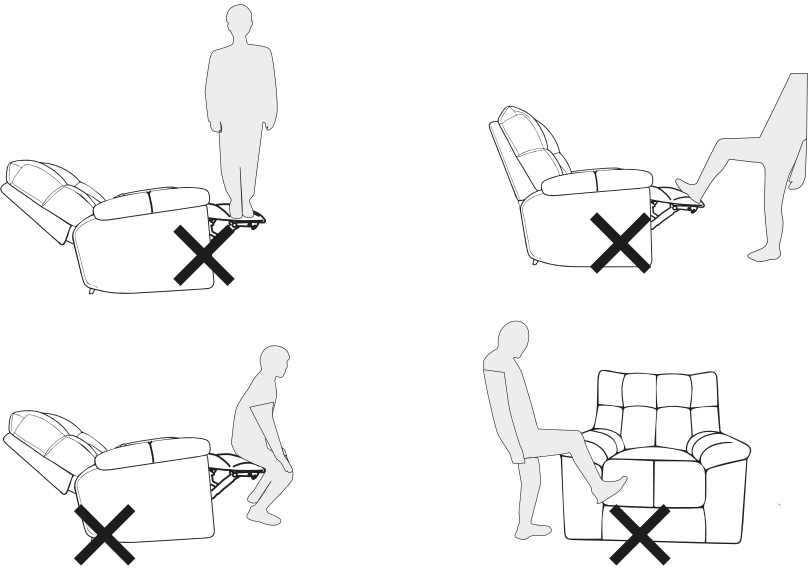


Do not sit/kick/stand on the footrest at any time


Warning

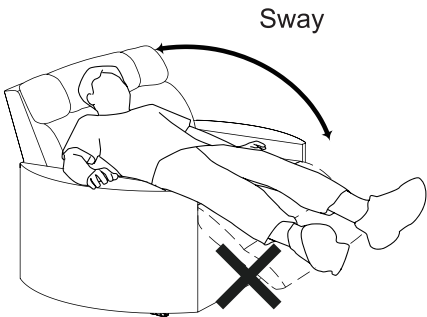


Do not rock the recliner back and forth when it is fully extended

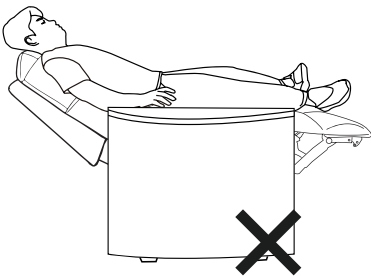

Avoid sitting or lying down heavily; when reclining, ensure your hips are on the seat cushion and do not sit on the backrest

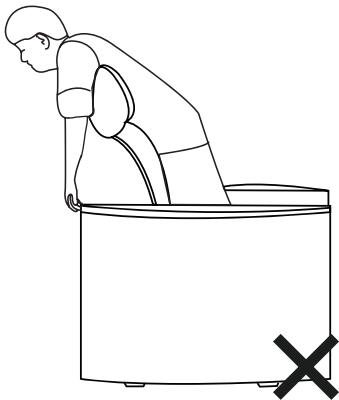

Do not force the recliner to tilt backward or lie flat, as this may cause it to tip over

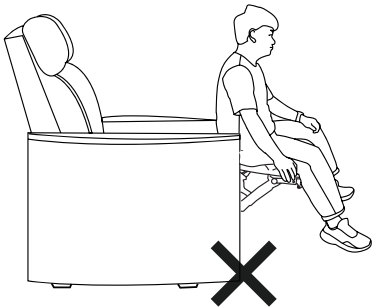

Do not sit on the front edge of the recliner or on the footrest, as this may cause it to tip forward

Troubleshooting

If this product malfunctions, please refer to the following situations and possible solutions:

Issue	Solution
Mechanism movement is not smooth	1. Adjust the product position (ensure it is level). 2. Apply a small amount of lubricant to the moving parts.
Remote control buttons are unresponsive	Please check if the remote control cable is properly connected.
Stuttering or jerky movement during operation	1. Clear any debris or obstacles from under and around the sofa. 2. Ensure the motor cable and power cord are securely connected.
Unusual or persistent odor	Keep the area well-ventilated or use a specialized sofa deodorizer spray.
Anti-pinch sensitivity is abnormal or failing	1. Check if the control box cables are connected correctly. 2. After a power reset, please return the sofa to the upright/ seated position. 3. Refer to the Anti-Pinch Function page (Page 5) to reset the settings. 4. Disconnect the control box and bypass it by connecting the remote directly to the motor cable.
All functions are completely unresponsive	1. Ensure the motor cable and power cord are securely connected. 2. Double-check that all wiring connections are firm. 3. Verify that the power cord is plugged into a functioning power outlet.
If issues persist after following the above troubleshooting solutions, please contact our customer service team.	