


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618

 
Address: 6475 Las Positas Rd. Livermore, CA 94551

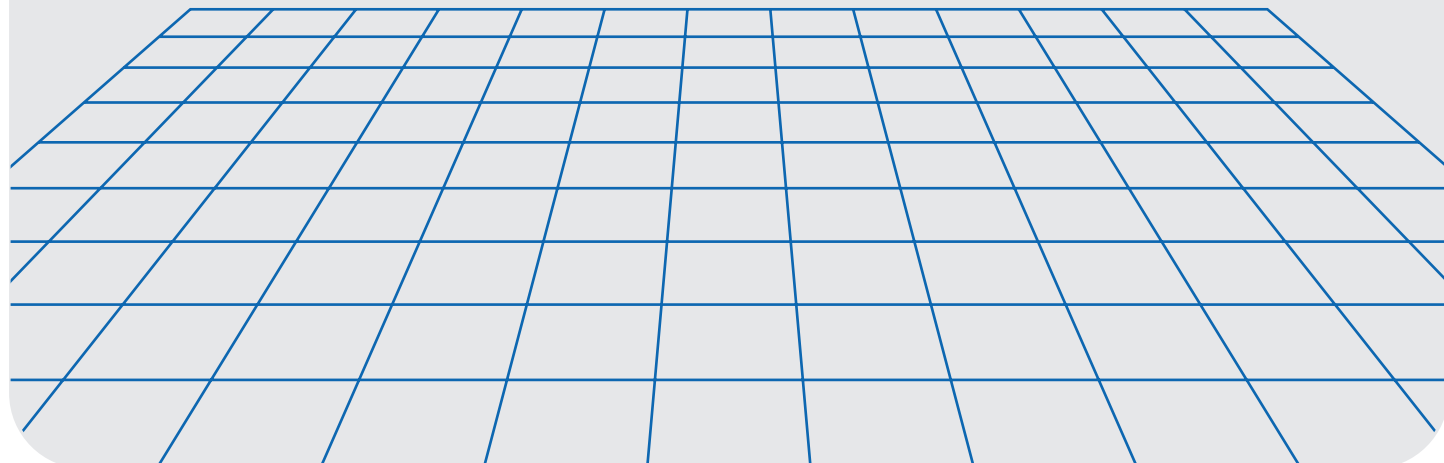

FlexiSpot

User Manual

Item No. DS01-DP

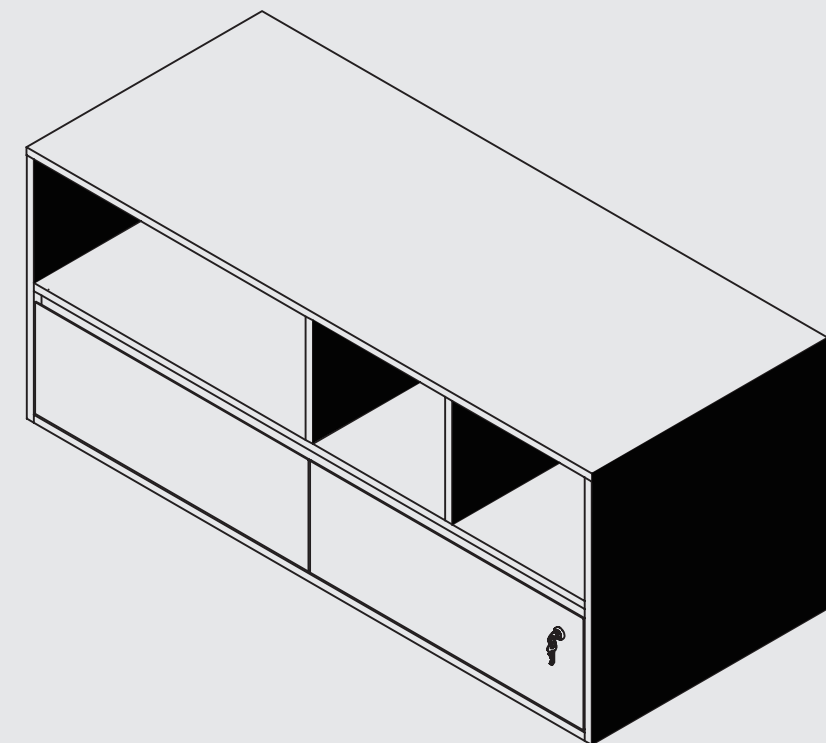

INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE

Before Installtion

 
 
 
 
 
 
Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.














Cam Lock Assembly Instructions

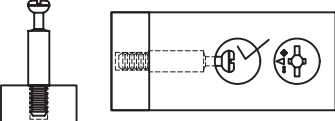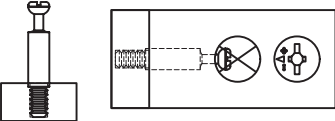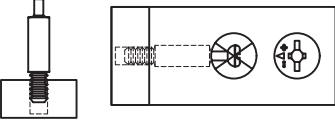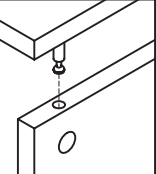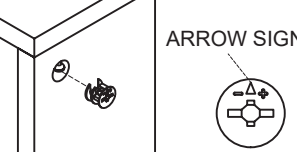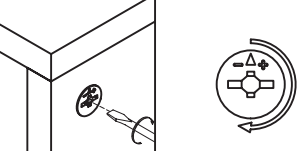	Insert Cam Bolt into hole as shown in diagram A.
	Make sure not to insert the Cam Bolt. Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>




 
PRODUCT DETAILS

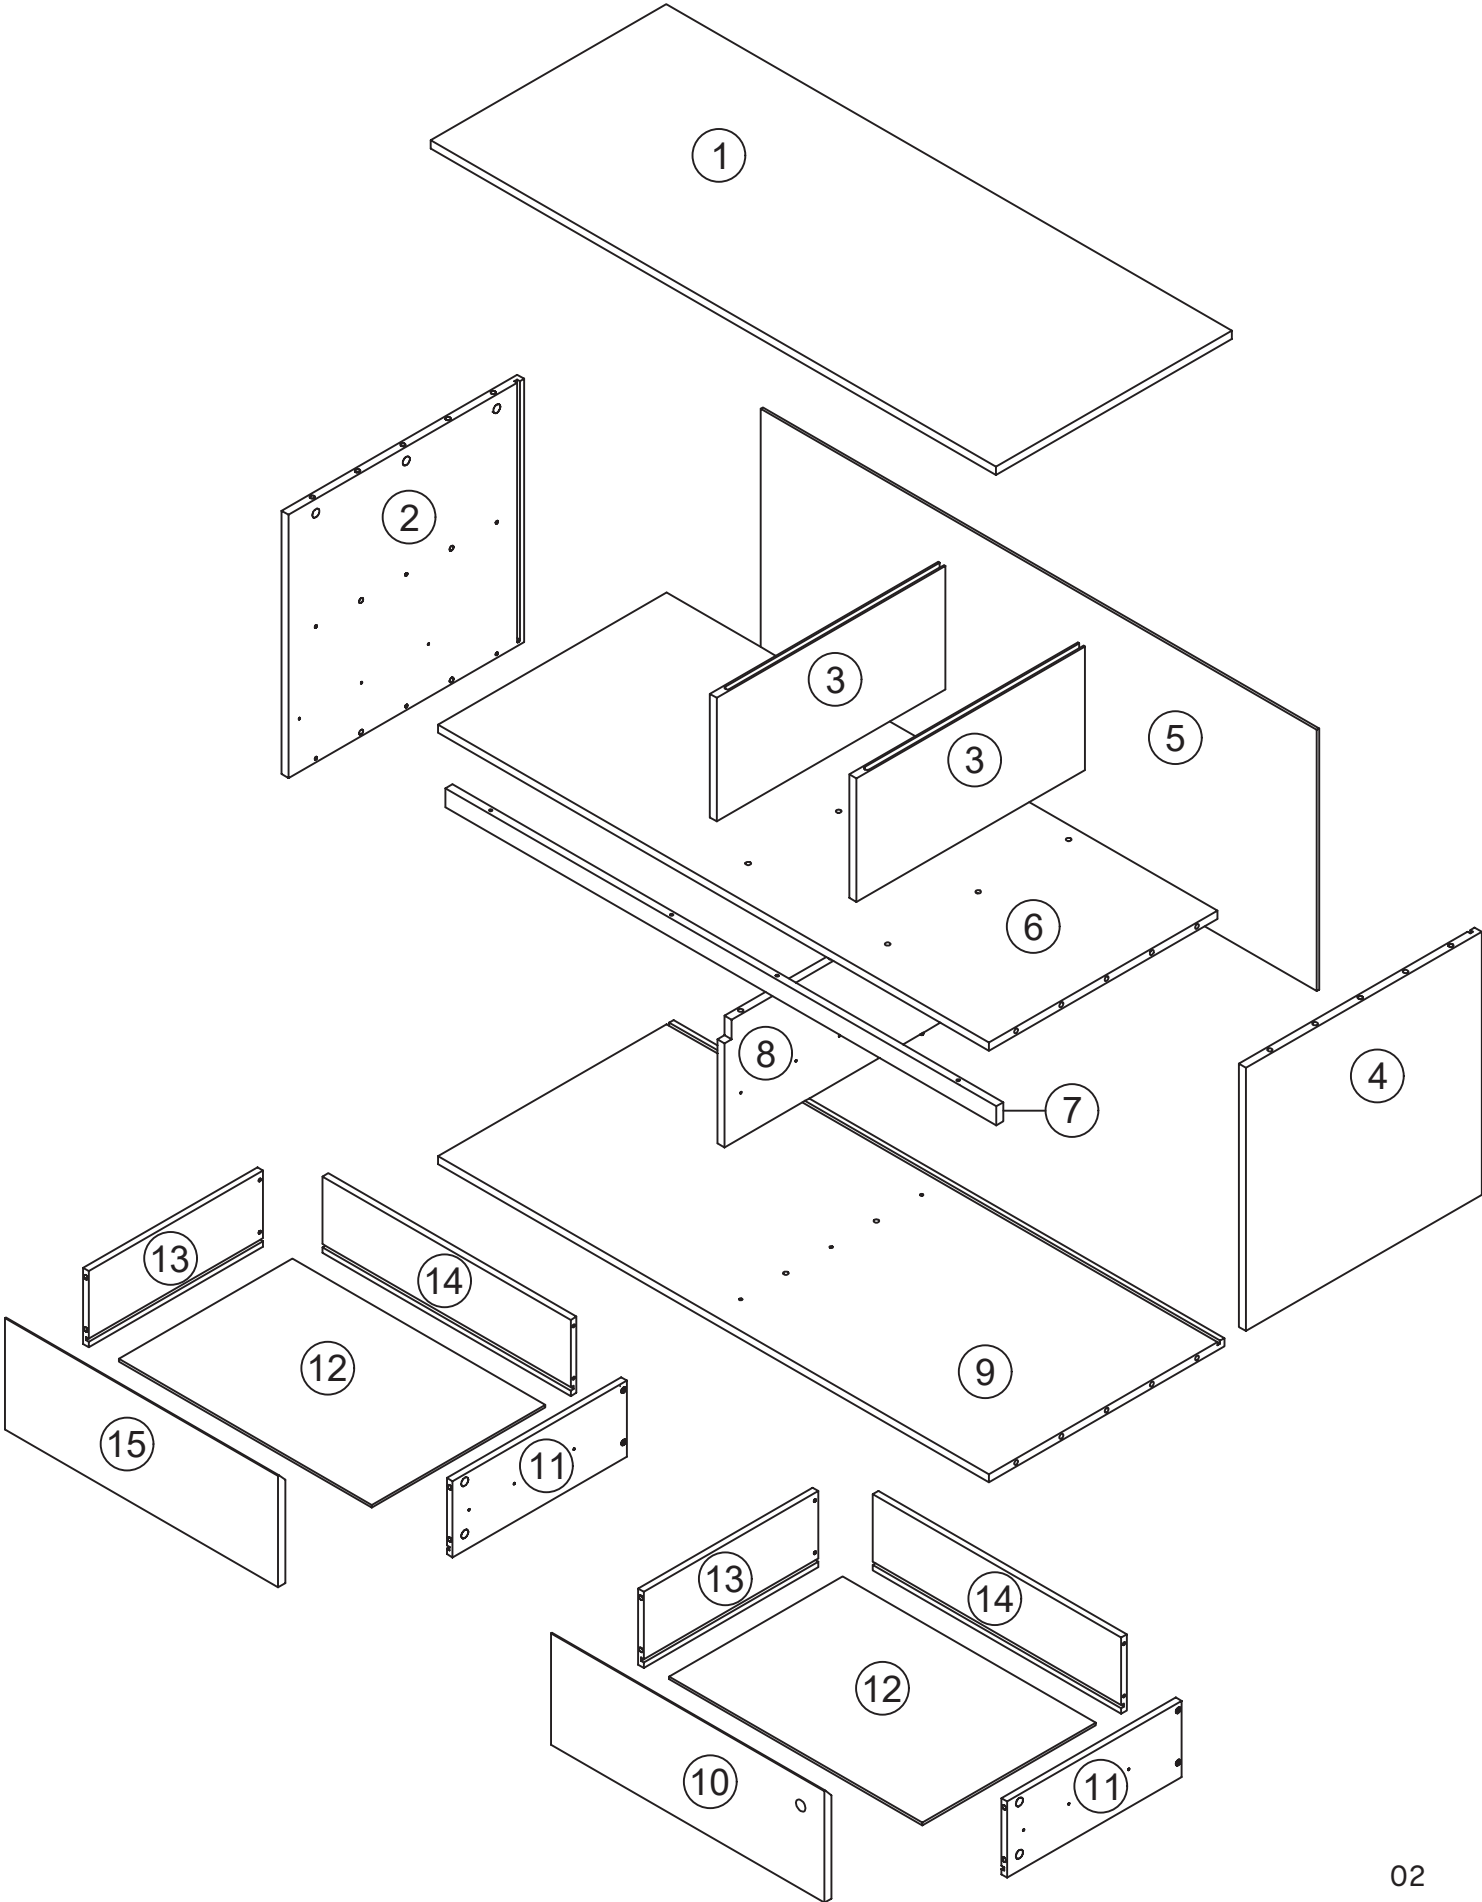


PARTS LIST

             ①	TOP BOARD ×1		⑨	BOTTOM BOARD ×1	
②	LEFT SIDE BOARD ×1		⑩	RIGHT FRONT DRAWER ×1	
③	TOP CENTER BOARD ×2		⑪	RIGHT DRAWER SIDE ×2	
④	RIGHT SIDE BOARD ×1		⑫	BOTTOM DRAWER ×2	
⑤	BACK BOARD ×1		⑬	LEFT DRAWER SIDE ×2	
⑥	SHEFL BOARD ×1		⑭	BACK DRAWER ×2	
⑦	FRONT BAR ×1		⑮	LEFT FRONT DRAWER ×1	
⑧	LOWER CENTER BOARD ×1				

    
HARDWARE LIST

Ⓐ	Ø5*35MM ×32		Ⓖ	3.5*10MM ×26	
Ⓑ	Ø 15*10MM ×32		Ⓗ	3*12MM ×4	
Ⓒ	Ø 8 * 20MM ×12		Ⓘ	4*30mm ×4	
Ⓓ	Ø 8 * 30MM ×18		⓵	LOCK ×1	
Ⓔ	Ø18*5mm M6 ×6		⓶	M4*50MM ×8	
ⓕ	F1 : D300MM ×2		ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)		
	F2 : D300MM ×2				

 
1

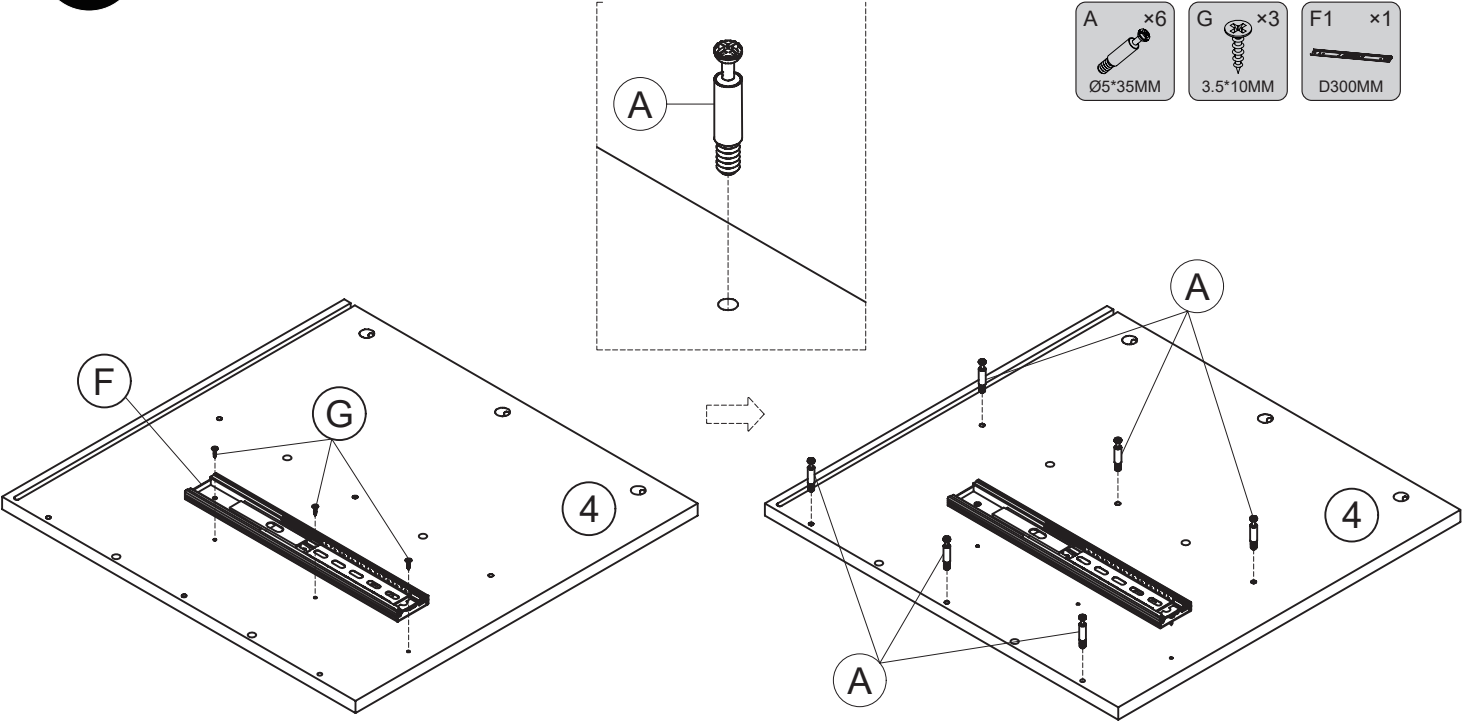


2

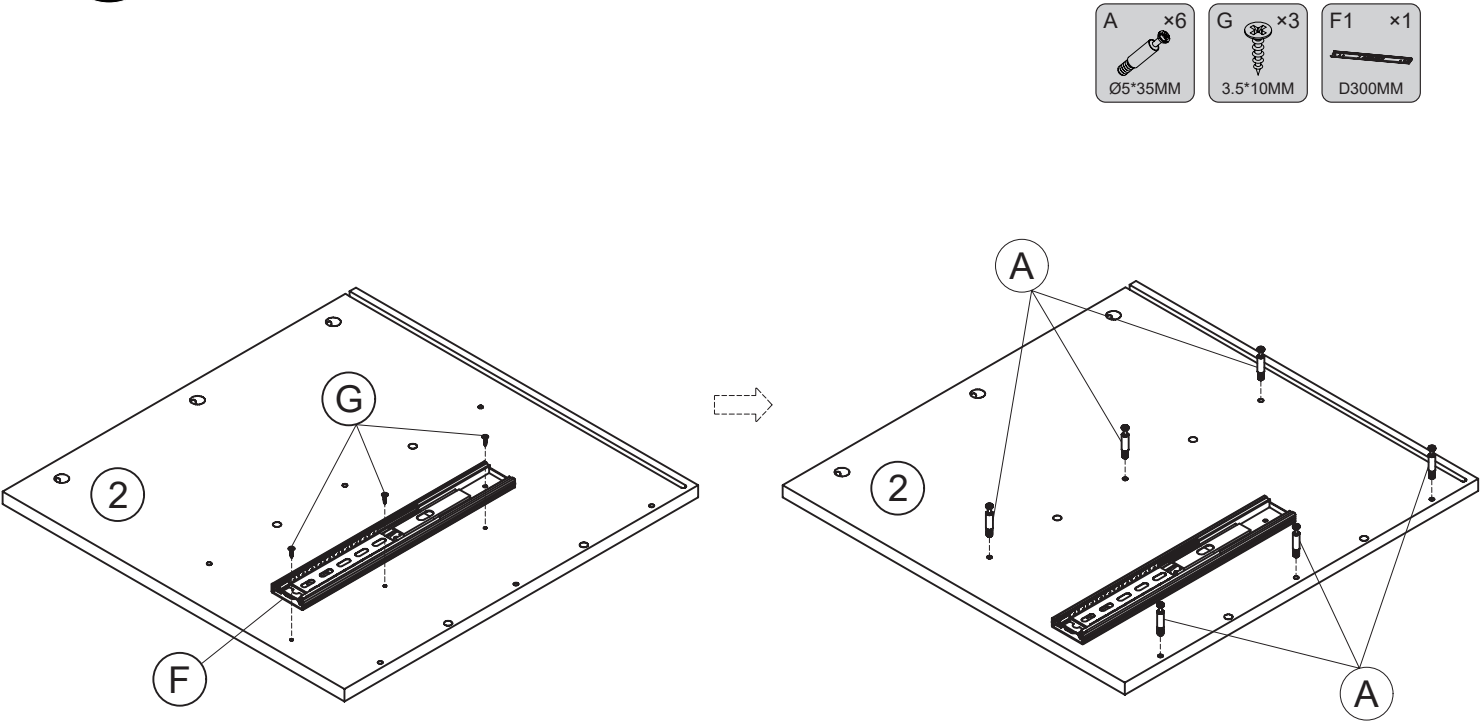 


3

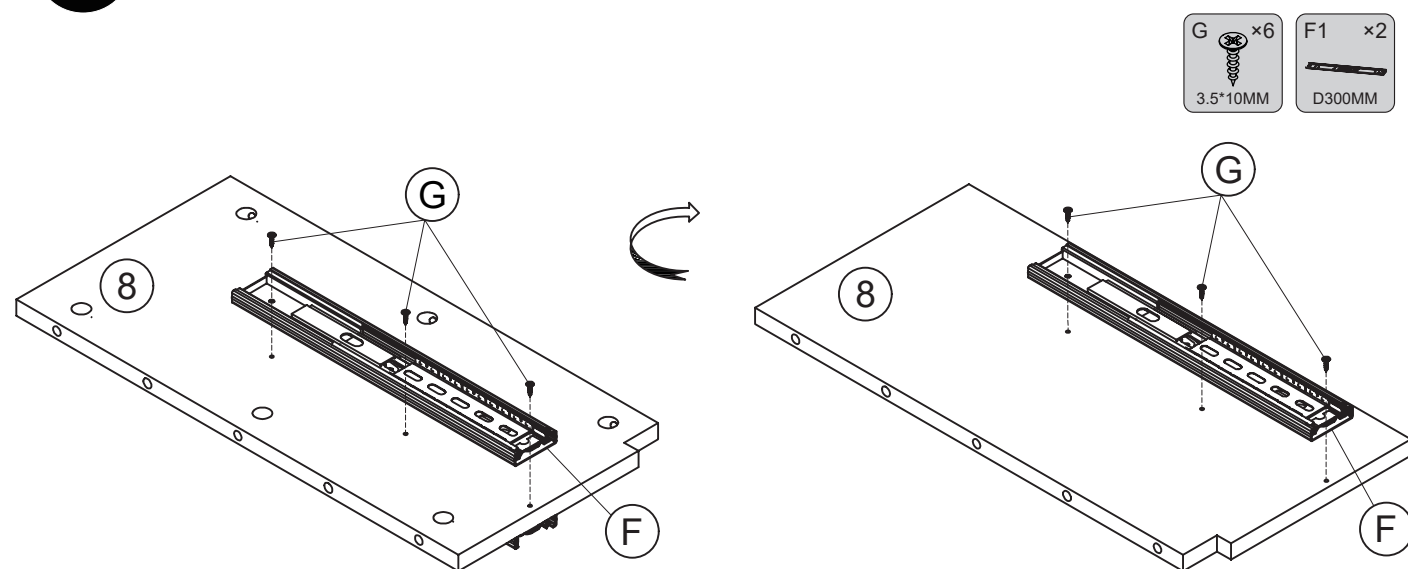 


4

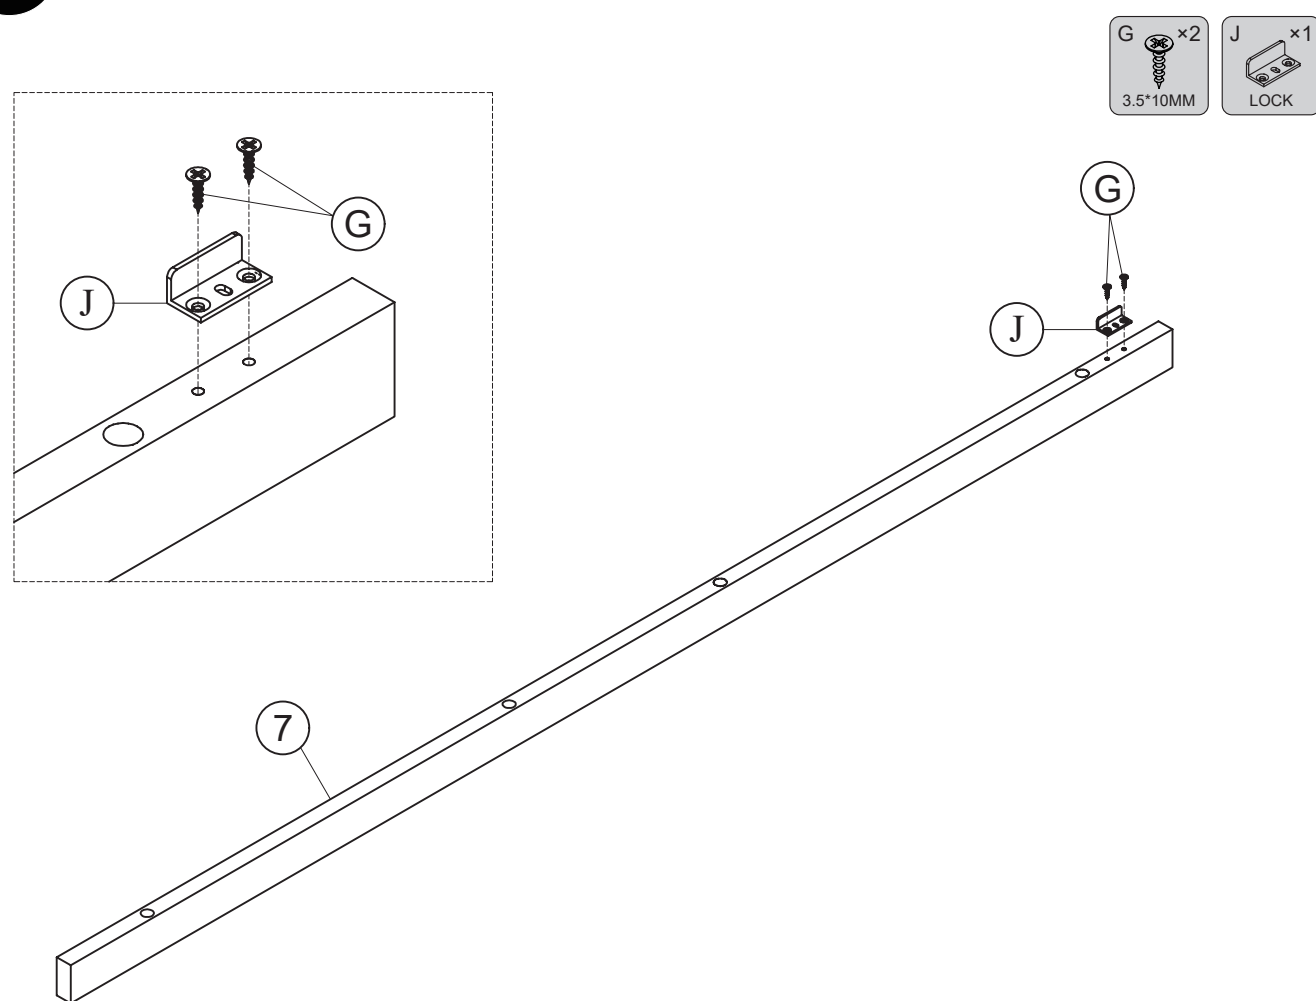 

5

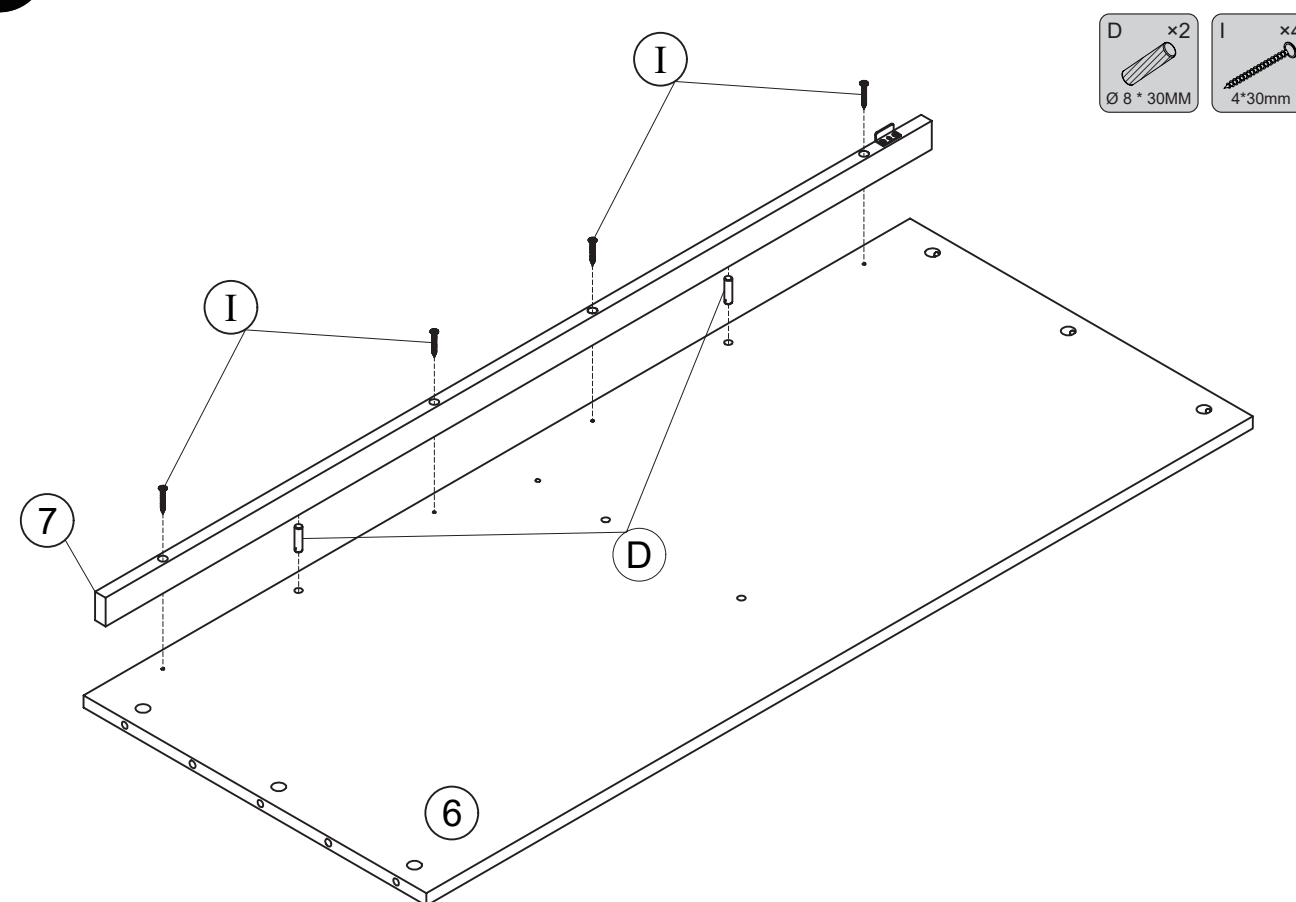 



6

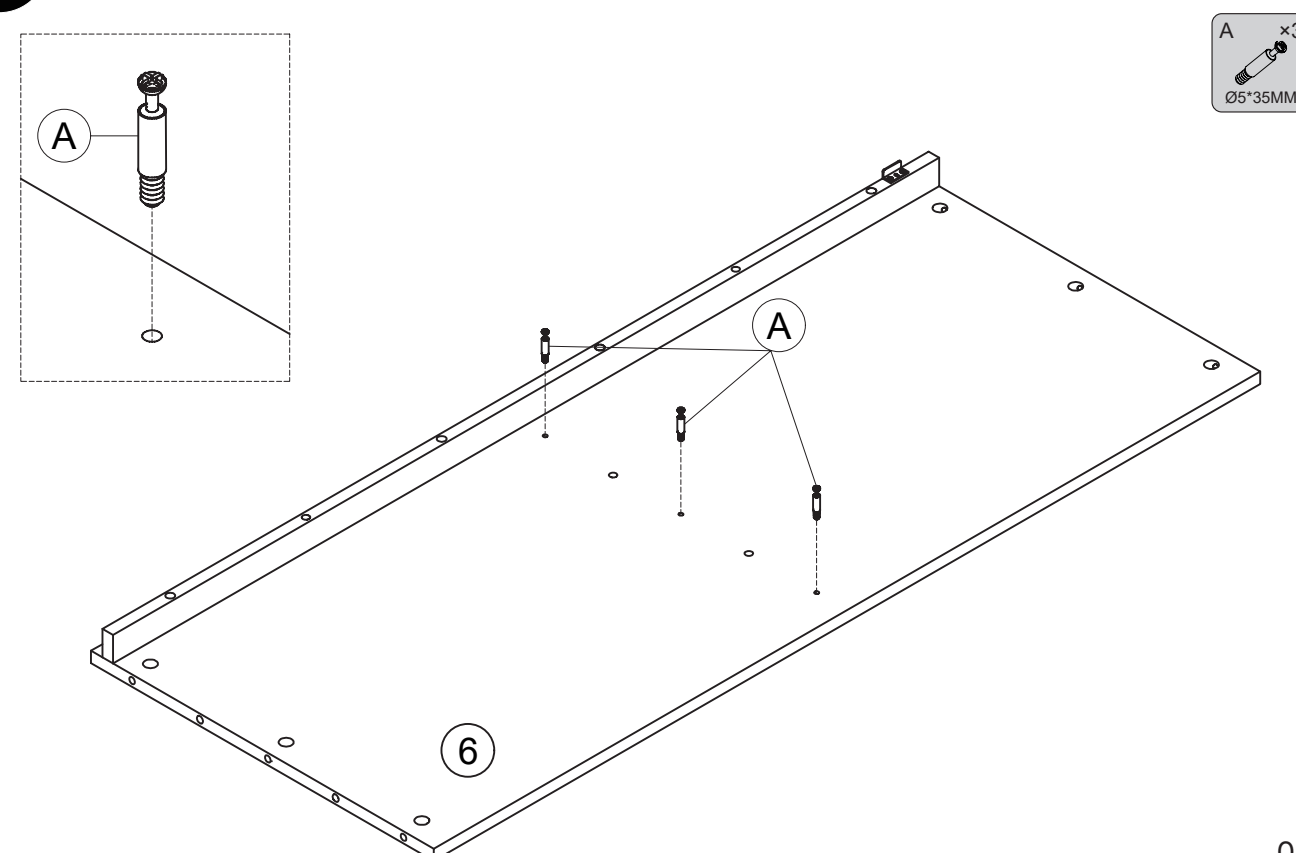 

7

A ×3
Ø5*35MM

  
E ×6
Ø18*5mm M6

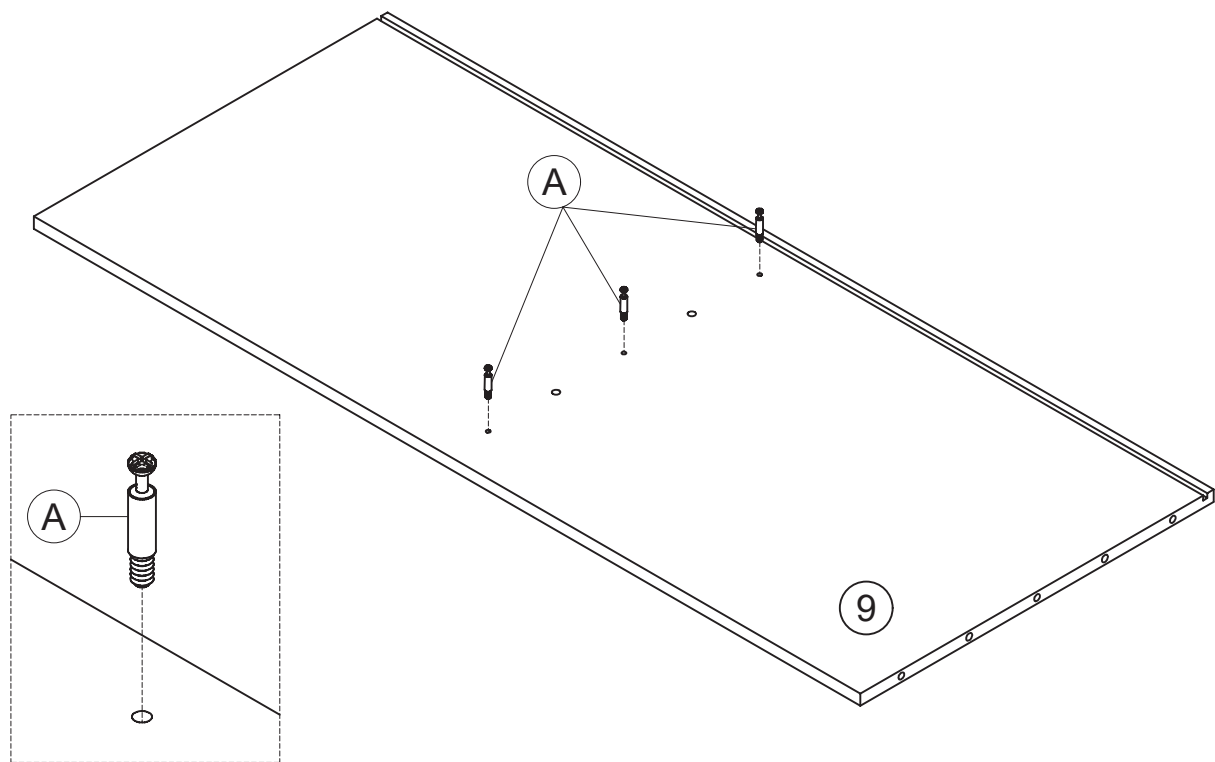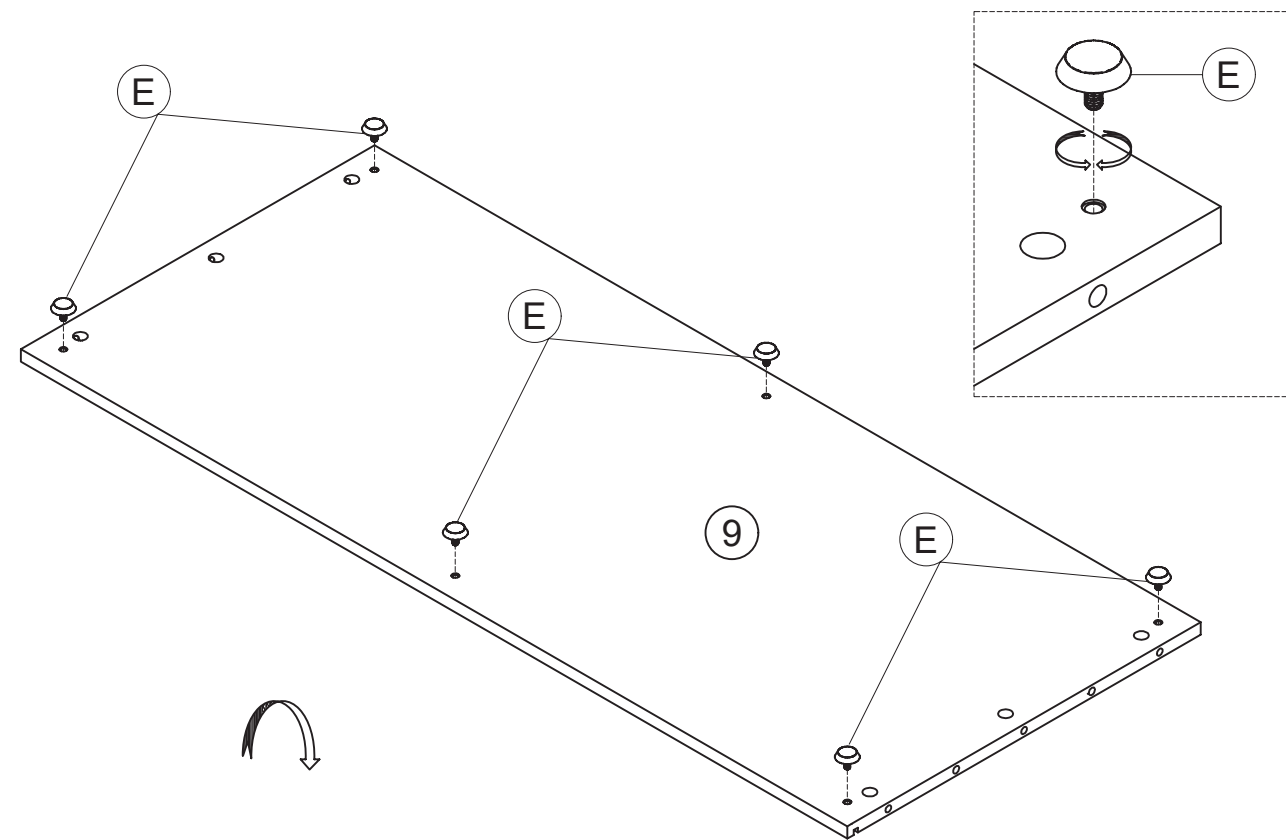

8

B ×3
Ø 15*10MM


 
D ×2
Ø 8 * 30MM

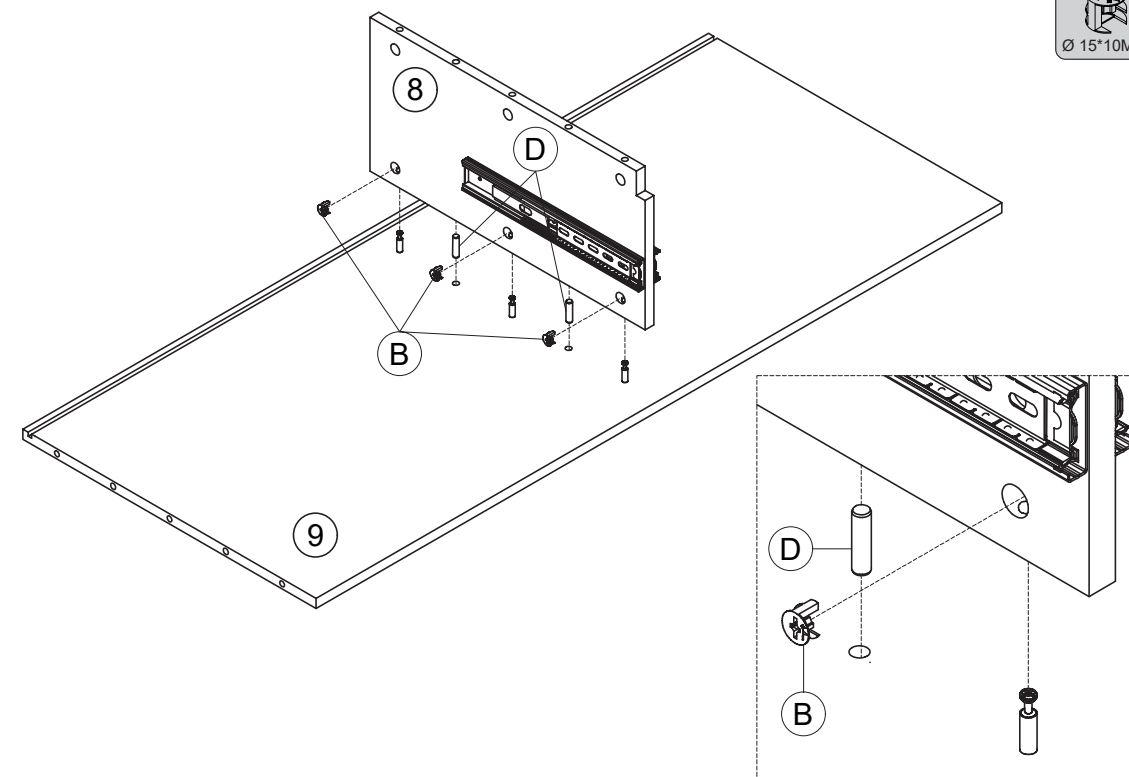


9

B ×3
Ø 15*10MM

  
D ×2
Ø 8 * 30MM

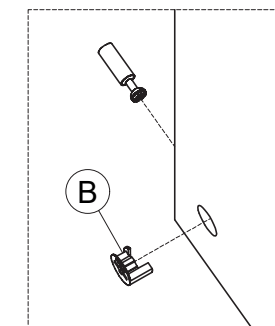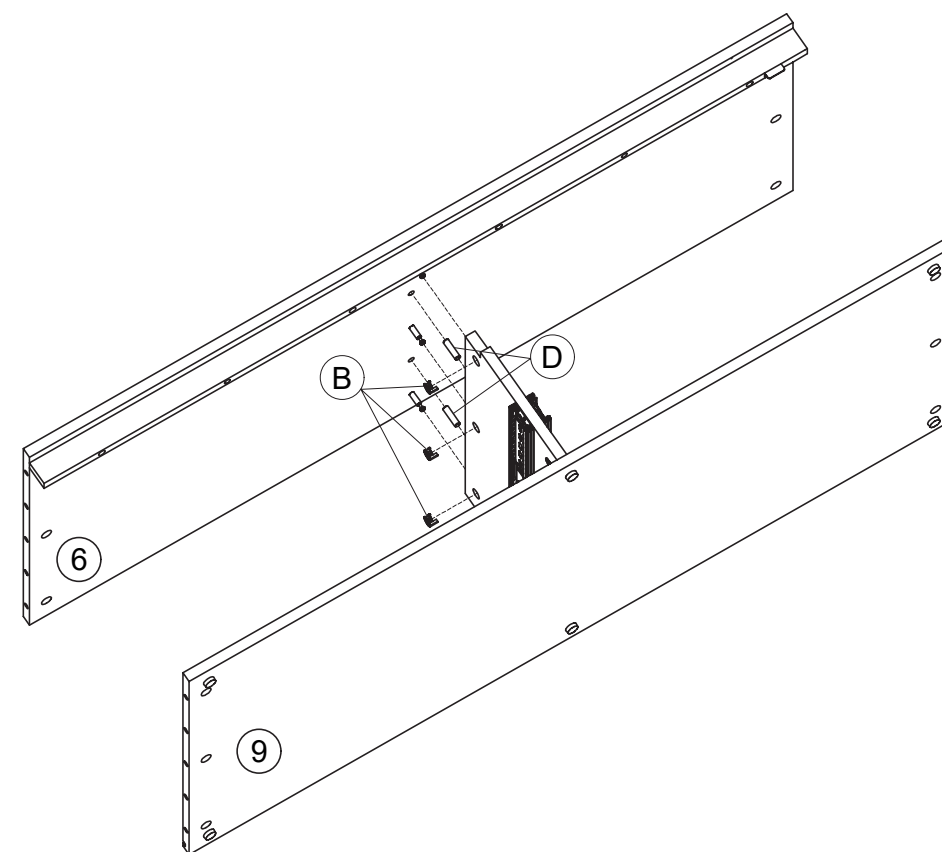


10

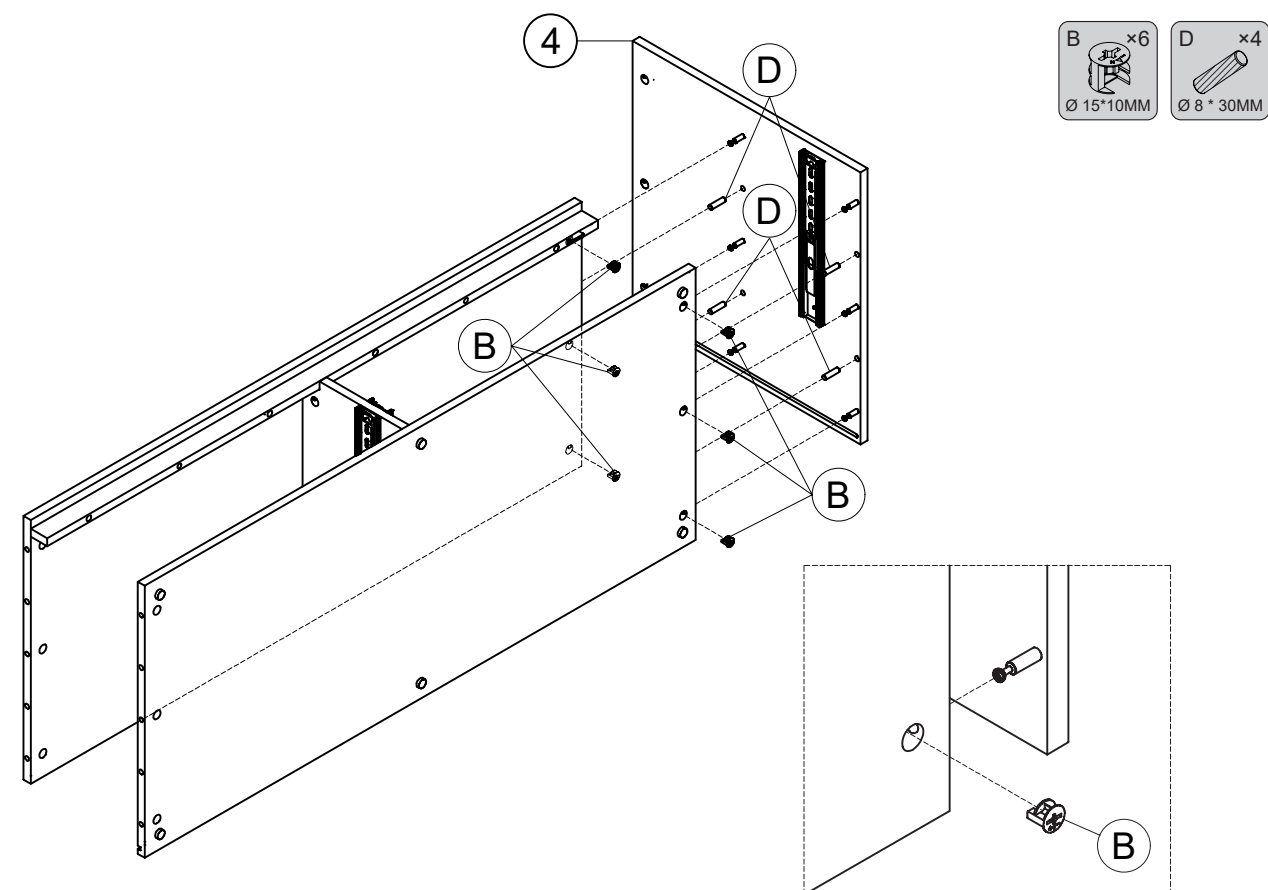 


11

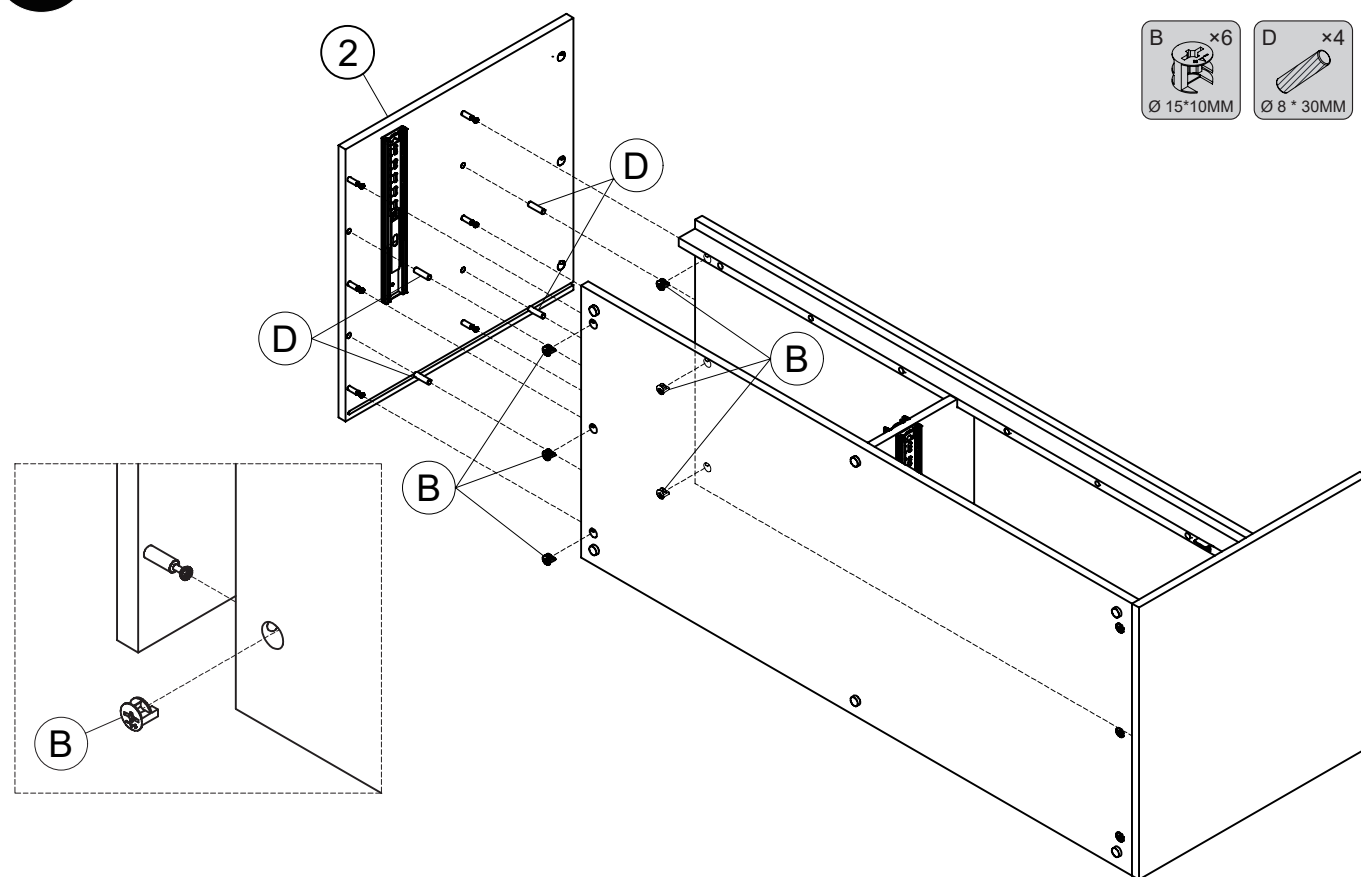 


12

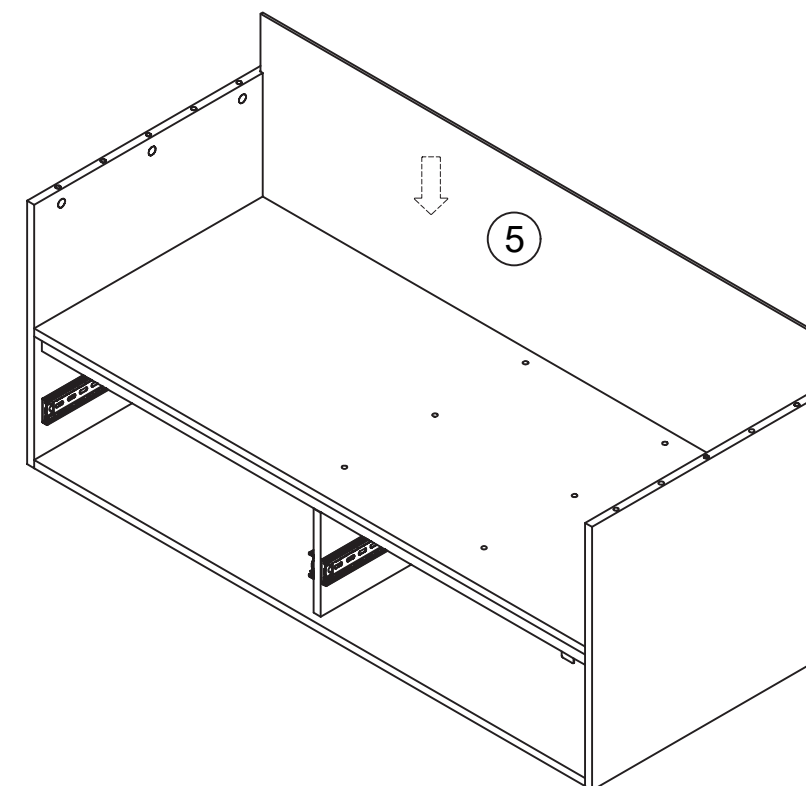 


13

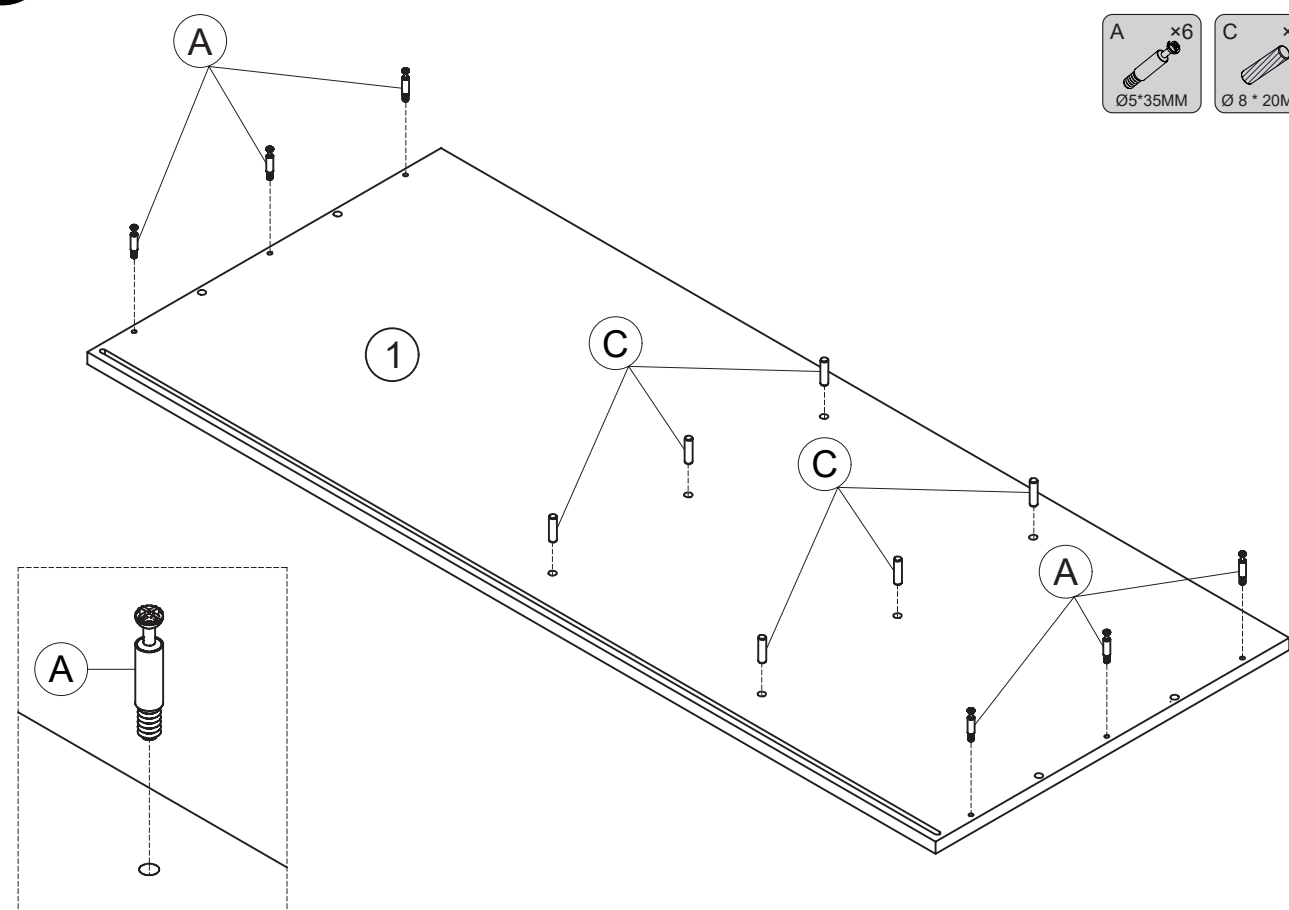 


14

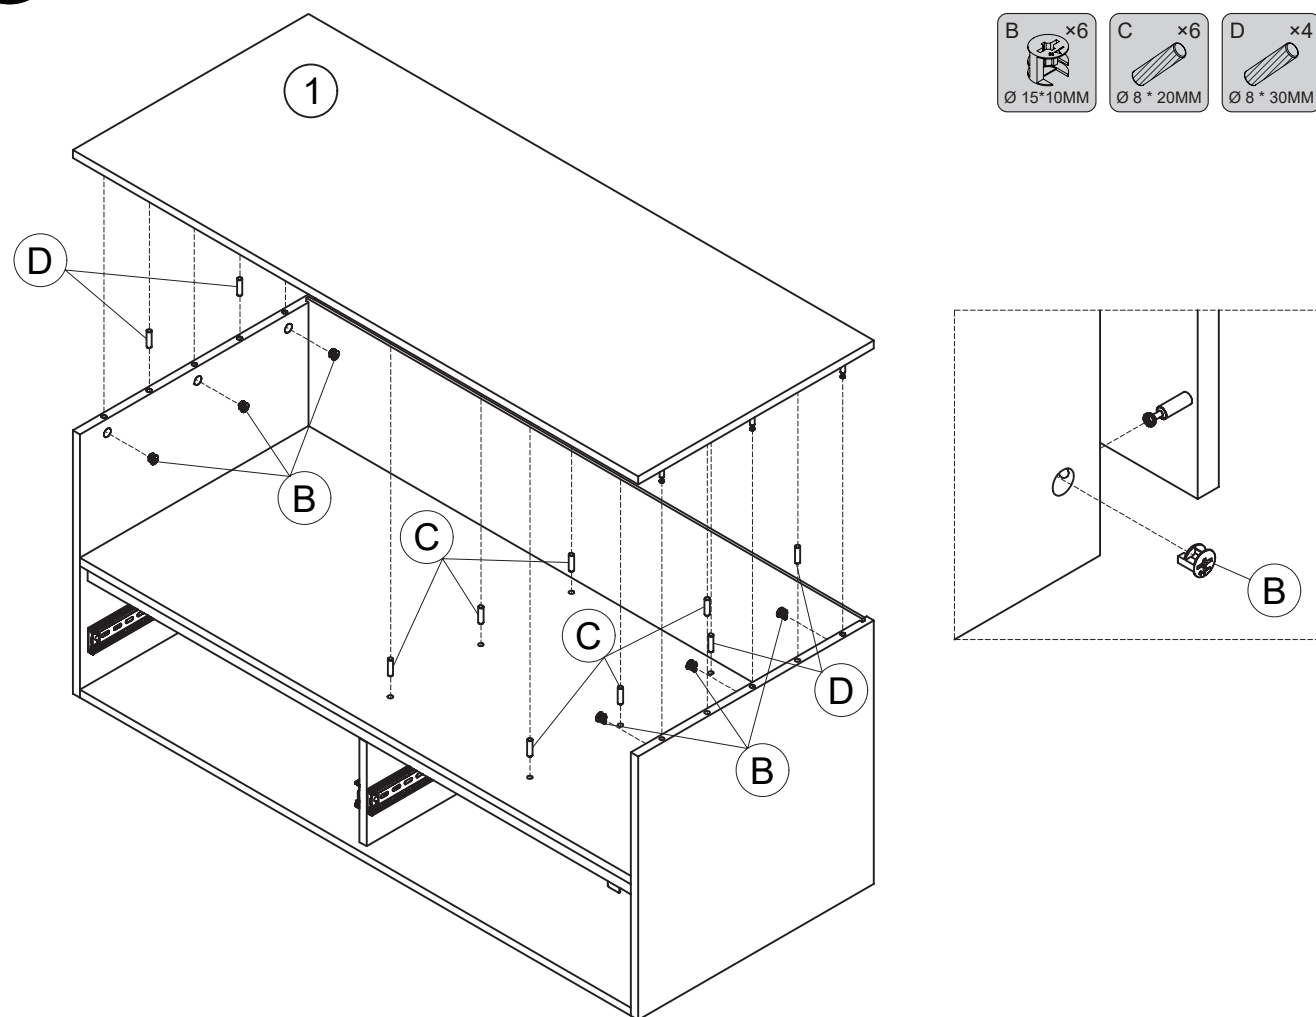 


15

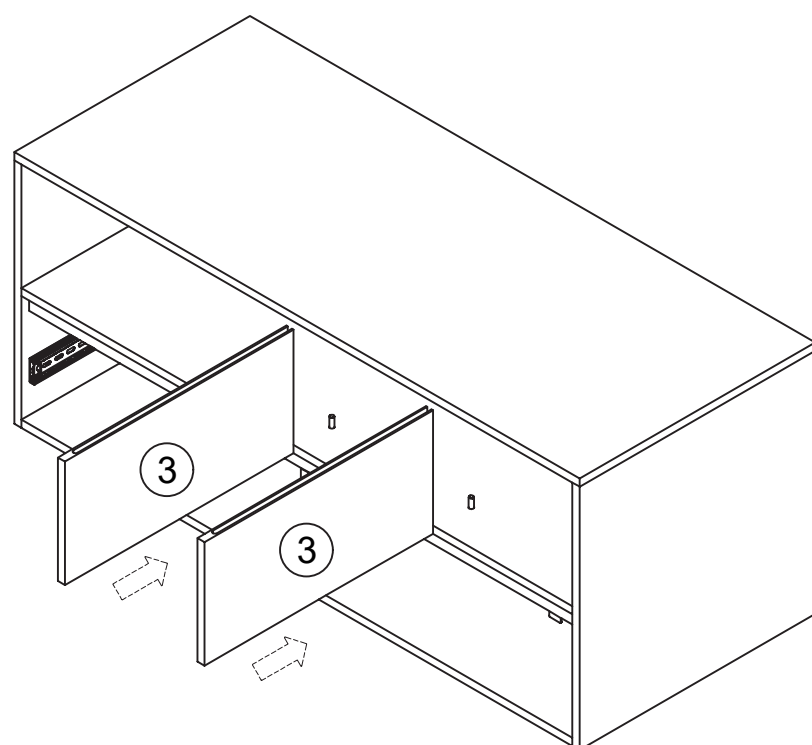 


16

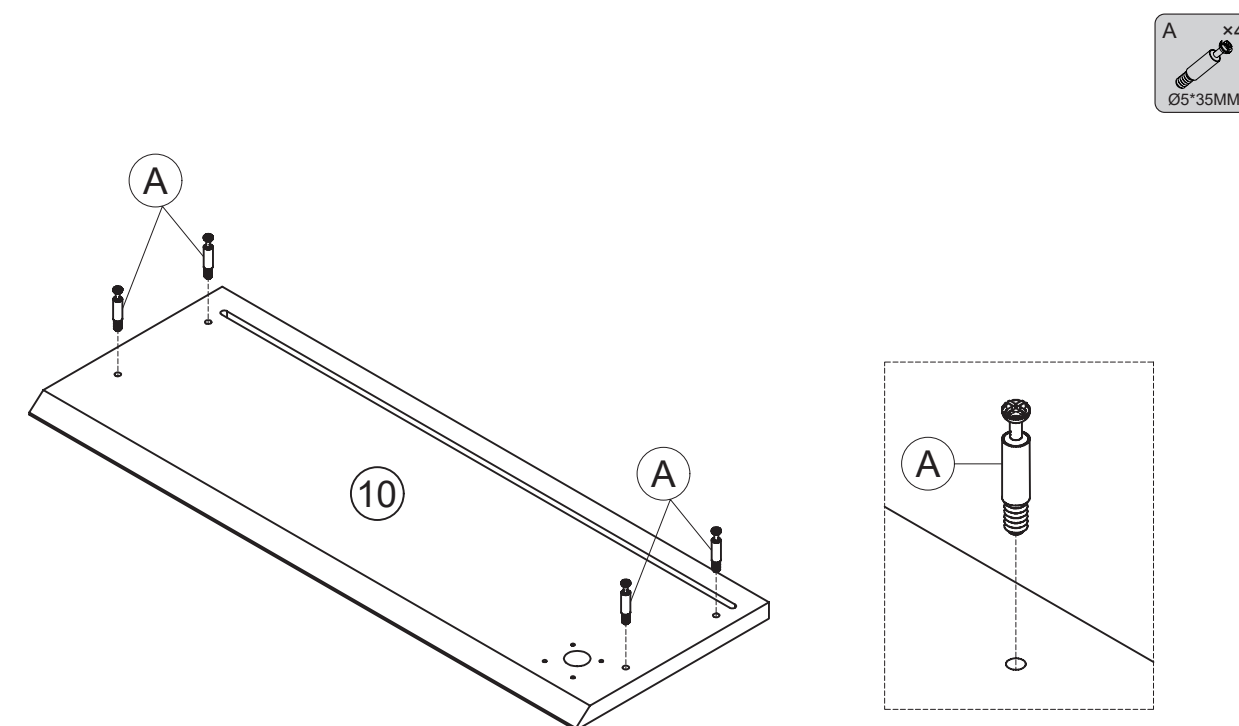 


17

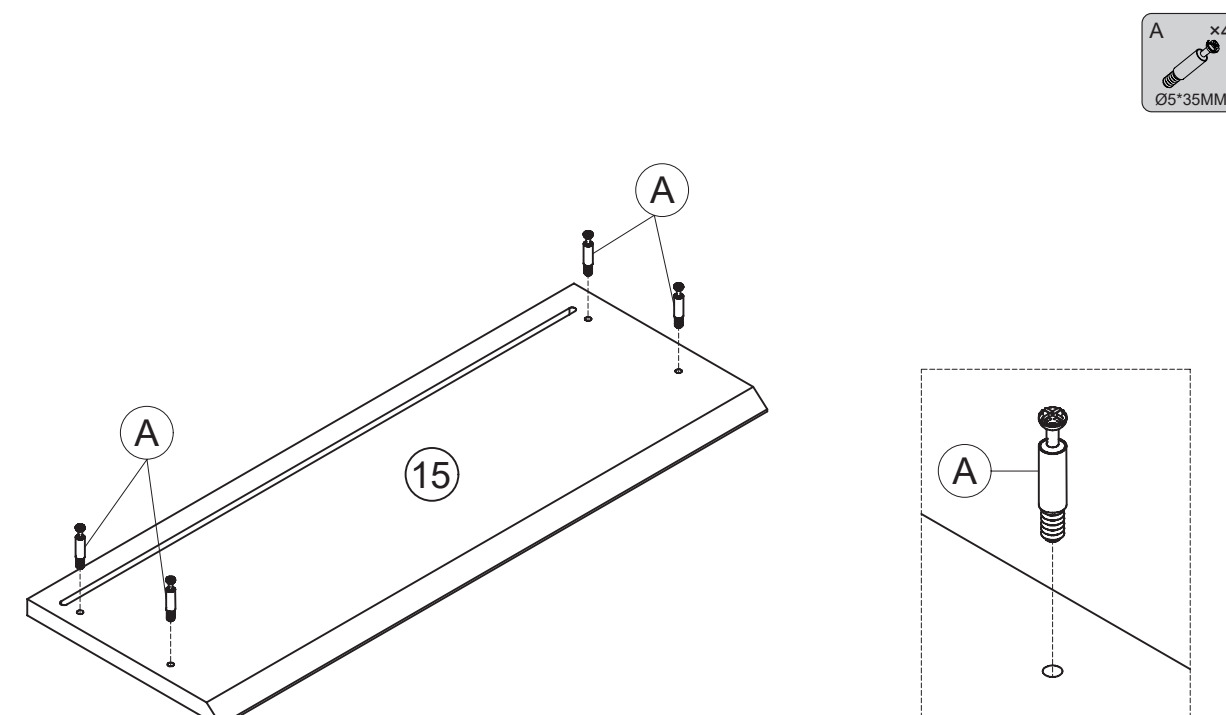 


18

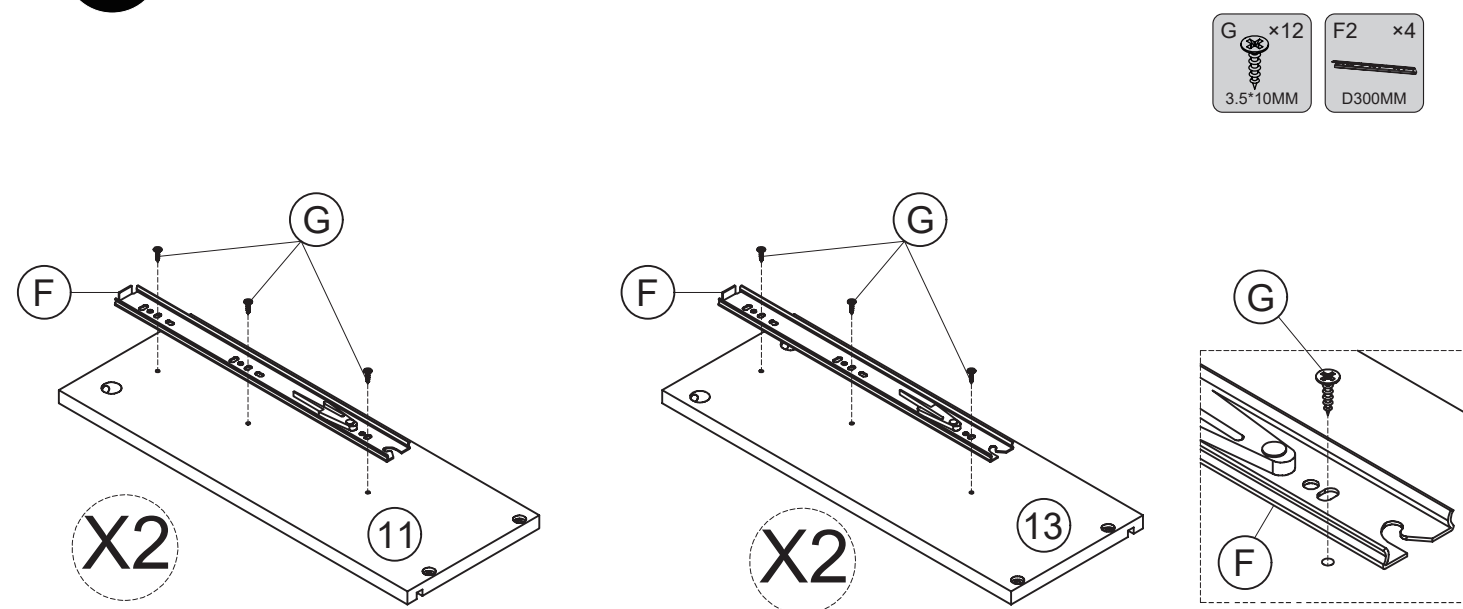 


19

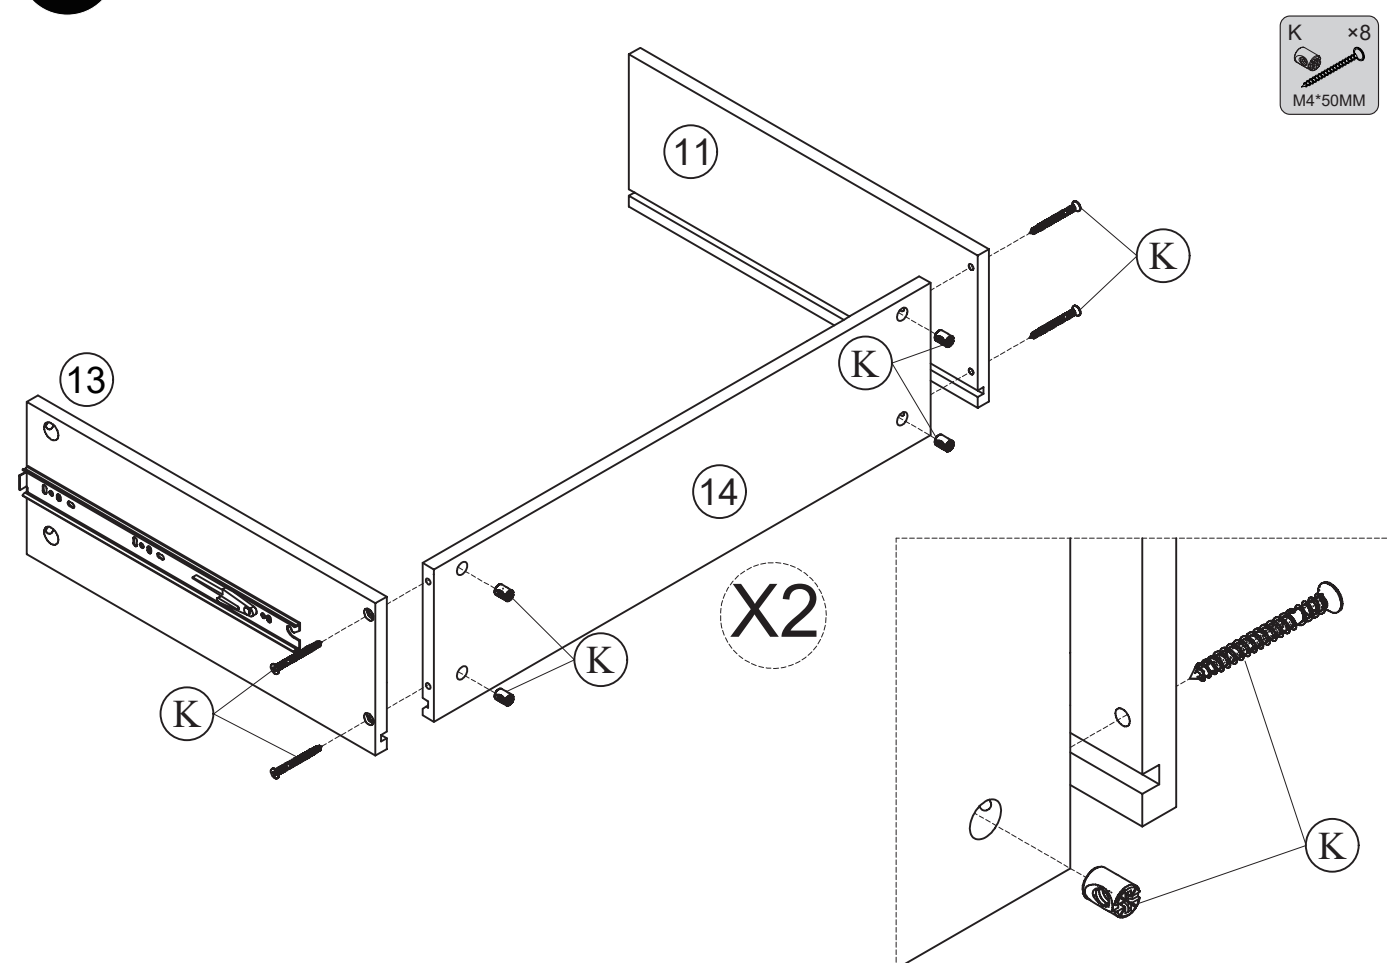 


20

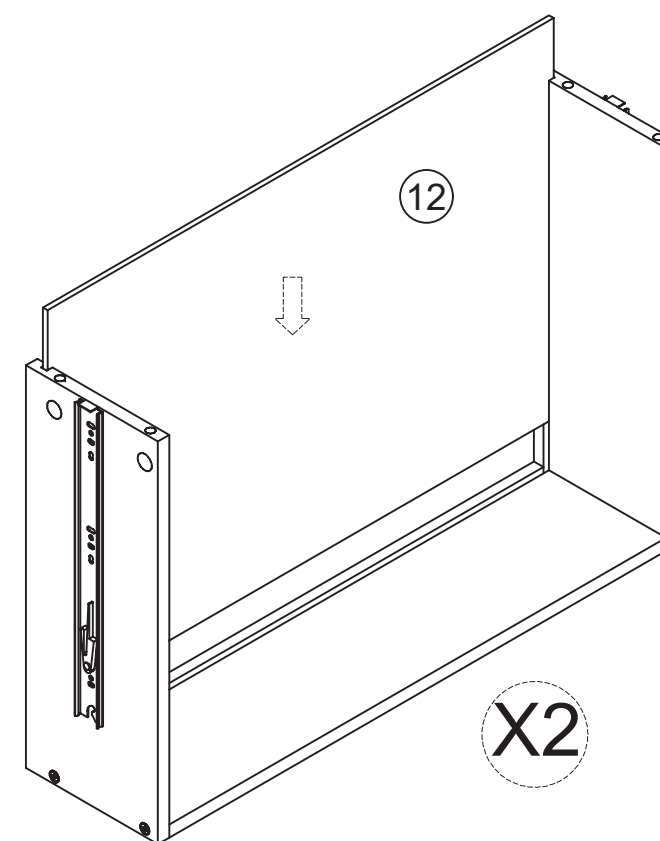 


21

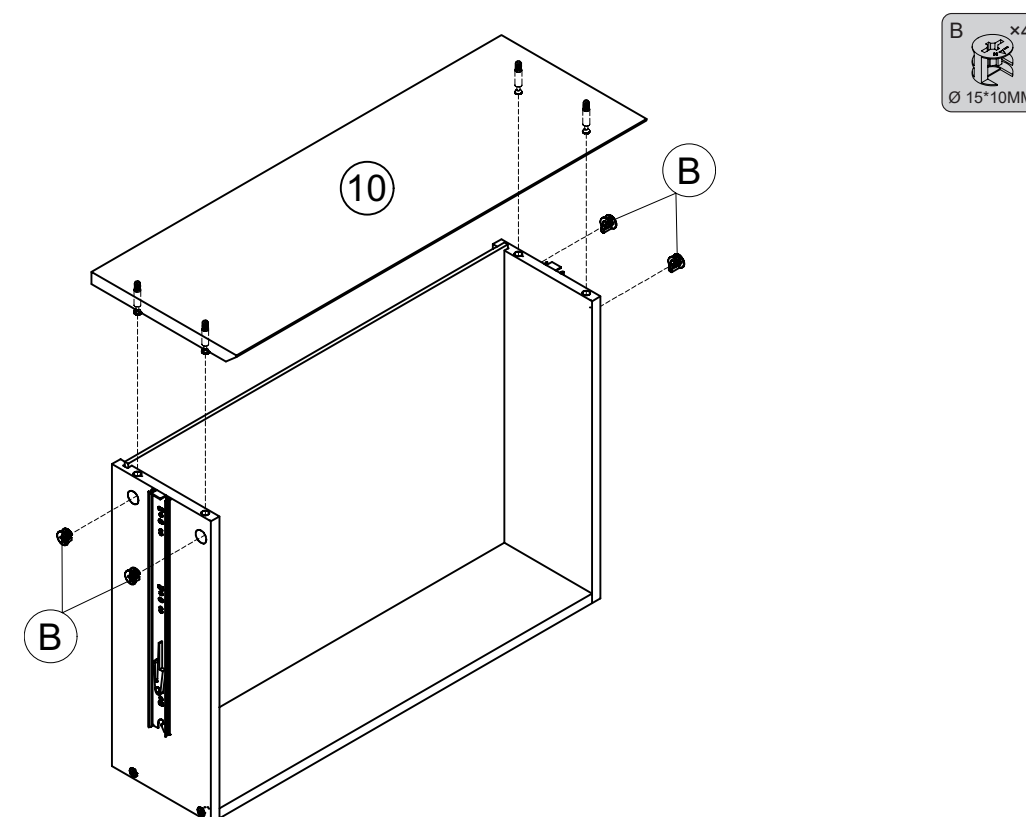 

22

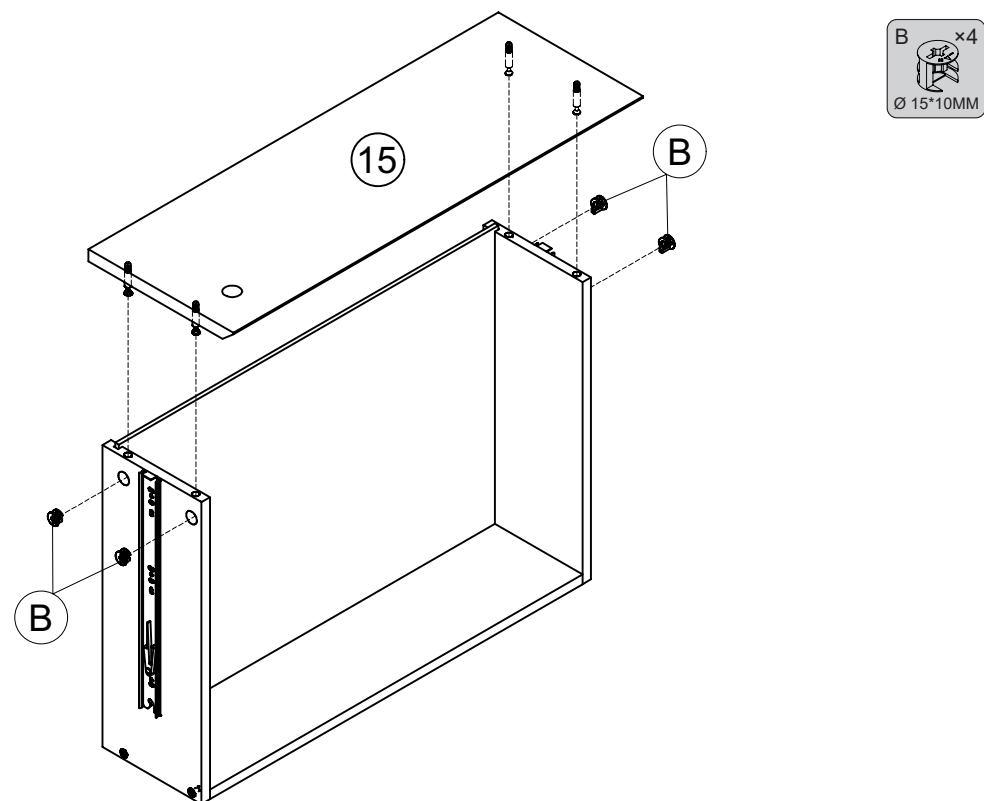 

23

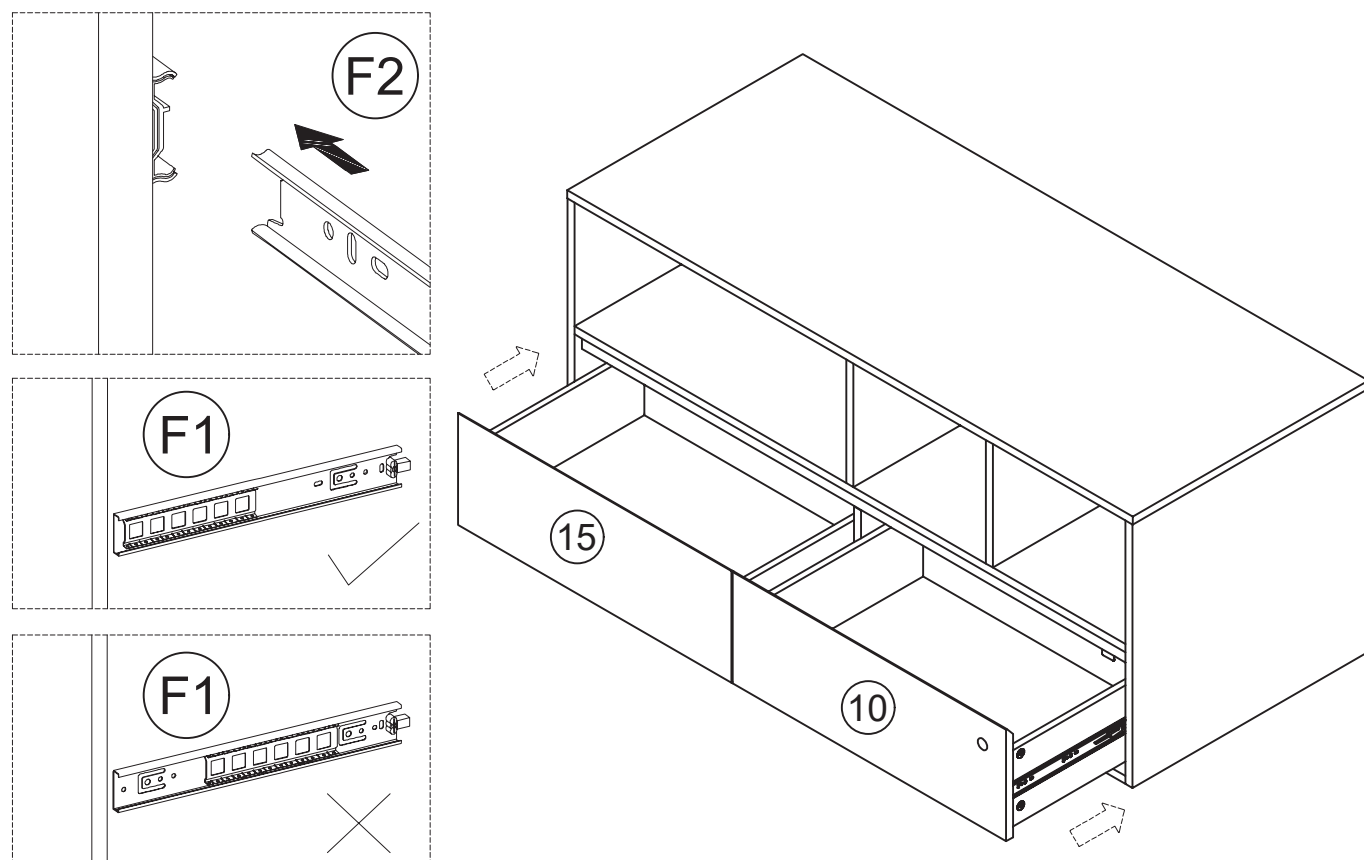 

24

