


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618


Address: 6475 Las Positas Rd. Livermore, CA 94551

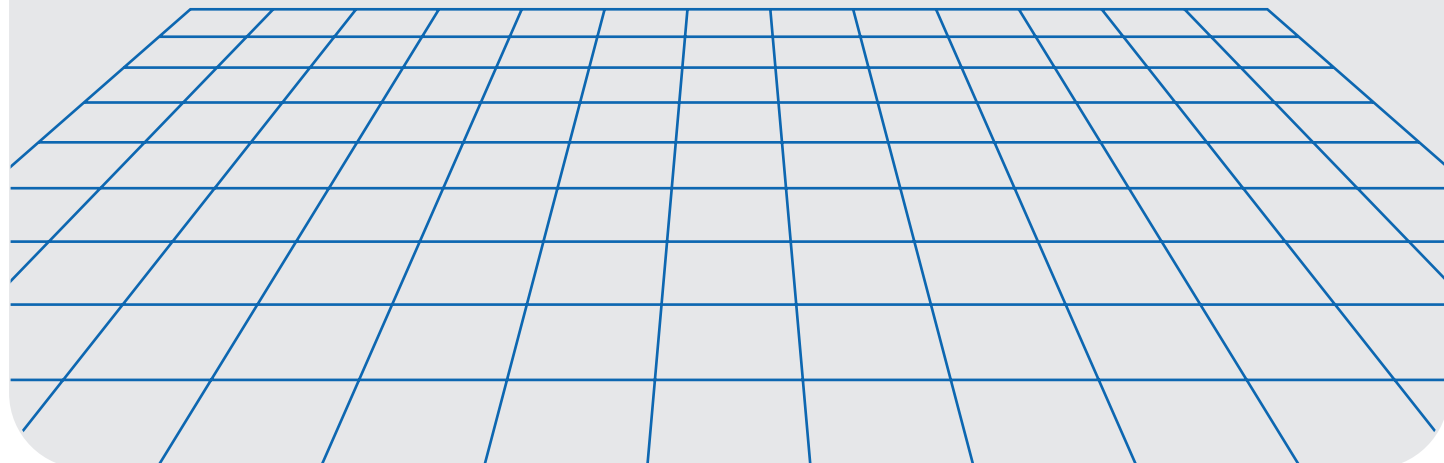

FlexiSpot

User Manual

Item No. E6-Flex









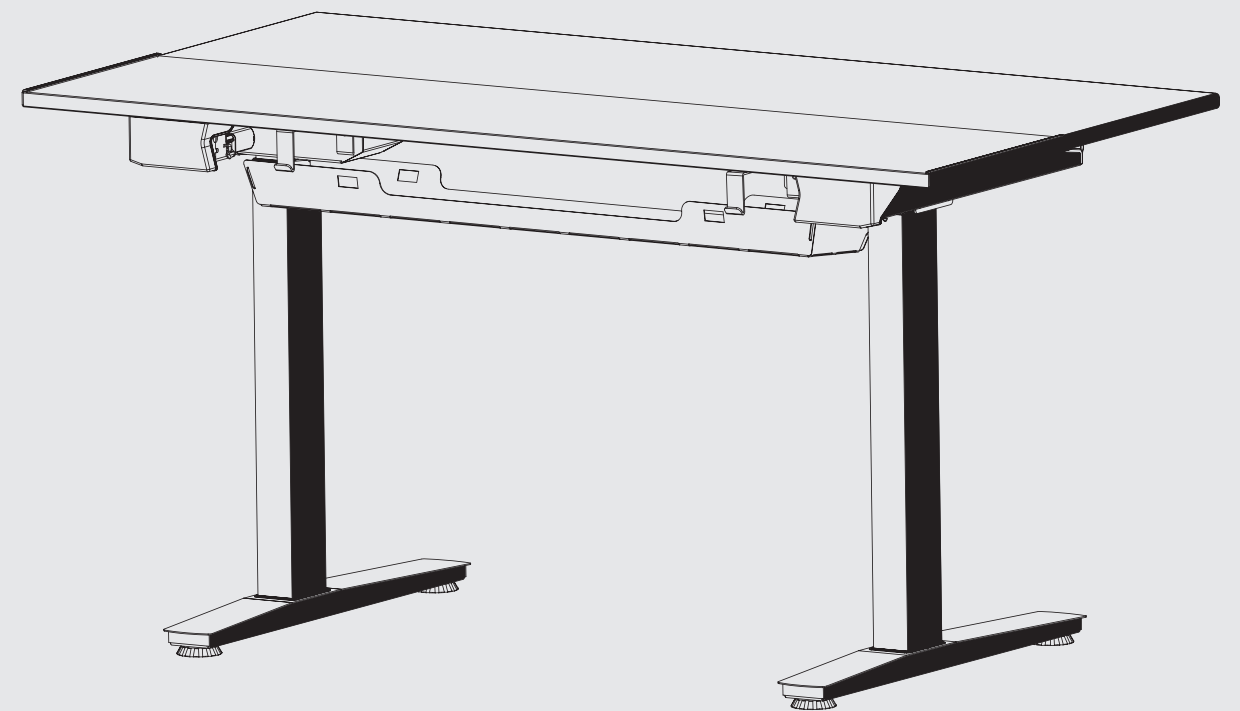


INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE


SCREW ACCESSORIES

S1 ×1	S2 ×16	S3 ×8	S4 ×4	S5 ×24	S6 ×9
					
6mm	M8*16	M8*25		M4*14	

     
PARTS ACCESSORIES

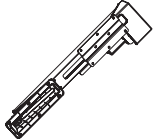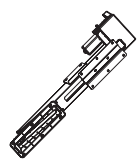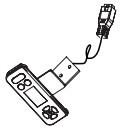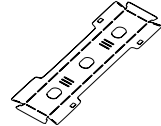A ×2	B ×2	C ×1	D ×1	E ×2	F ×1
					
G ×1	H ×1	I ×1	J ×1	K ×1	T ×1
					
M ×2	N ×1	O ×1	Q ×1	P ×4	R ×1
					


Installation Instructions

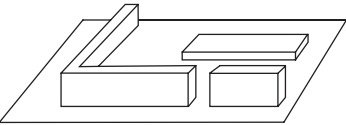

Place on carpet to avoid scratching


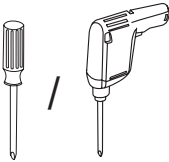


Drill required (not supplied)


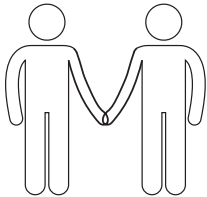


Two or more individuals need to collaborate

 
1

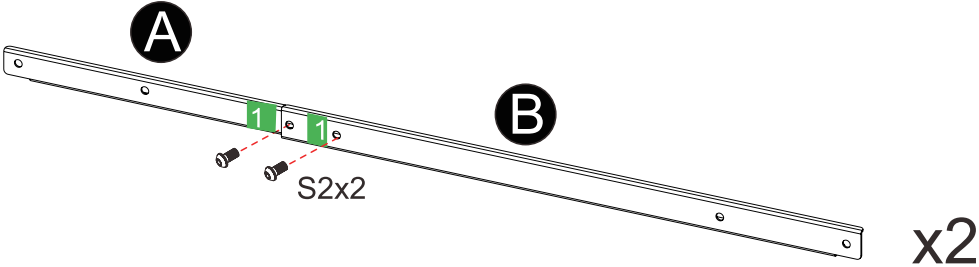


2

 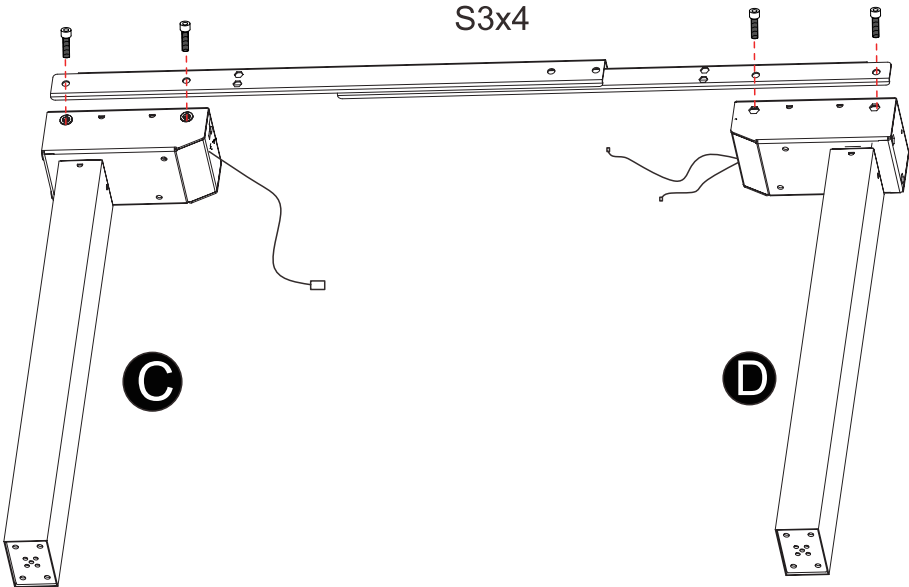


3

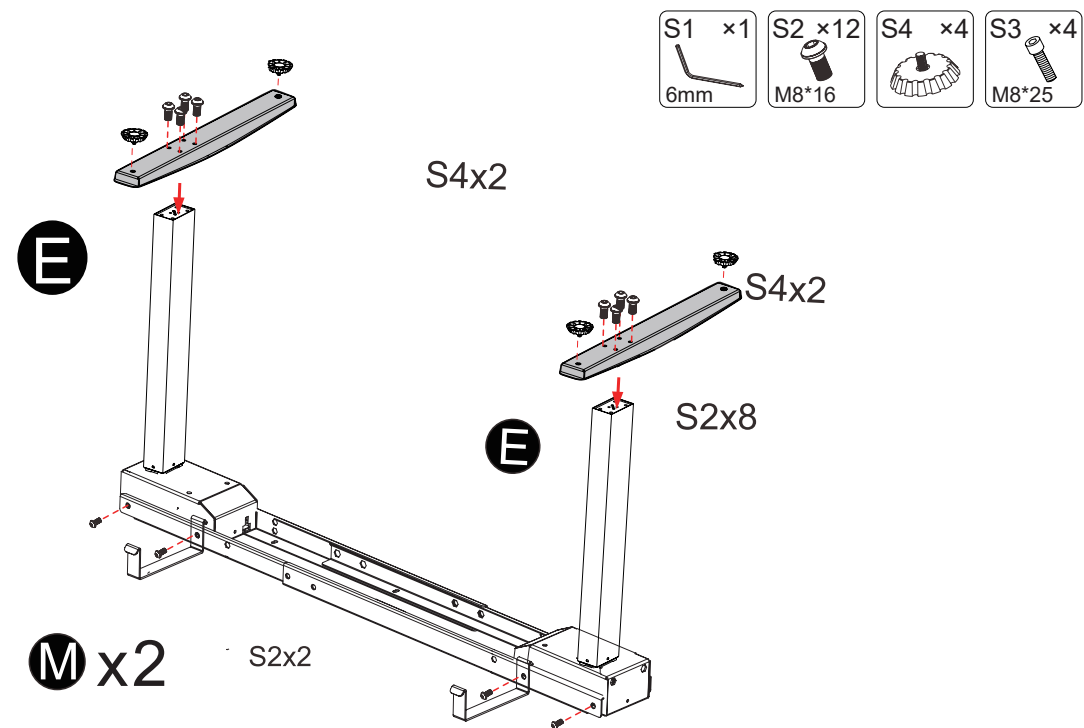


4

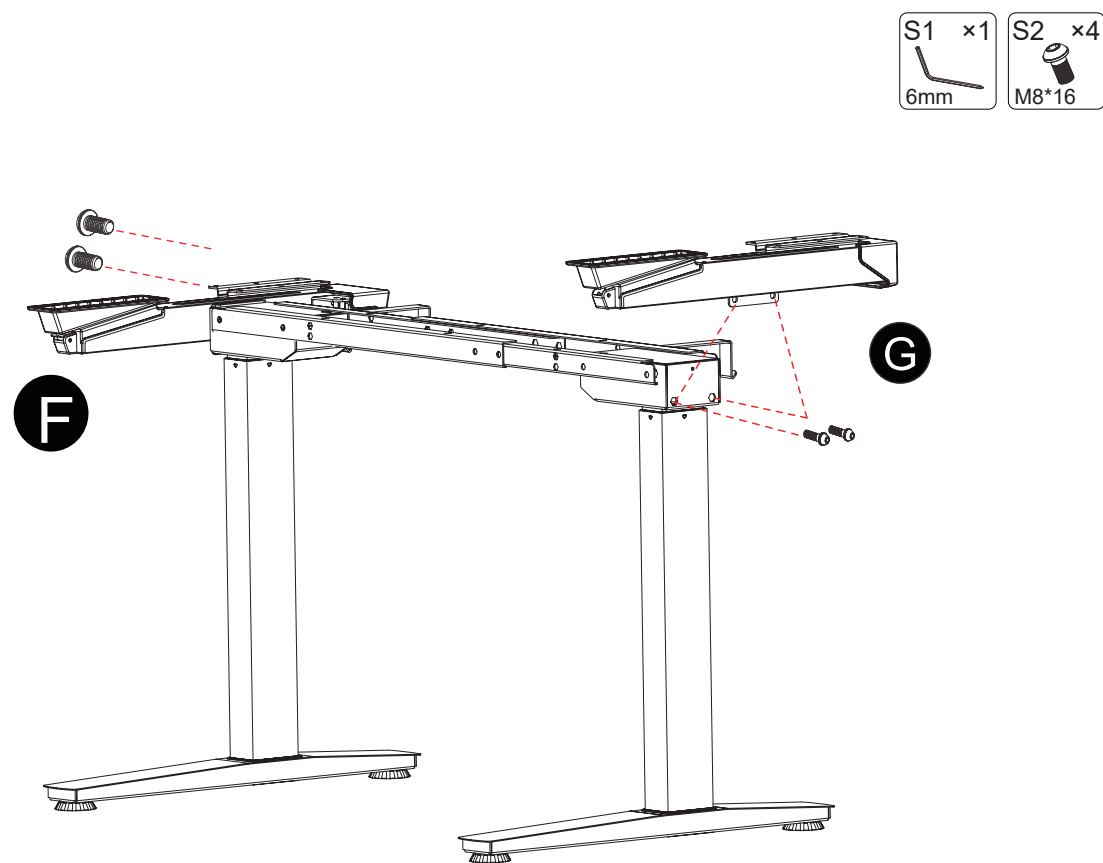


5


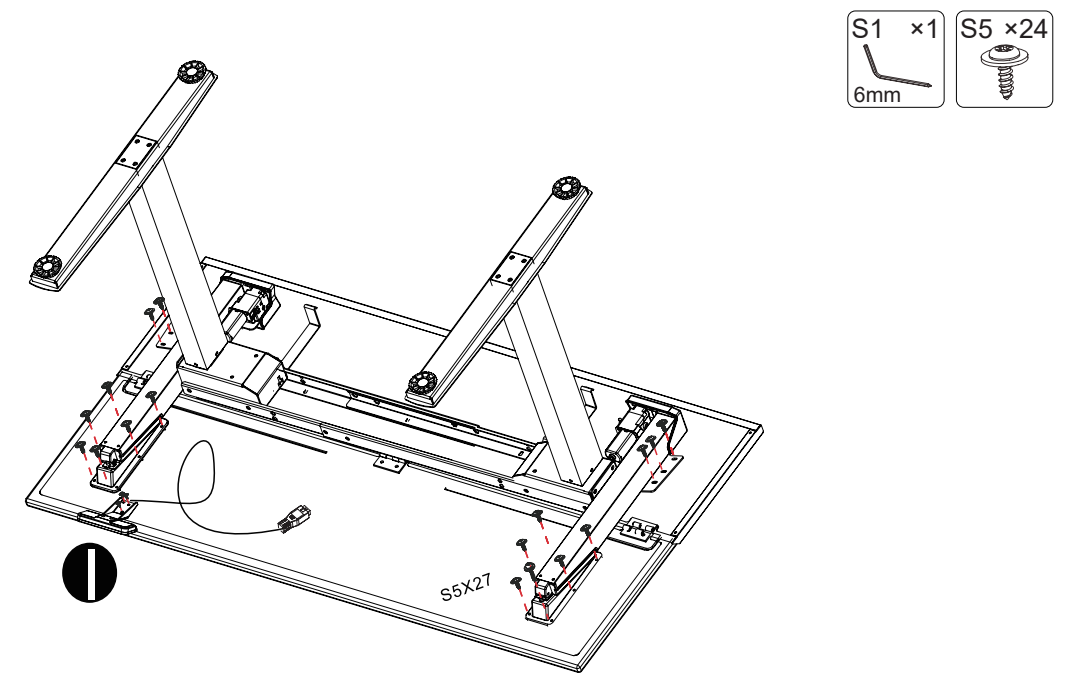


6

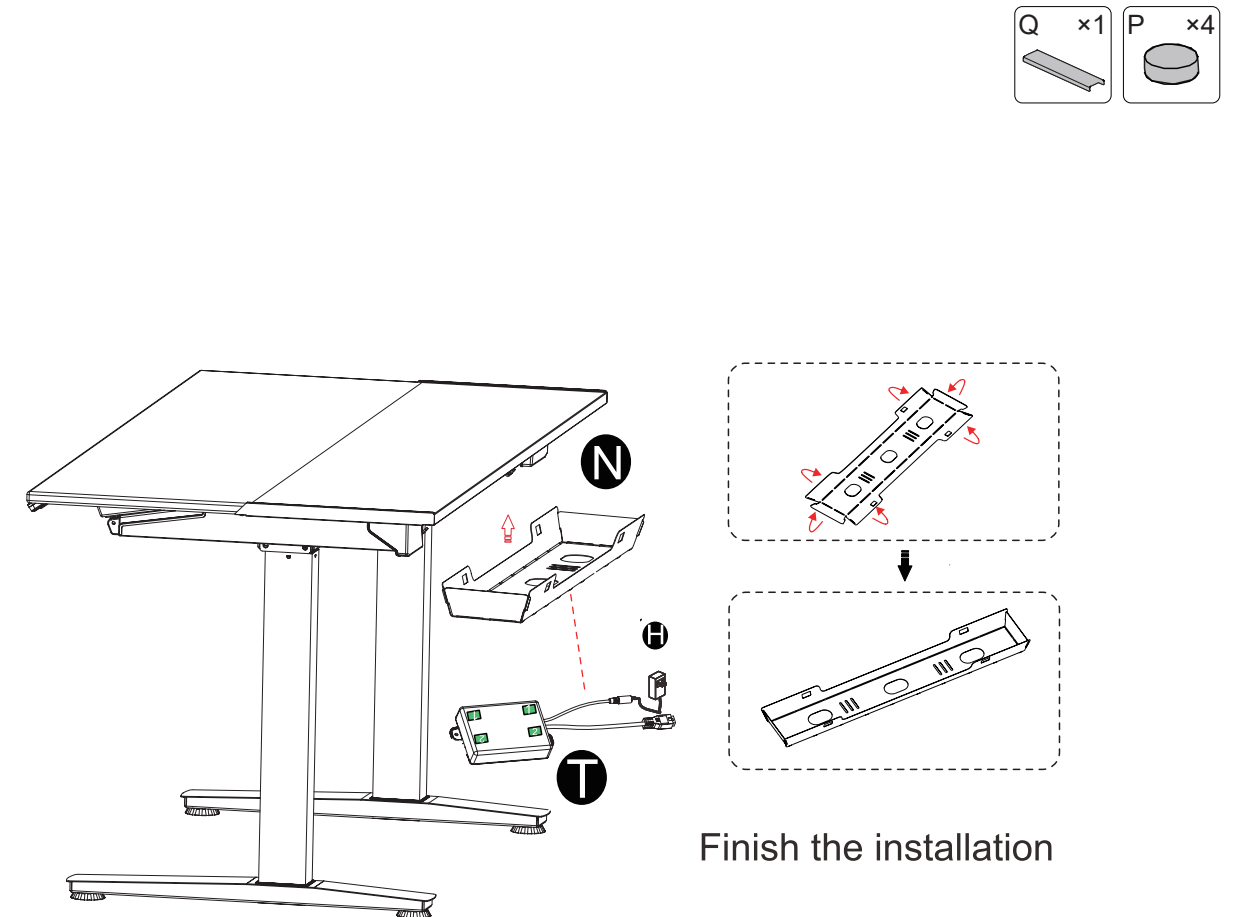

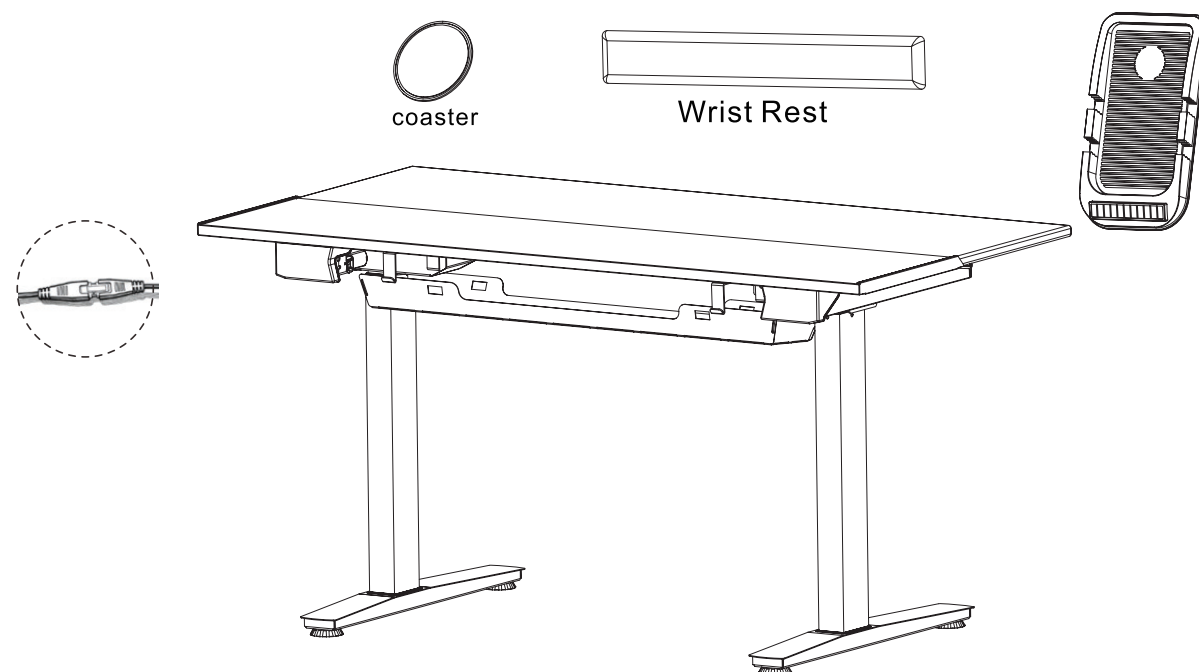

Instruction Manual

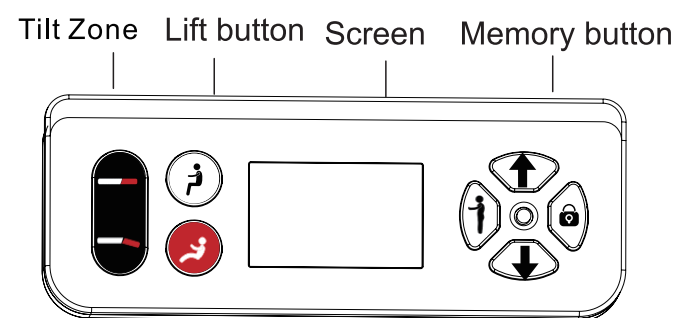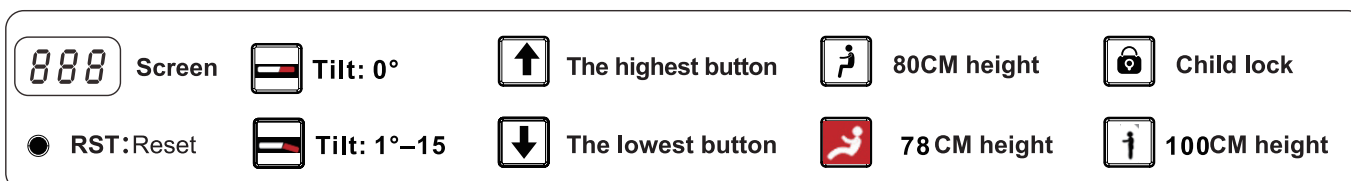

● Tilt Button Operation

Press the "↔" button, long press the button, the tabletop will adjust to 0° short press the "↔" button, and the tabletop stops tilting adjustment when the button is released.
Press the "↔" button, long press the button, the tabletop adjusts to 15° short press the "↔" button, and the tabletop stops tilting adjustment when the button is released.

● Up and down button operation

Press the: "↑" button, long press the button, the table rises when the "↑" button is pressed, and the table stops rising when the button is released.
Press the: "↓" button, press and hold the button, the table will descend when the "↓" button is pressed, and the table will stop descending when the button is released.

● Memory Function Operation

The default setting of the button is "80 cm" height, The desktop tilts to 4°. Custom settings: raise the table to the desired position. Long press for 3 seconds, the screen flashes, indicating that the setting is successful.

The default setting of the button is "78 cm" height, The desktop tilts to 11°. Custom settings: raise the table to the desired position. Long press for 3 seconds, the screen flashes, indicating that the setting is successful.

The default setting of the button is "100 cm" height, The desktop tilts to 4°. Custom settings: raise the table to the desired position. Long press for 3 seconds, the screen flashes, indicating that the setting is successful.

● Child lock function

Long press for 5 seconds, the button screen shows LOC, and the child lock is set successfully. Long press again for 5 seconds, and the child lock ends.

● Reset Operation

Reset Operation Hold down the "RST" key for 5 seconds, then release the button to enter the reset mode. The reset is complete. Installation