


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618

Address: 6475 Las Positas Rd. Livermore, CA 94551

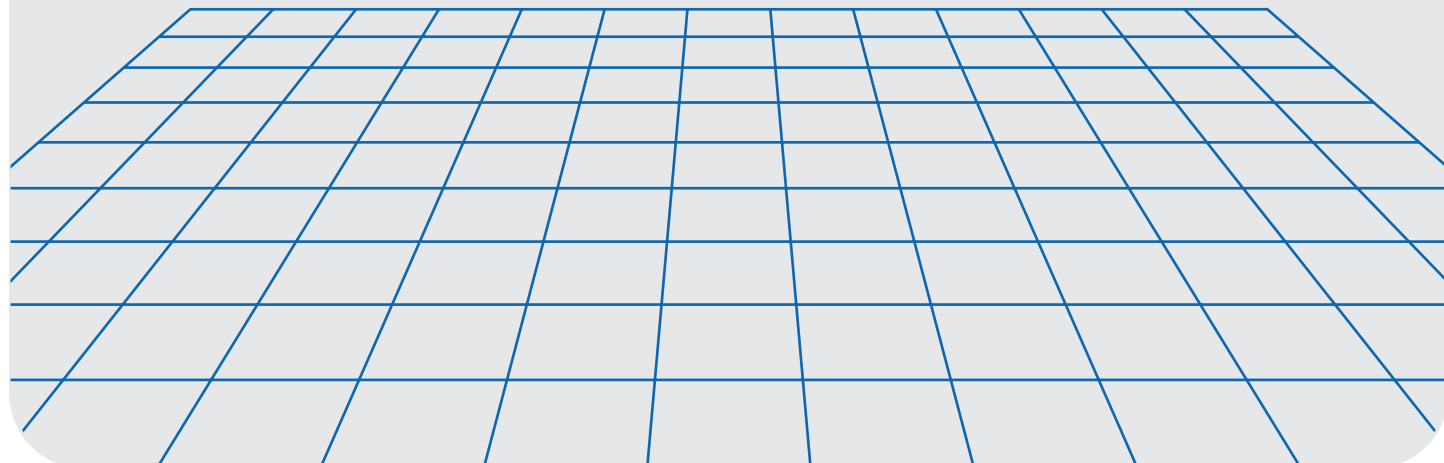

FlexiSpot

User Manual

Gaming Chair

Item No. GC7G

 
 
 


INSTRUCTIONS -
KEEP FOR FUTURE REFERENCE



Parts Included

Please refer to the parts listed below. If any parts are missing or damaged, please contact customer service.

 Backrest ×1	 Seat ×1	 Mechanism ×1	 Side Covers ×2
 Casters ×5	 Gas Lift Cover ×1	 Gas Lift ×1	 Five-star Base ×1
 Hex Wrench ×1	 Magnetic Head Pillow ×1	 Lumbar Pillow ×1	 M8 Screws ×4 (Pre-installed on the mechanism)




Assembly Instructions

Before You Start: Loosely tighten all screws first. Once all screws are positioned, fully tighten them to secure the assembly.





1 Install the Wheels

Insert the five casters into the five-star base.

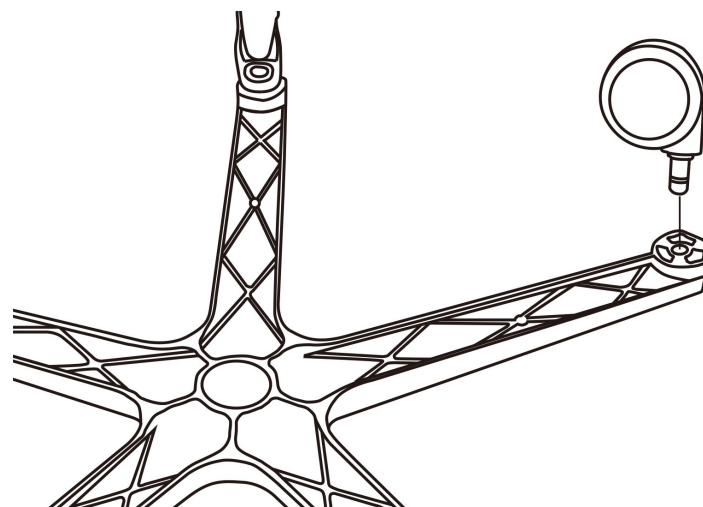


2 Install the Gas Lift


Remove the red cap of the gas lift.
Place the gas lift into the center of the base.
Attach the gas lift cover over the top of the installed gas lift.

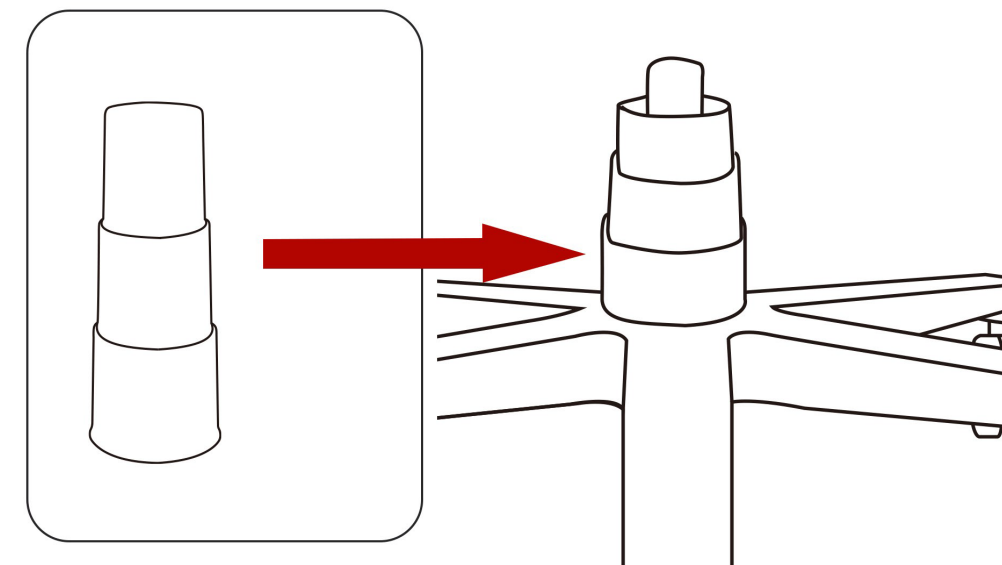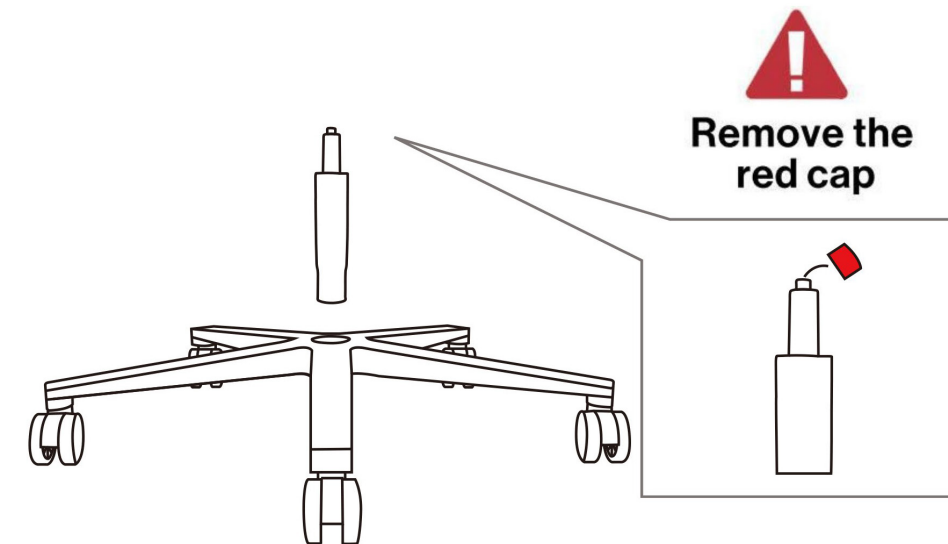


3 Install the Backrest and Side Covers

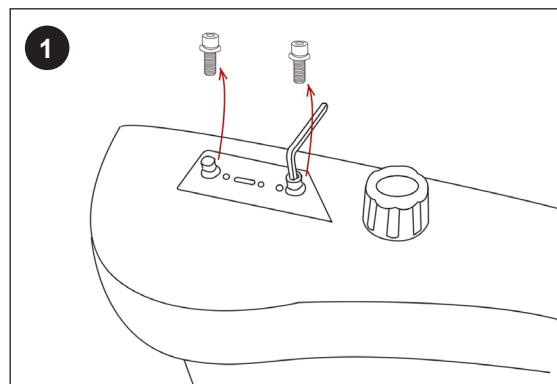


Remove the screws from the backrest.

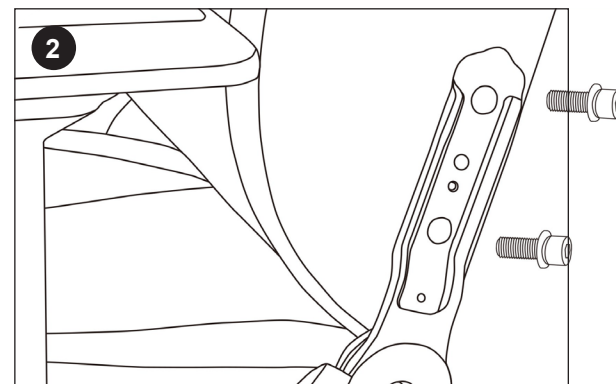

Adjust the backrest to an upright position and align it with the brackets on both sides of the chair.

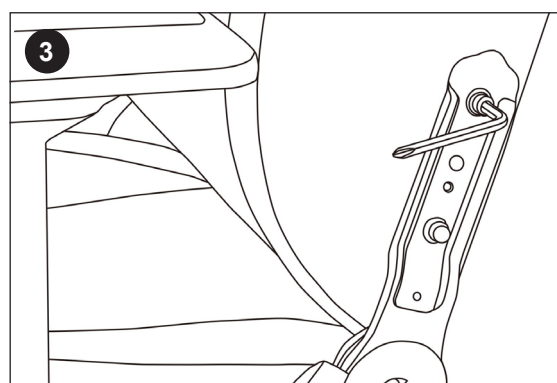



Attach the backrest using the previously removed M8 screws, and tighten them partially to secure.

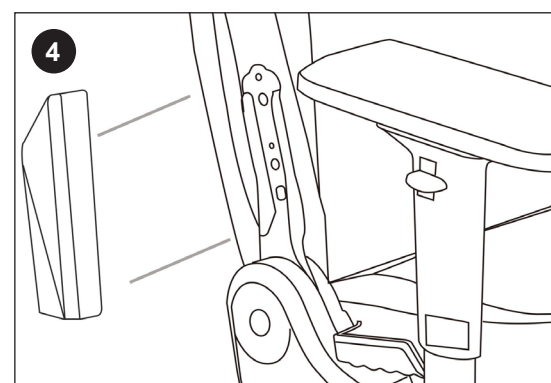

Attach the magnetic side covers to the backrest sides to finish.

4 Install the Mechanism


Lift the chair and carefully place it upside down.
 Remove the 4 pre-installed M8 screws from the mechanism.
 Align the mechanism with the mounting holes on the seat base.
 Reinsert the M8 screws and tighten them securely.
Tip: Do not tighten the screws completely until they are all fixed in the correct position.

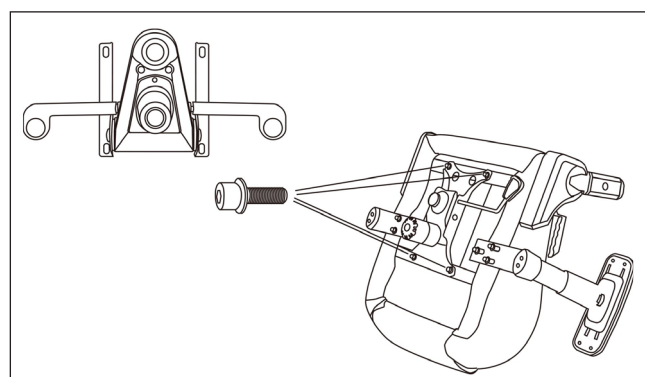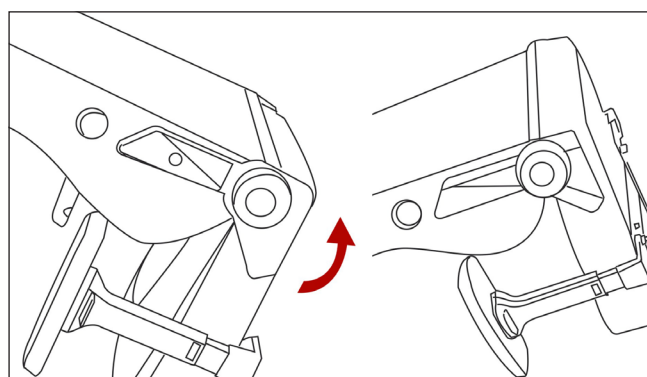

5 Insert the Gas Lift into the Seat

Align the tip of the gas lift with the hole on the mechanism, then press firmly from above to insert it securely.

Note: To ensure the gas lift is fully fixed, press down with your body weight the seat.

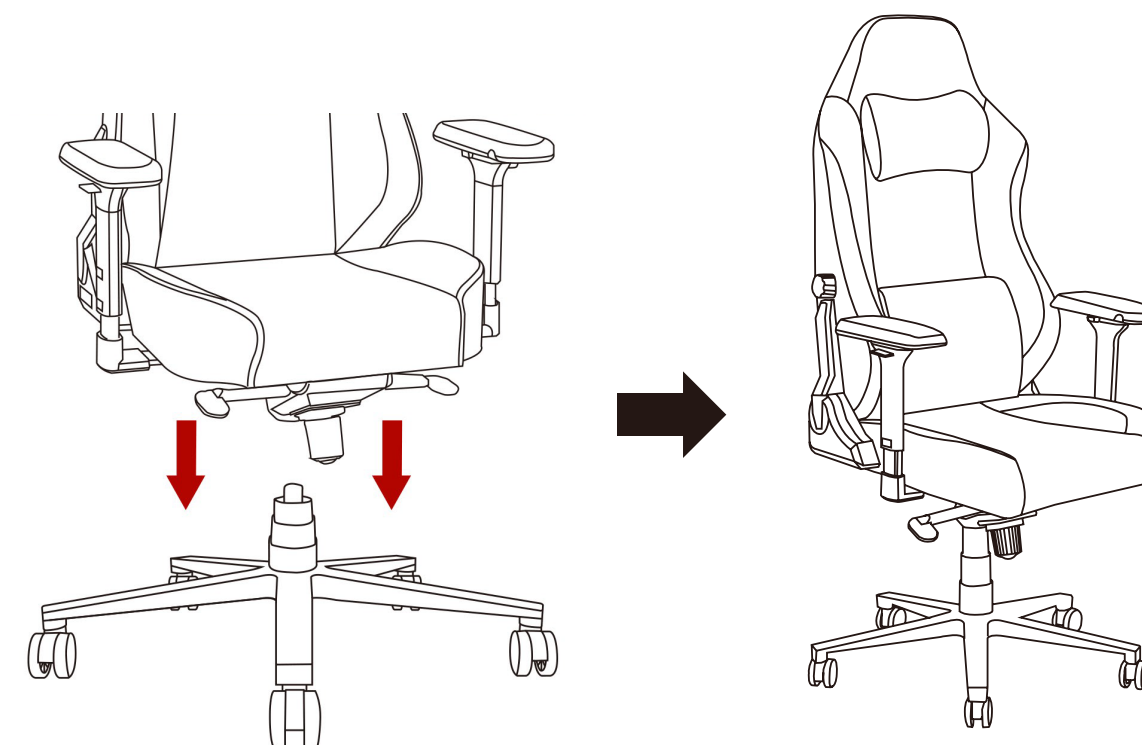


Assembly Complete



Instructions for Usage


1 Seat Height Adjustments

Shift your weight off the seat (stand up slightly) and lift the handle to raise the seat height. Sit on the chair and lift the handle to lower the seat height.

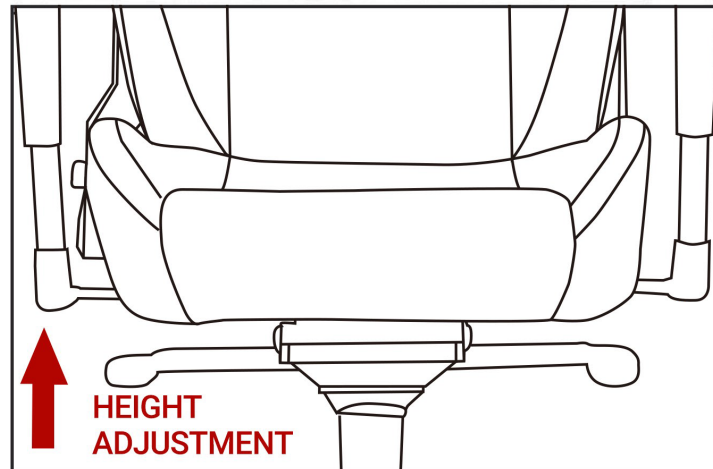

2 Seat Tilt Adjustments


Pull up to unlock, push down to lock the seat base at your preferred angle.

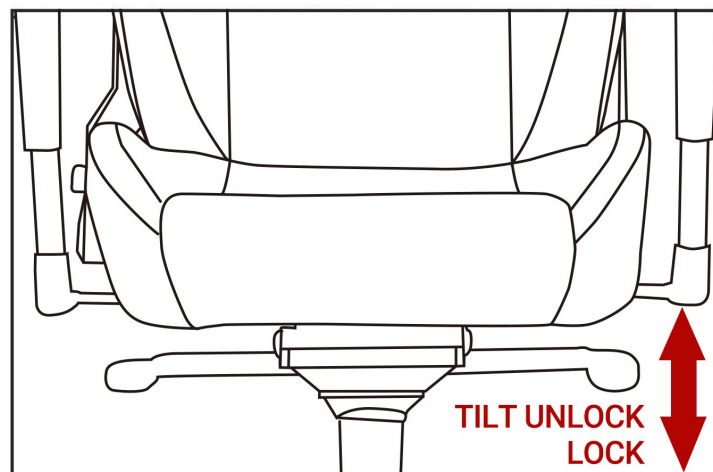

3

Head Pillow Adjustment

Simply align the magnetic head pillow with the backrest. You can reposition it at any time to find your ideal comfort level.

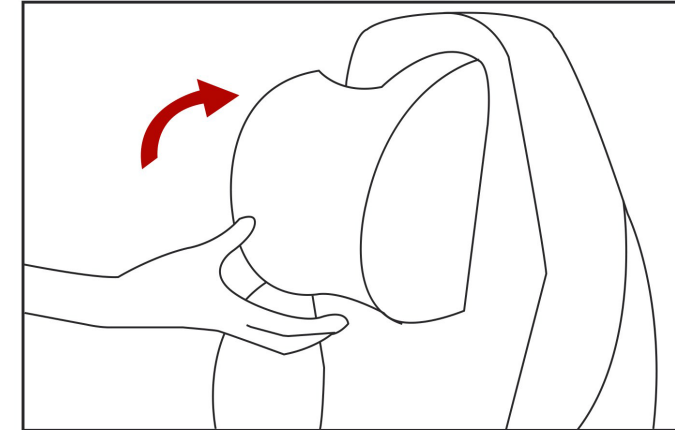

4

Lumbar Adjustment



Left Knob (while seated): Turn clockwise to increase lumbar support; turn counterclockwise to decrease it.

Right Knob (while seated): Turn clockwise to lower the lumbar support position; turn counterclockwise to raise it.




Important Safety Notes

Do not lean back or put weight on the backrest while adjusting the lumbar support.
Do not force either knob beyond its maximum or minimum range of motion.
Do not adjust both knobs simultaneously.

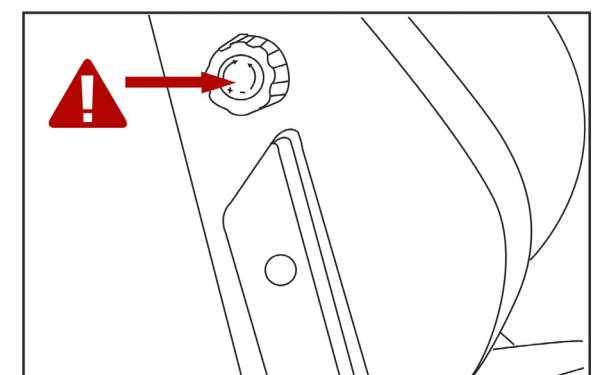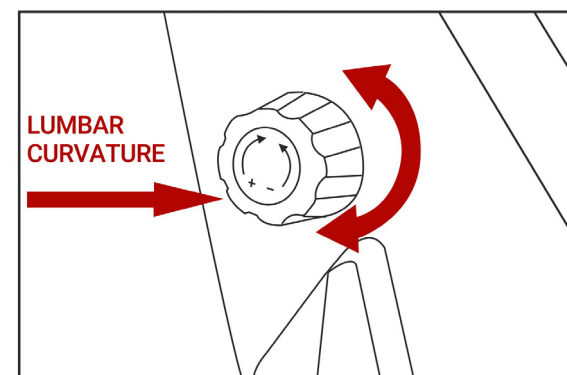


5 Armrest Adjustment

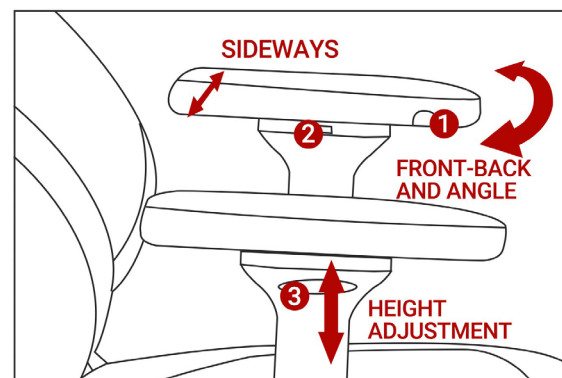

Depth and Angle: Hold the front button ① to slide the armrest forward/backward or adjust its side angle.

Sideways: Hold inner button ② to slide left/right.


Height: Lift outer lever ③ to adjust up/down.

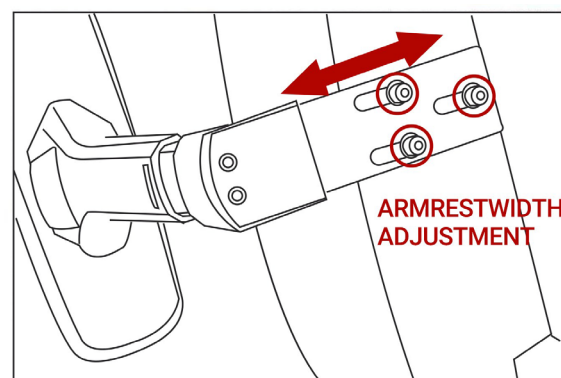

Armrest Spacing: Adjust the distance between the two armrests. Loosen the M8 screws, slide the armrests to your preferred width, then tighten to secure.

6 Backrest Recline Adjustment

Pull up fully on the release lever to unlock the backrest. Lean back to your preferred angle within the 90°-155° range, then push the lever down to lock it securely in place at any position.

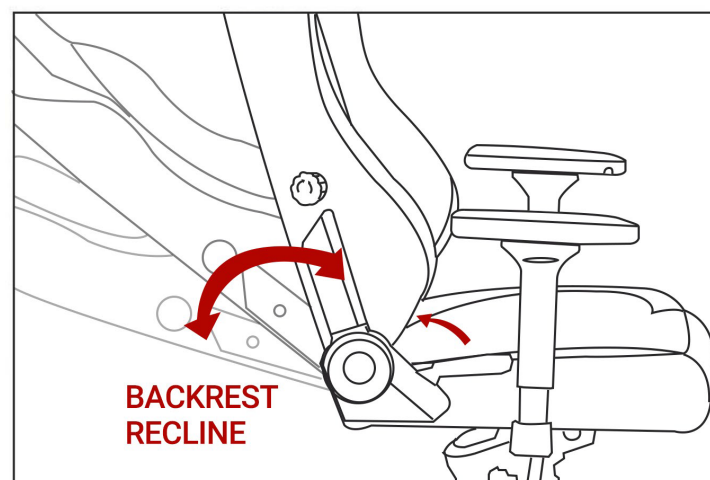


5 Recline Resistance Adjustment

Turn knob toward “+” arrow to increase tension.

Turn knob toward “-” arrow to decrease tension.

You can adjust resistance to your preference by turning the knob.

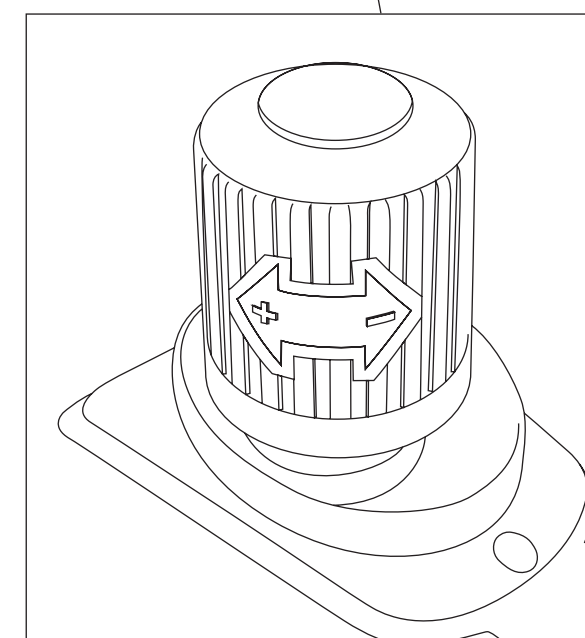

FlexiSpot Limited Warranty

Safety Instructions

1. Do not use on slippery surfaces. Ensure the product is used on a stable, non-slip surface.
2. Avoid placing drinks on the product. Spills can cause discoloration or damage to the surface material. Wipe up any moisture immediately to prevent staining.
3. Do not sit on the product with more than one person at a time. This can lead to instability and potential injury.
4. Regularly check for any loose parts or damage before use. Do not use if any parts are missing or if the product is in poor condition.
5. Be cautious of moving parts. Keep hands and feet away from moving mechanisms to prevent injury.
6. Do not stand on the seat or armrests. This can cause the product to tip over and result in injury.
7. Read the instruction manual thoroughly. Understand the content and usage methods before operating the product.
8. If any issues arise during use, stop using the product immediately. Contact the retailer where you purchased the product for assistance.

Care Instructions for Long-Term Non-Use

1. Avoid placing the product in direct sunlight or in areas with high humidity or extreme dryness. These conditions can cause the product to warp or crack.
2. Regularly inspect the product for any signs of wear or damage. Address any issues promptly to maintain the product's longevity.

Remedies

1. FlexiSpot will replace at no charge any defective parts, or at its option, any product or part that is defective due to improper workmanship and/or materials under normal conditions of use.
2. If a replacement is not feasible or cannot be completed promptly, FlexiSpot may refund the purchase price upon return of the product.
3. For defective products, FlexiSpot will provide a replacement shipped at no cost within the continental United States via FedEx Ground. Expedited shipping is available at the customer's expense. International shipping costs are the customer's responsibility.

FlexiSpot Limited Warranty

What is Not Covered

1. Issues not resulting from material or workmanship defects.
2. Damage from normal wear and tear, improper installation, maintenance, misuse, abuse, negligence, accidents, or alterations.
3. Accessories, connected materials, and products not manufactured by FlexiSpot.
4. Damage from failure to follow instructions and guidelines for the product's intended use.
5. The warranty is void if the product is returned with removed, damaged, or tampered labels, or if there are any alterations.

How to File a Claim

1. To benefit from the limited warranty, claims must comply with the warranty terms and follow the proper return procedure.
2. Contact customer service via email at contact@FlexiSpot.com or toll-free at 1-855-585-5618, providing proof of purchase.

Implied Warranties and Limitation of Damages

Except where prohibited by law, all implied warranties are limited to the duration of this warranty. FlexiSpot is not liable for incidental, indirect, special, or consequential damages, even if advised of the possibility.

Governing Law

This warranty is governed by the laws of California, USA, without regard to conflict of laws principles.

How State Law Applies

This warranty provides specific legal rights, and you may have additional rights that vary by state.

