


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618

Address: 6475 Las Positas Rd. Livermore, CA 94551

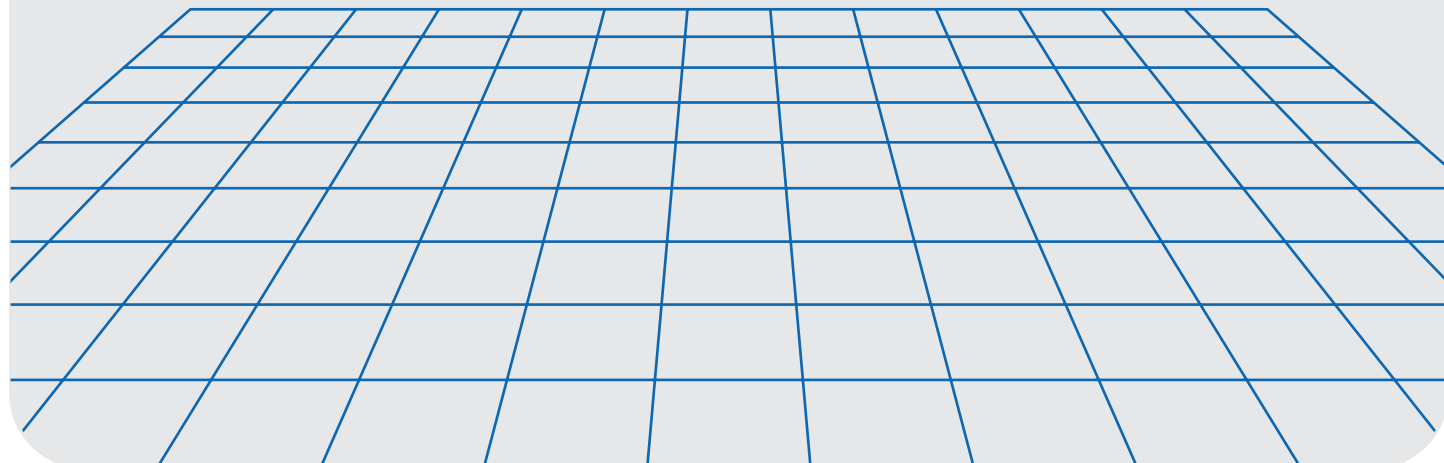


FlexiSpot

User Manual

Electric Recliner

Item No. Waffle

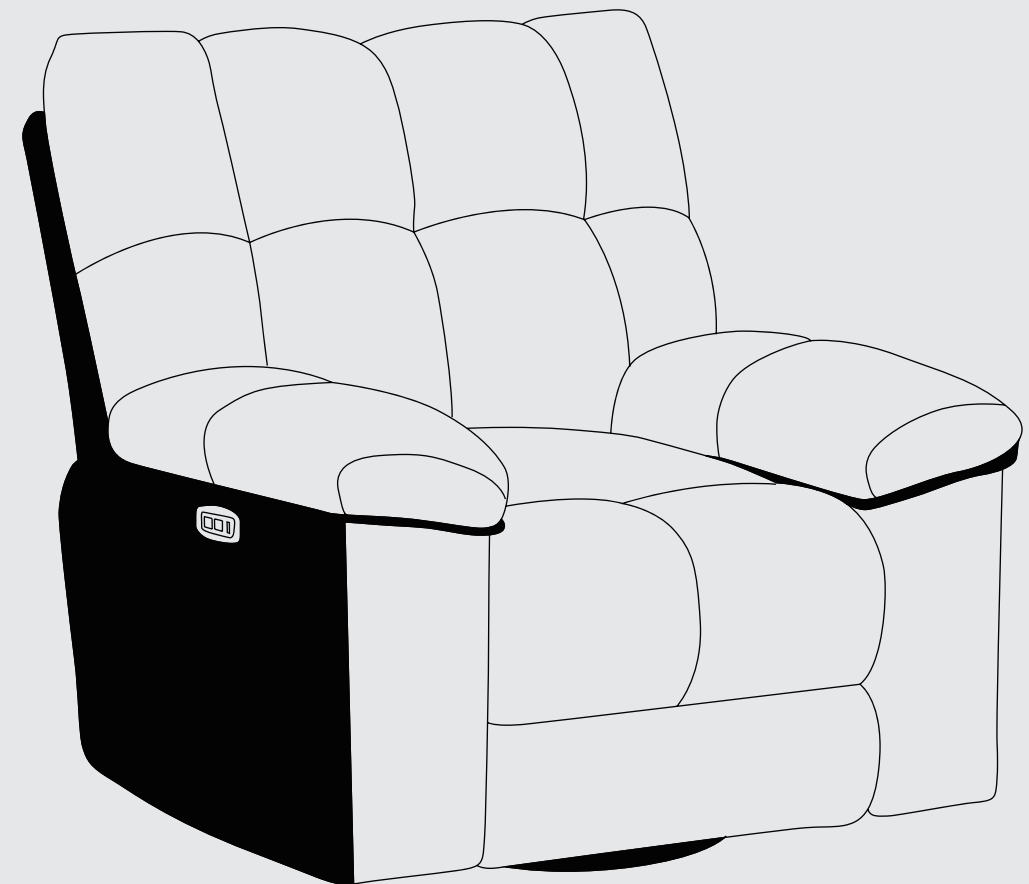

INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE

Materials


Main Materials	Usage Areas
Fabric	Main structure
Foam	Internal padding
Carbon steel pipe	Frame
Wood panel	Armrest and backrest

Product Specifications

Note: Dimensions are measured manually, so the actual product may vary by 1-2". Please refer to the actual product for precise measurements.

Gross Weight		130 lbs			Net Weight		106.7 lbs		
Product Dimensions				41.1×38.6×40 inches					
Cushion Dimensions	Seat Depth	23.3"	Seat Width	22"	Seat Height	20.1"	Armrest Height	26 "	
USB and USB-C Chargers Power				10W					


Installation Preparation

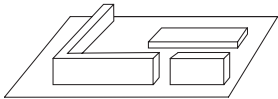

Assemble on flat floor to avoid scratches





Prepare a knife or scissors

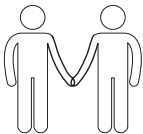

Installation should be done with two or more people



Components List

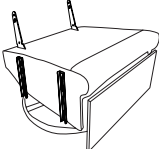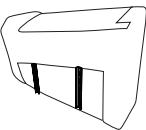Package 1	⑥ Basex1 				
Package 2	① Backrest x1 		⑧ Power Supply x1 		
Package 3	② Left Armrest x1 	③ Right Armrest x1 	④ Left Arm Cushion x1 	⑤ Right Arm Cushion x1 	⑦ Seat Cushion x1 
	The arm cushions are placed on the inner side of the left and right armrests.				

Assembly Instructions


01 Open the packaging

Unzip the bottom of the armrest and remove the two arm cushions.

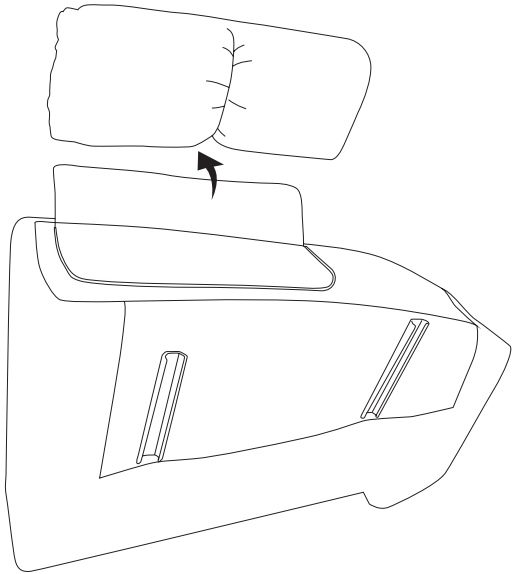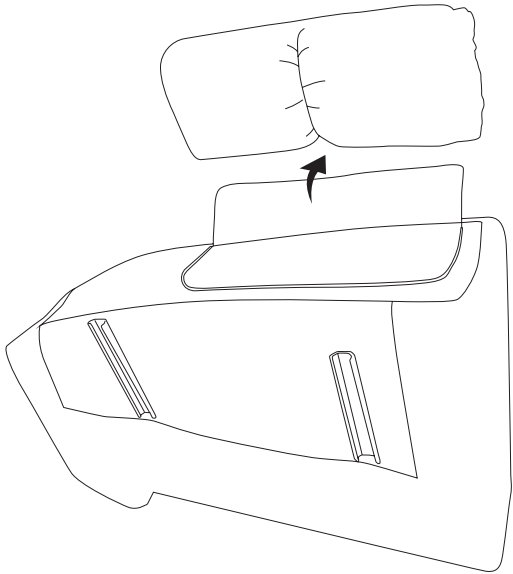


02 Install the armrests

Cut the cable tie on the hand-control wire attached to the right armrest, then insert both armrests into the recliner base.

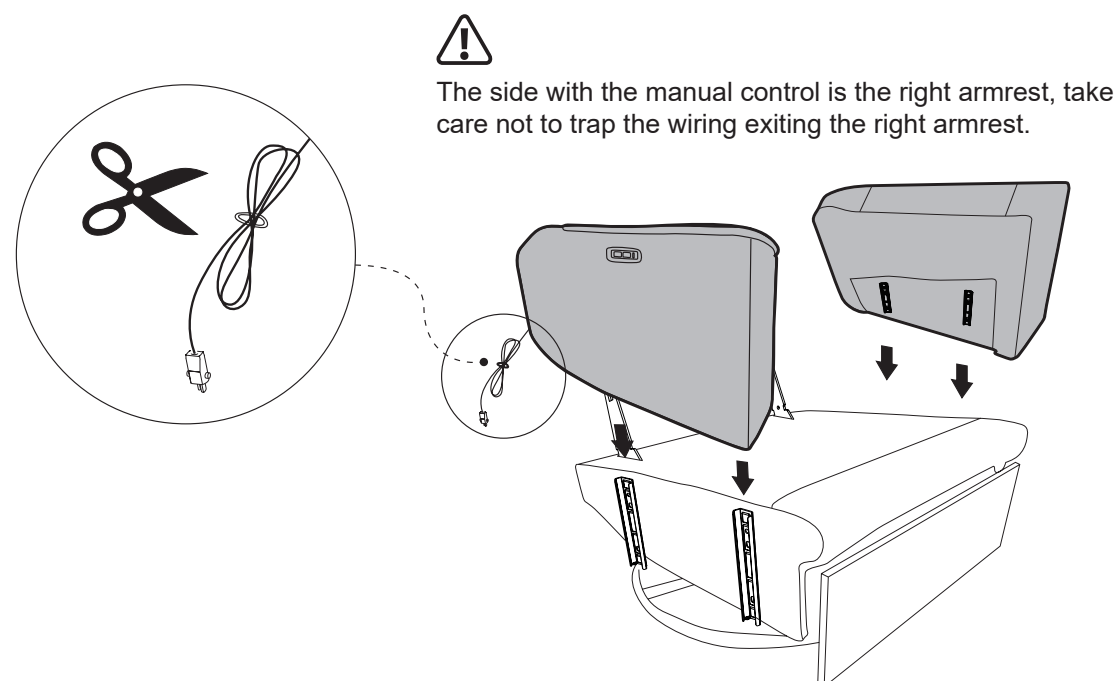


03 Connecting the power cable

Please complete the wiring as shown in the diagram.

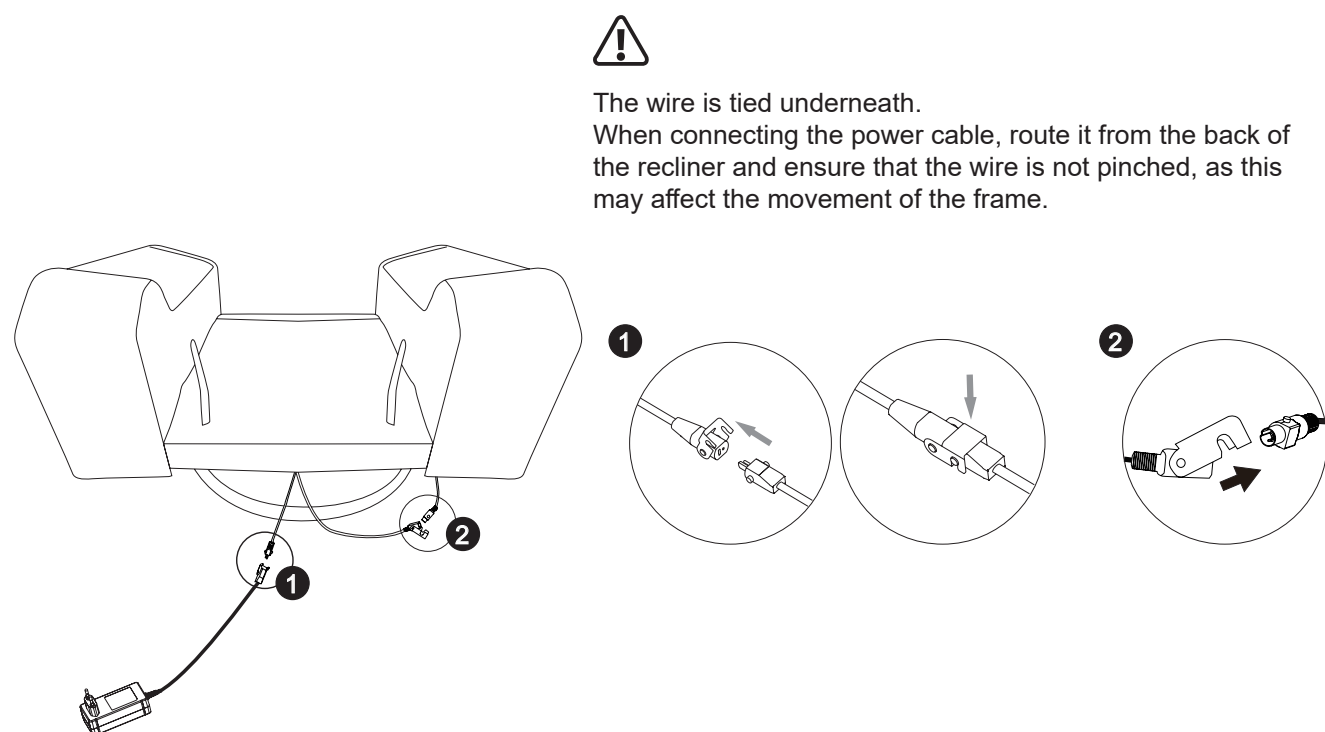


04

Plug the adapter into the socket, and use the button to adjust the recliner to the reclined position.

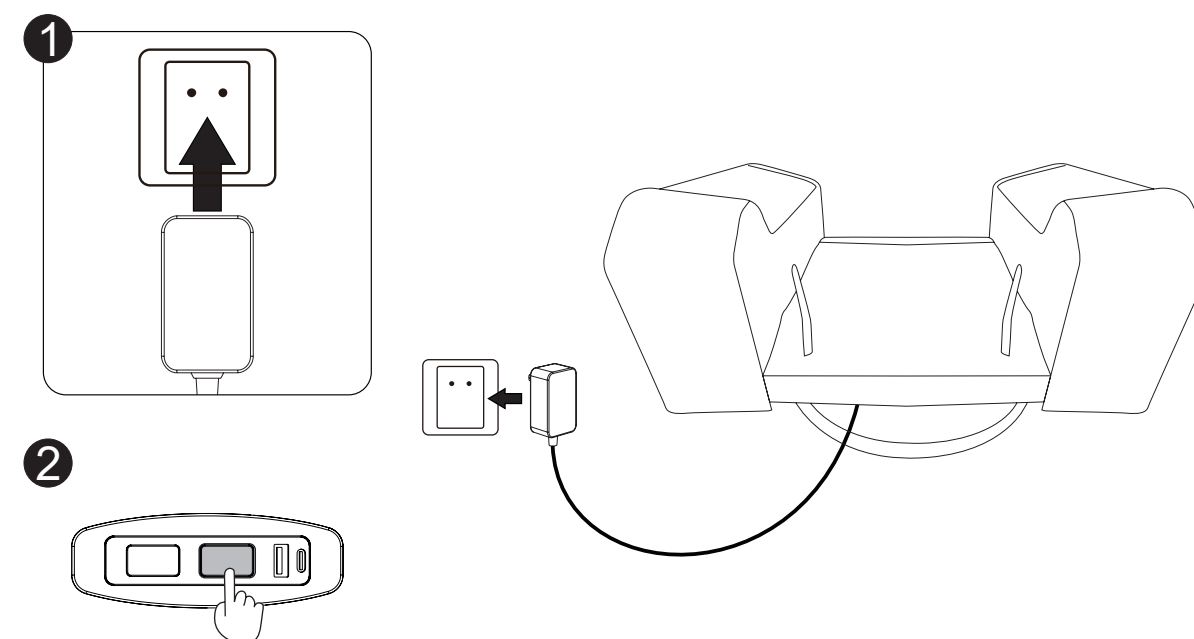


05 Install the seat cushion

Take the seat cushion out of the vacuum bag, flip the base to the angle shown in the diagram, and first attach the four Velcro straps of the leg cushion to the back side of the leg rest panel.

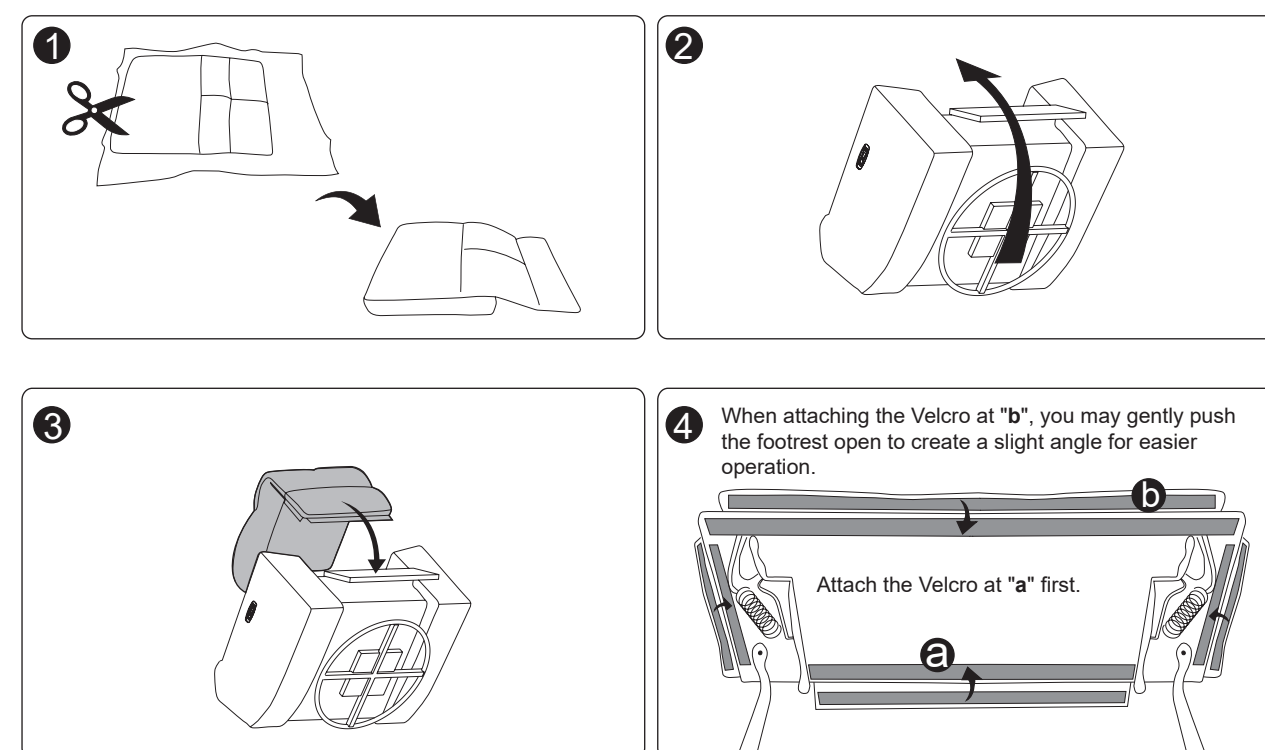


Lay the recliner flat and use the button to move it to the sitting position. Remove the protective strips from the Velcro on the bottom of the seat cushion, then center the seat cushion and attach its front edge to the base. (If needed, two people may work together for easier installation.)

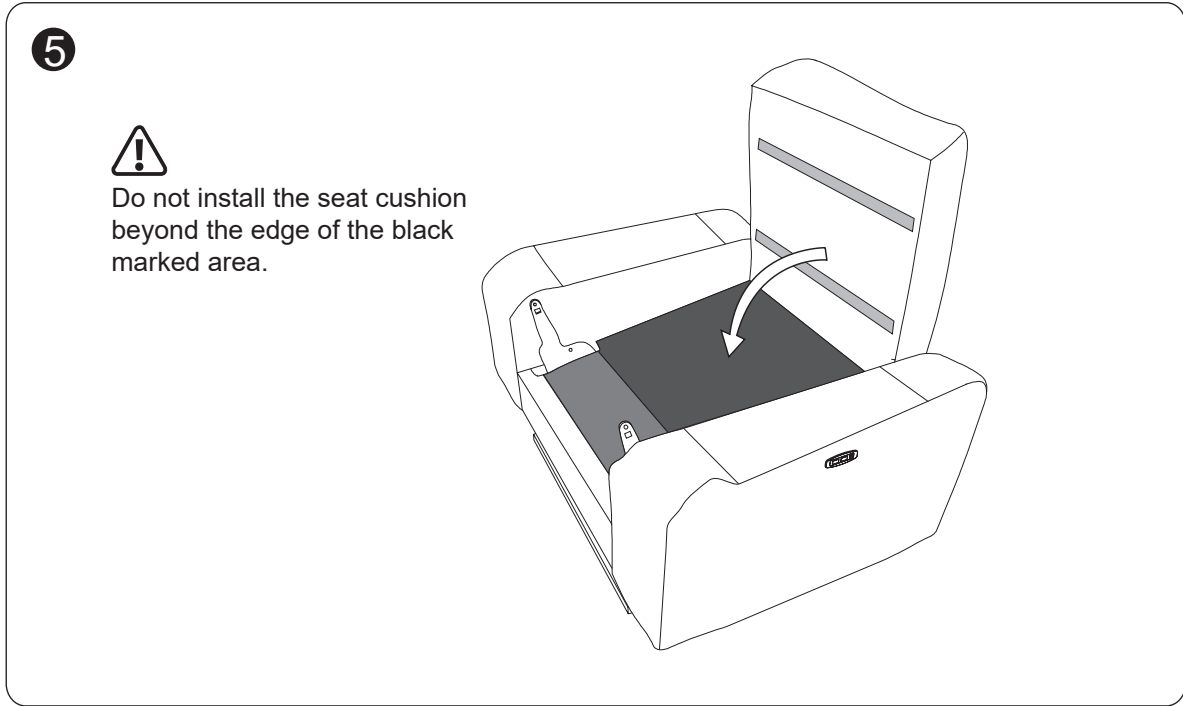


06 Install the arm Cushions

As shown in the diagram, secure the zipper and Velcro.

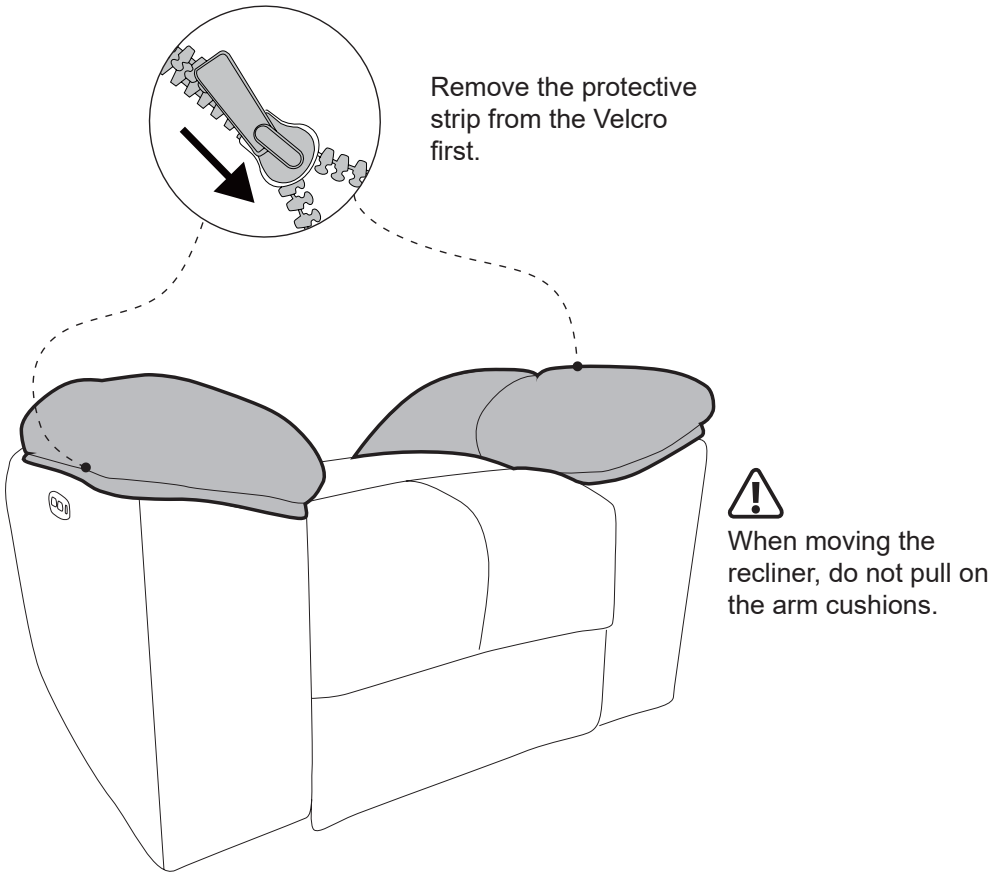


07 Install the backrest

First align the slots on both sides of the backrest with the connectors on the base. If alignment is difficult, manually adjust the position and then fully insert the connectors into the slots. The installation is complete when you hear a clear "click". When inserting the backrest, hold it from the top to avoid injury.

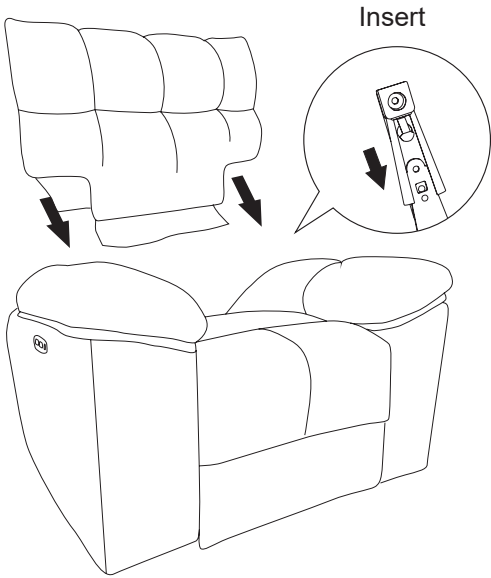


08 Attach the velcro


Use the button to move the recliner to the reclining position. First, remove the protective strips from the Velcro, then align the Velcro felt on the seat cushion and backrest, pressing it down smoothly.

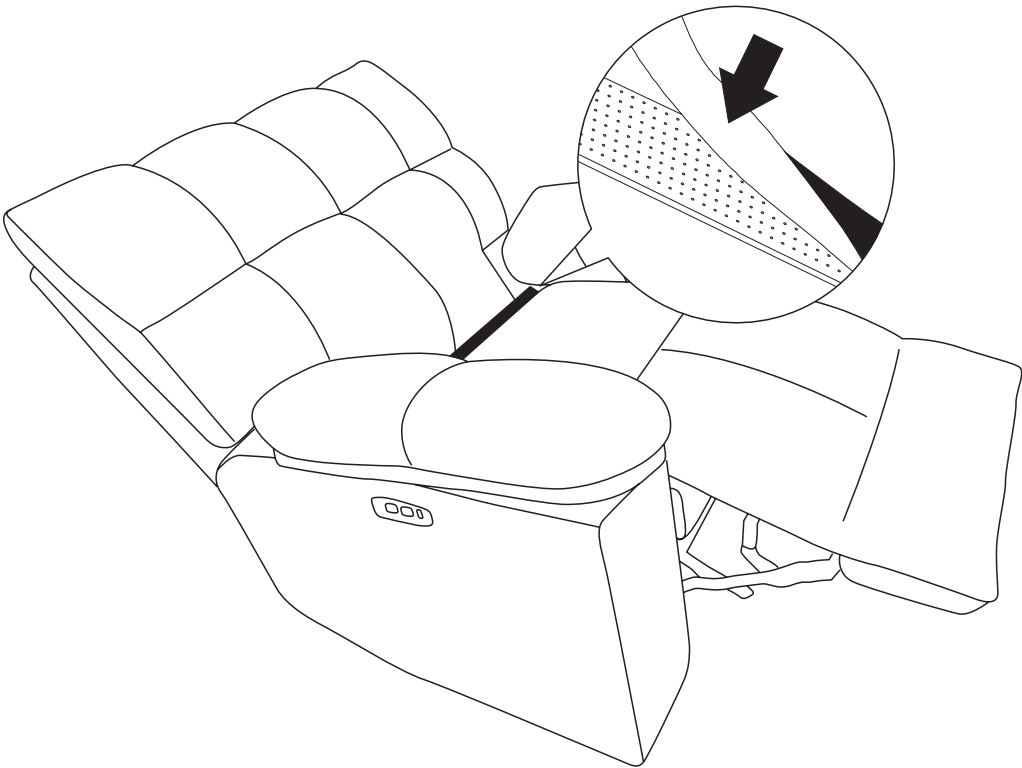

Align and attach the velcro on the back flap of the backrest. installation is complete.

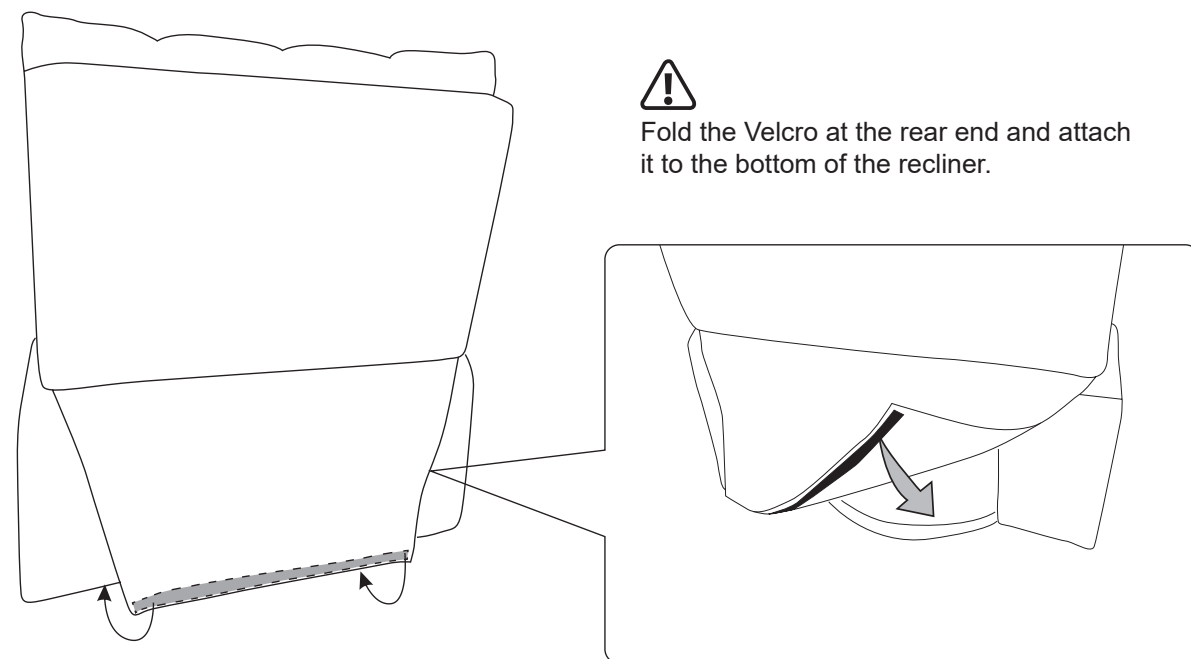


Switch Function Instructions

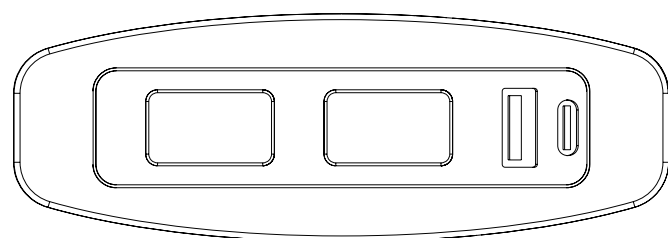


!
Do not place head, hands, feet, or any other body parts under the frame while the sofa is in motion.

	Control the recliner to open Press and hold the button to gradually open the recliner to the reclining position.
	Control the recliner to close Press and hold the button to gradually close the recliner to the sitting position.

Warning

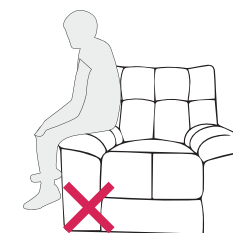





Do not sit on or apply pressure to the armrests

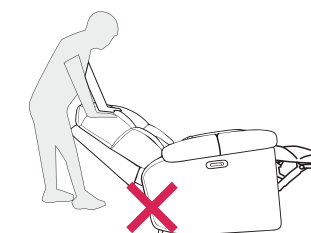

Do not press backrest after reclining




Do not get off the chair while it is reclined

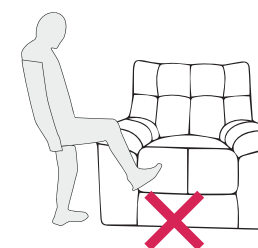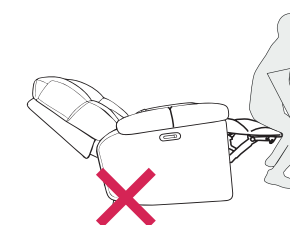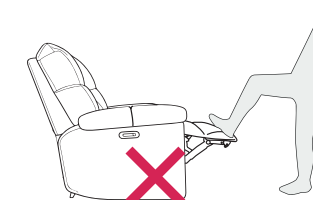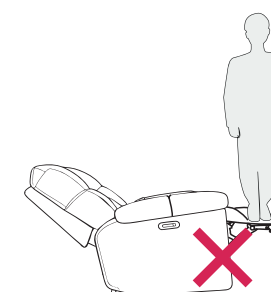


Do not sit/kick/stand on the footrest at any time

Warning

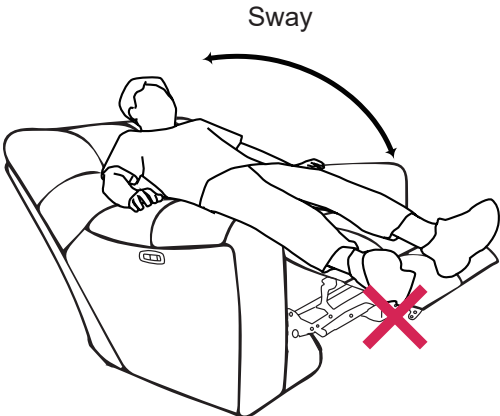

Do not rock the recliner back and forth when it is fully extended

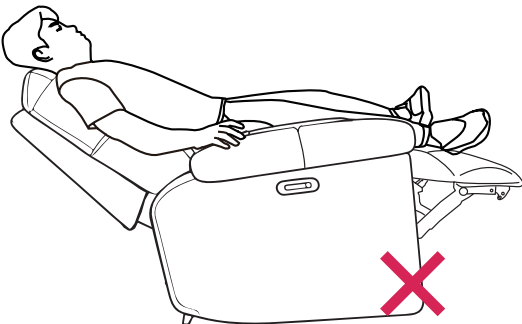

Avoid sitting or lying down heavily; when reclining, ensure your hips are on the seat cushion and do not sit on the backrest



Do not force the recliner to tilt backward or lie flat, as this may cause it to tip over



Do not sit on the front edge of the recliner or on the footrest, as this may cause it to tip forward

Troubleshooting

If this product malfunctions, please refer to the following situations and possible solutions:

Situations	Usage Areas
Frame is not flexible during usage	1. Adjust the product's position (level it). 2. Apply a small amount of lubricant to the sticking points.
The product exhibits a non-smooth feeling during operation	Remove any debris or obstacles from beneath and around the recliner.
The product has an odor	Keep the area well-ventilated or spray with a recliner-specific deodorizer.
Wired controller buttons are unresponsive	Please check whether the controller is properly connected. All functions of this product may be unavailable.
Troubleshooting steps	1. Ensure the motor cable is correctly connected to the power cable. 2. Verify that all wiring connections are properly secured. 3. Check that the power cable is plugged into a functioning power outlet.
If the issue persists after following the above troubleshooting steps, please contact customer service.	