


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618

Address: 6475 Las Positas Rd. Livermore, CA 94551

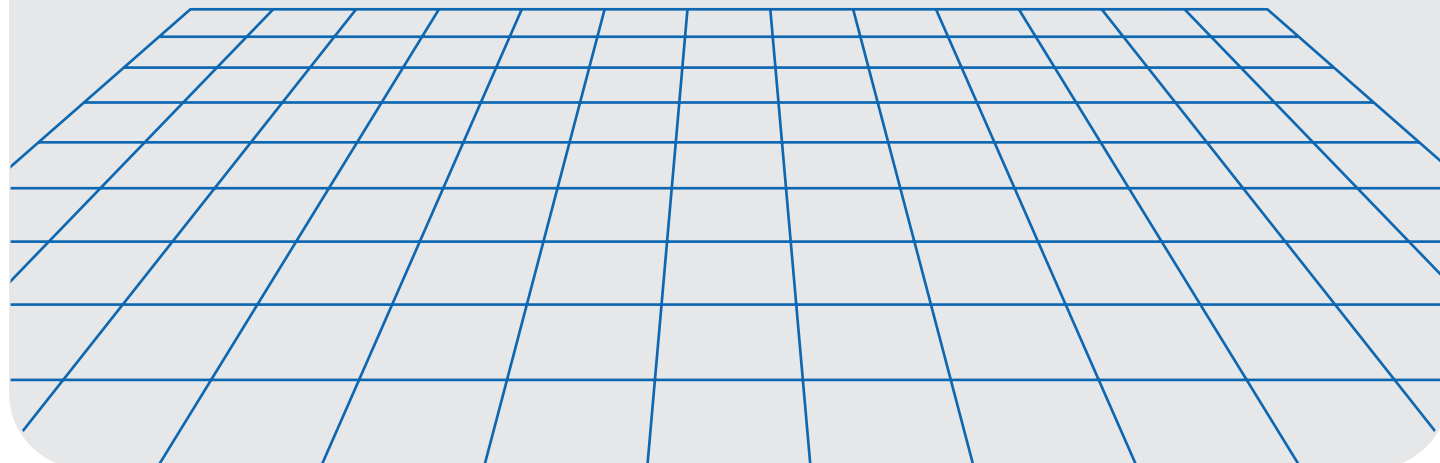


2606A

FlexiSpot

User Manual

Item No. E7Pluslo-WR01B-DP

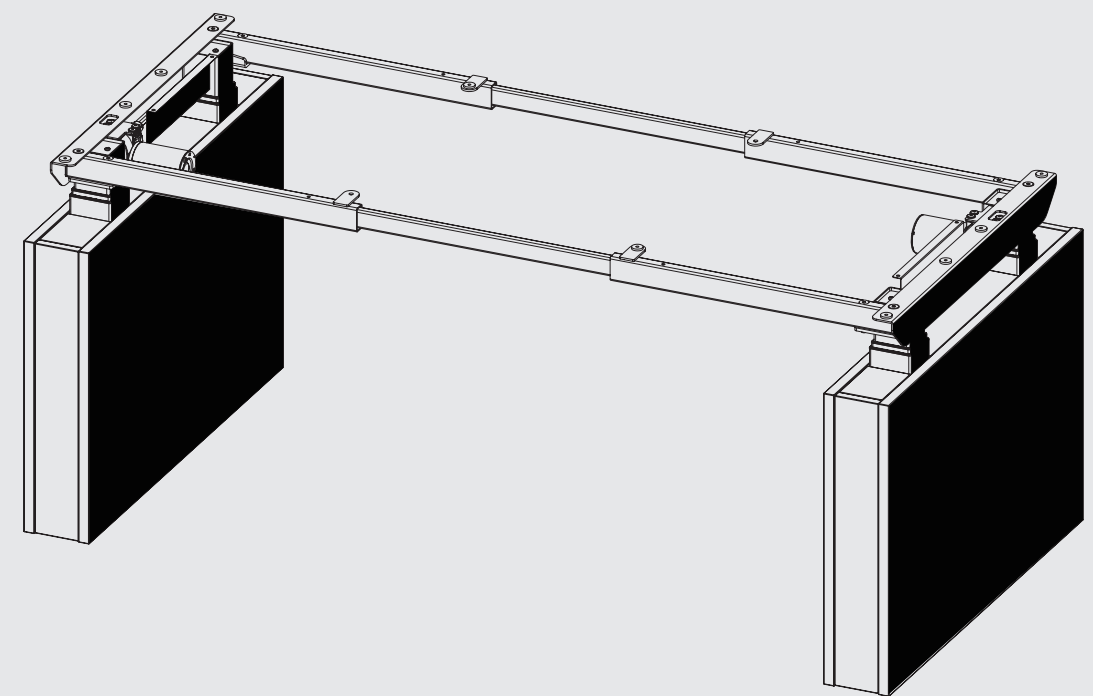

INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE

Technical Specifications


Capacity	Static evenly distributed load-bearing capacity 55 lbs
Height	19.3"
Width	28.1"
Depth	14.1"

Attention


Important notice:
Please read the instruction manual completely before using and assembling roduct. Please strictly follow the instructions in the manual and keep it properly for future reference.

Important Maintenance Notice:
All products assembled with screws need to be re-tightened two weeksafter installation.After that, check it onceevery three months to ensure the lifelong stability of the product.
Cleaning and maintenance guide: Wipe with a soft cloth soaked in neutral dthen dry with a dry cloth When instal with an electric screwdriver, do not apply excessive force to avoid causing the board to break.


Assembly Notes

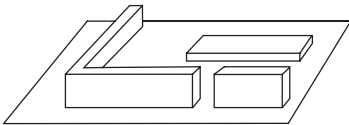


Installation need be done on a carpet to prevent scratches.

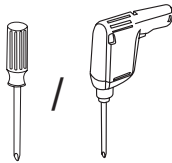

Installation will require a Phillips screwdriver or pistol drill.

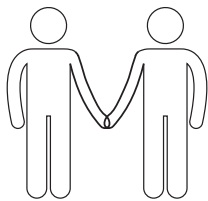


Installation must be done by at least two people.








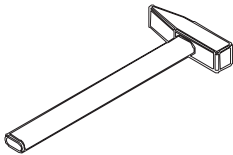


Installation may require a hammer or rubber mallet.

Diagram of Components




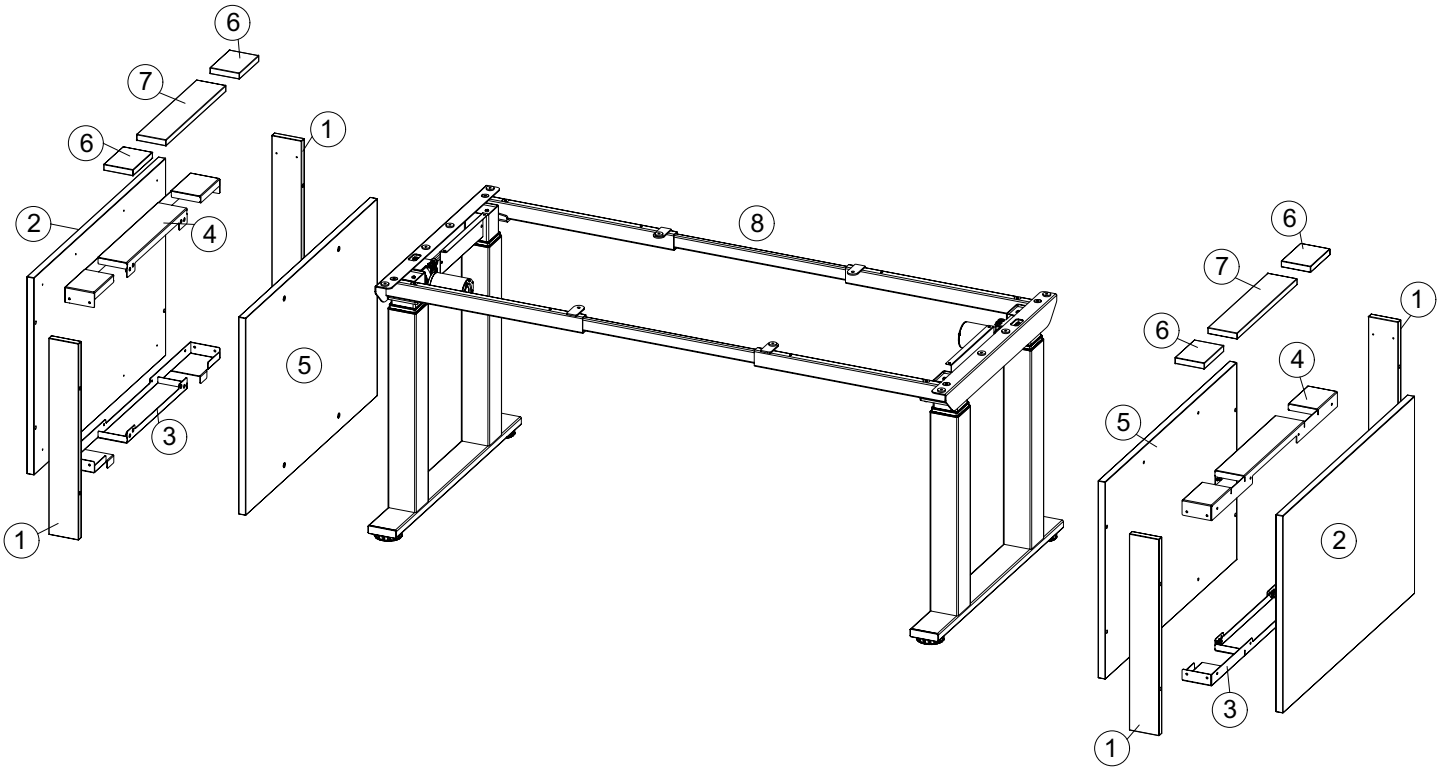


Parts Included

  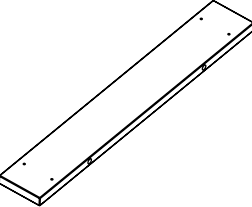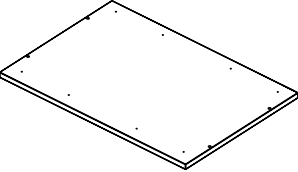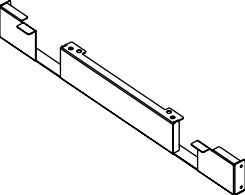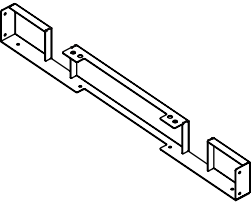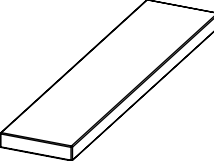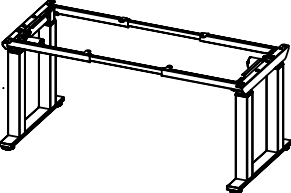① ×4	② ×2	③ ×2	④ ×2
			
⑤ ×2	⑥ ×4	⑦ ×2	⑧ ×1
			




 When installing, please carefully confirm whether each screw corresponds to the shape of the manual and accessories. They can be distinguished by size

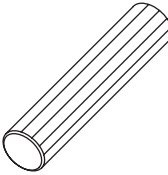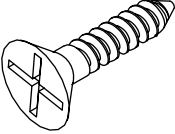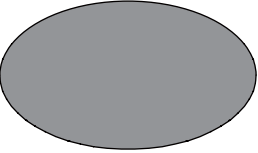
A ×16	B ×32+2	C ×8
		
D ×1	H ×8	
		

Assembly Steps


1

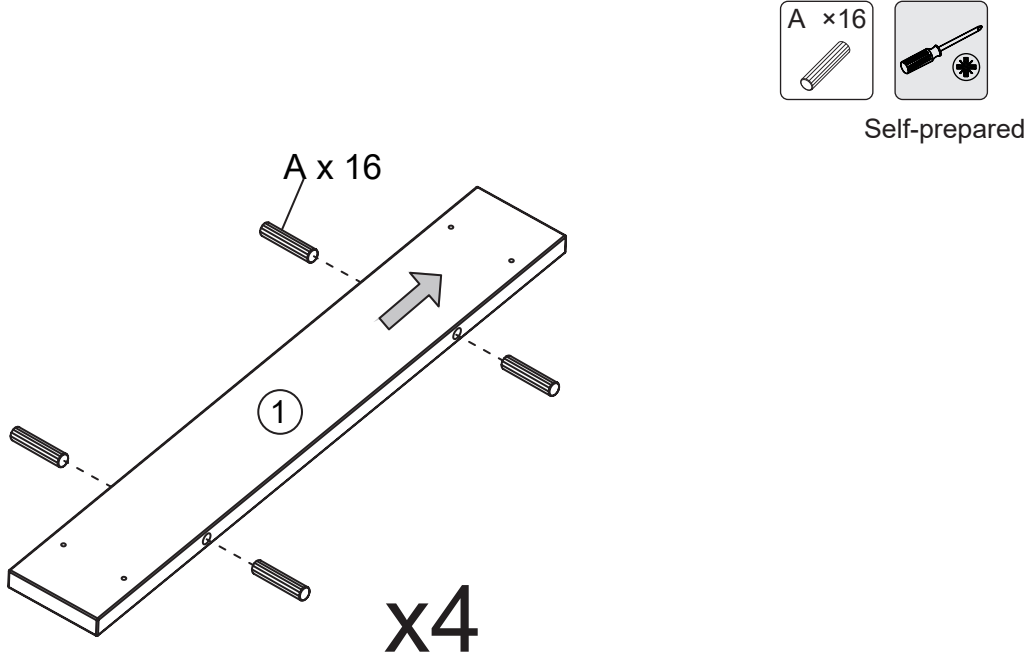


2

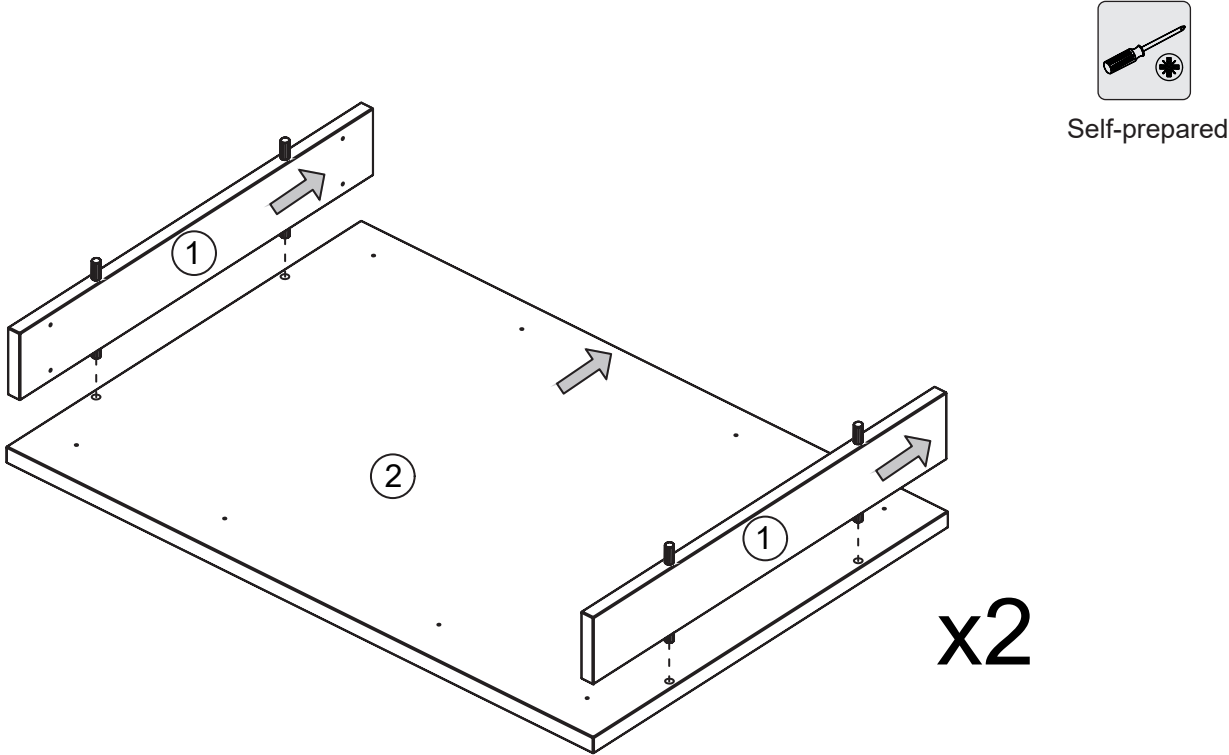


3

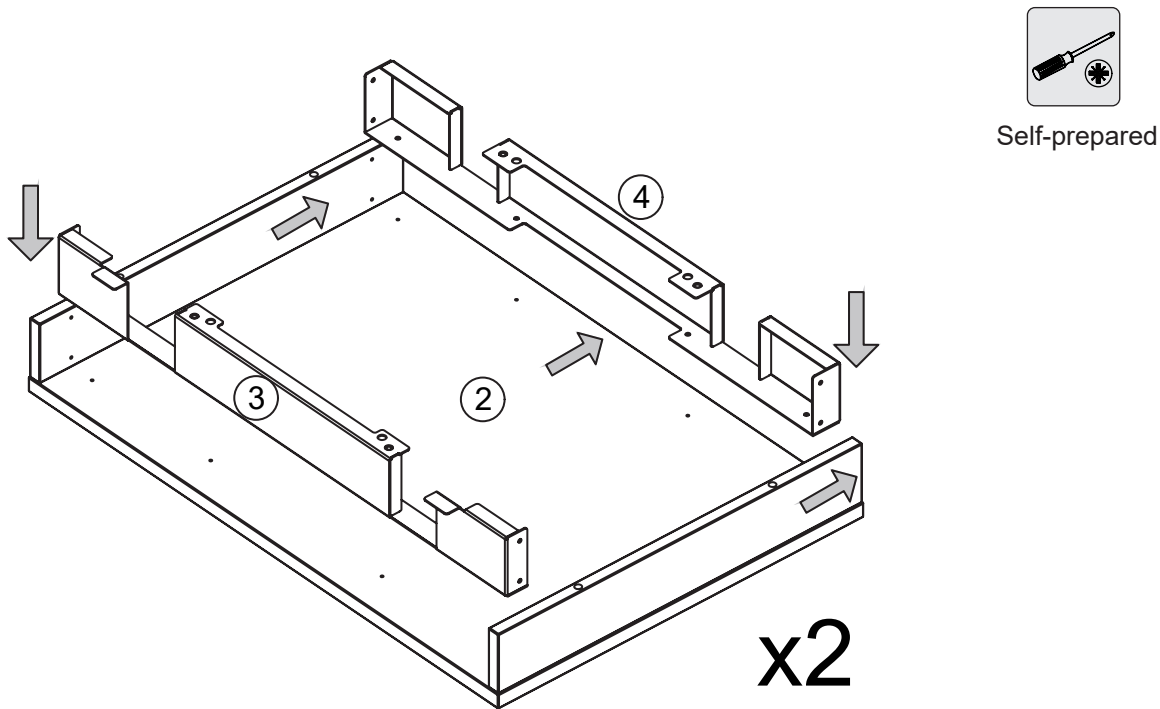


4

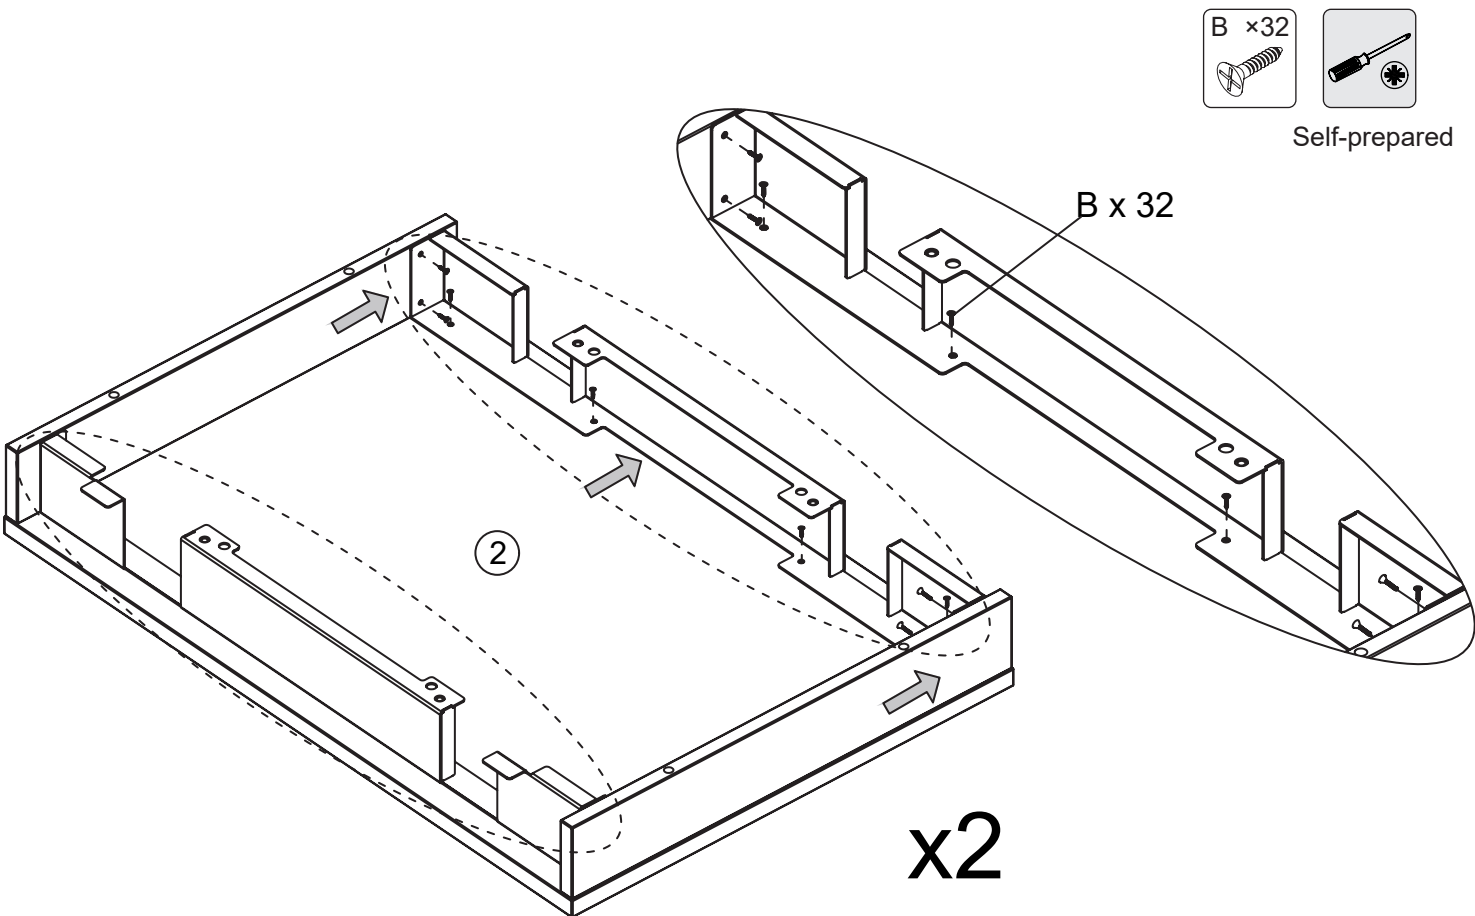


5

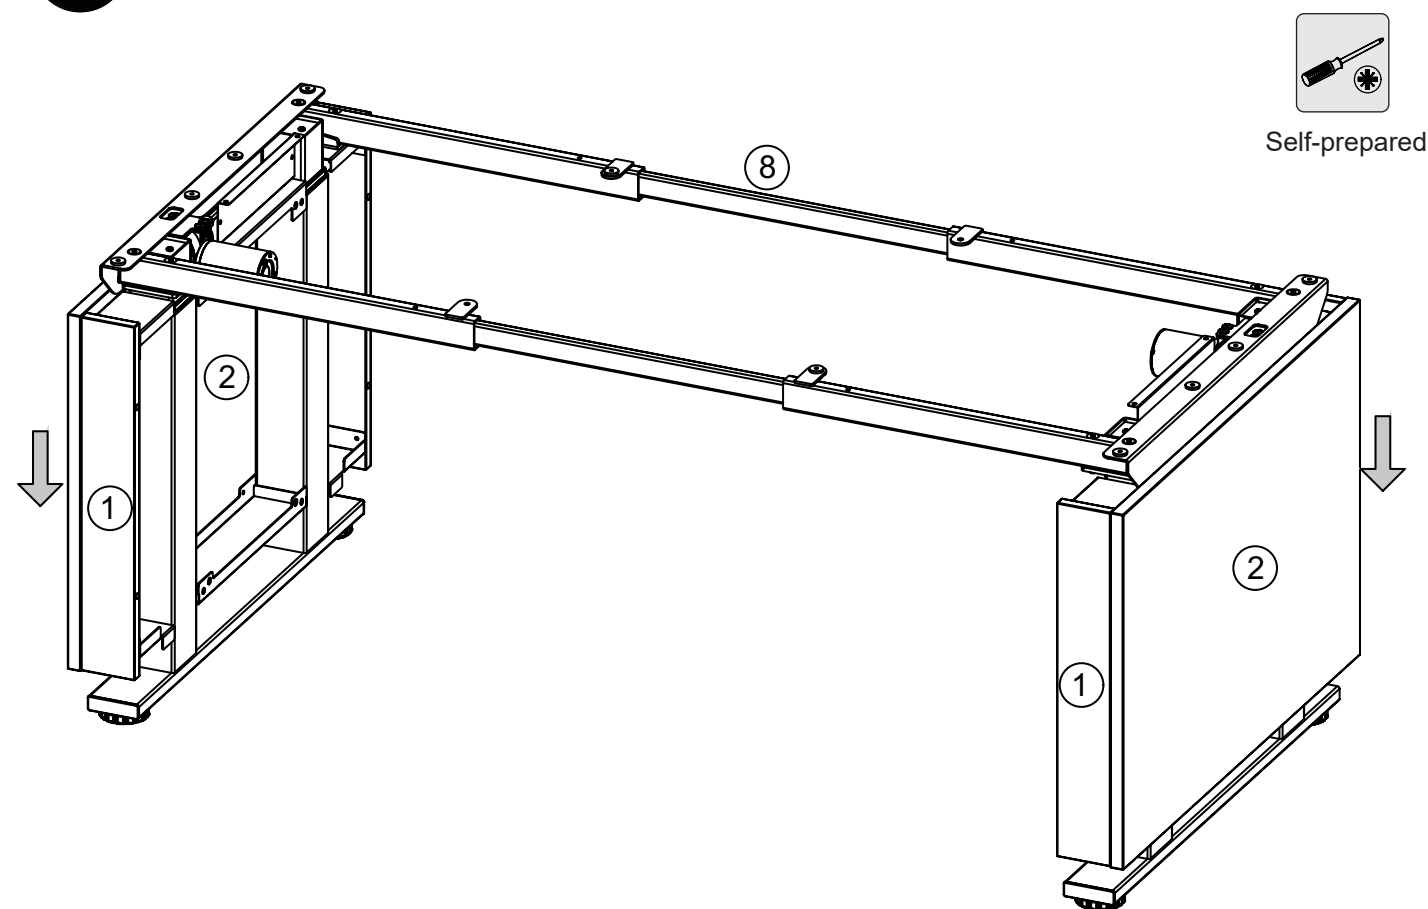

6

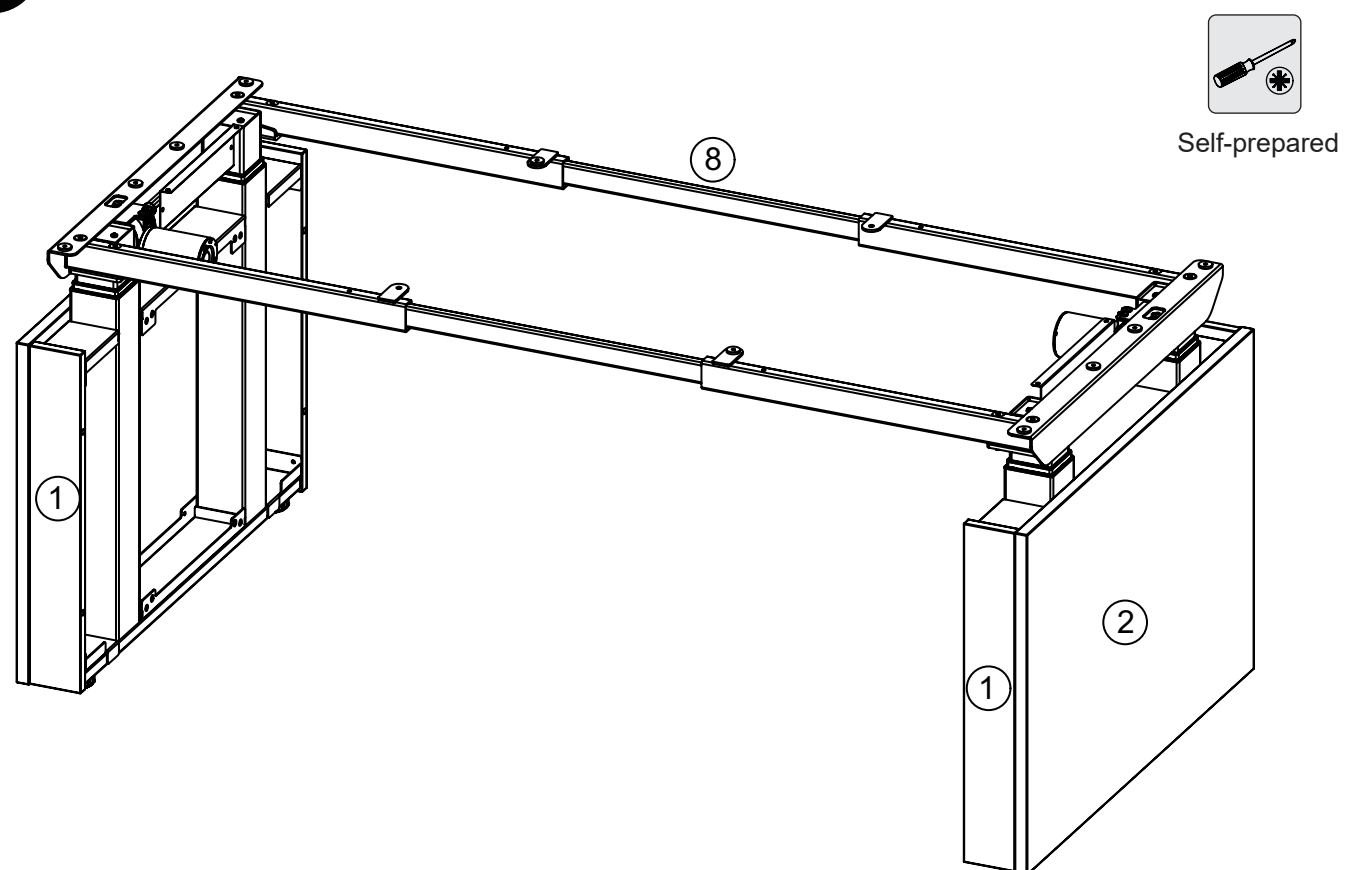

7

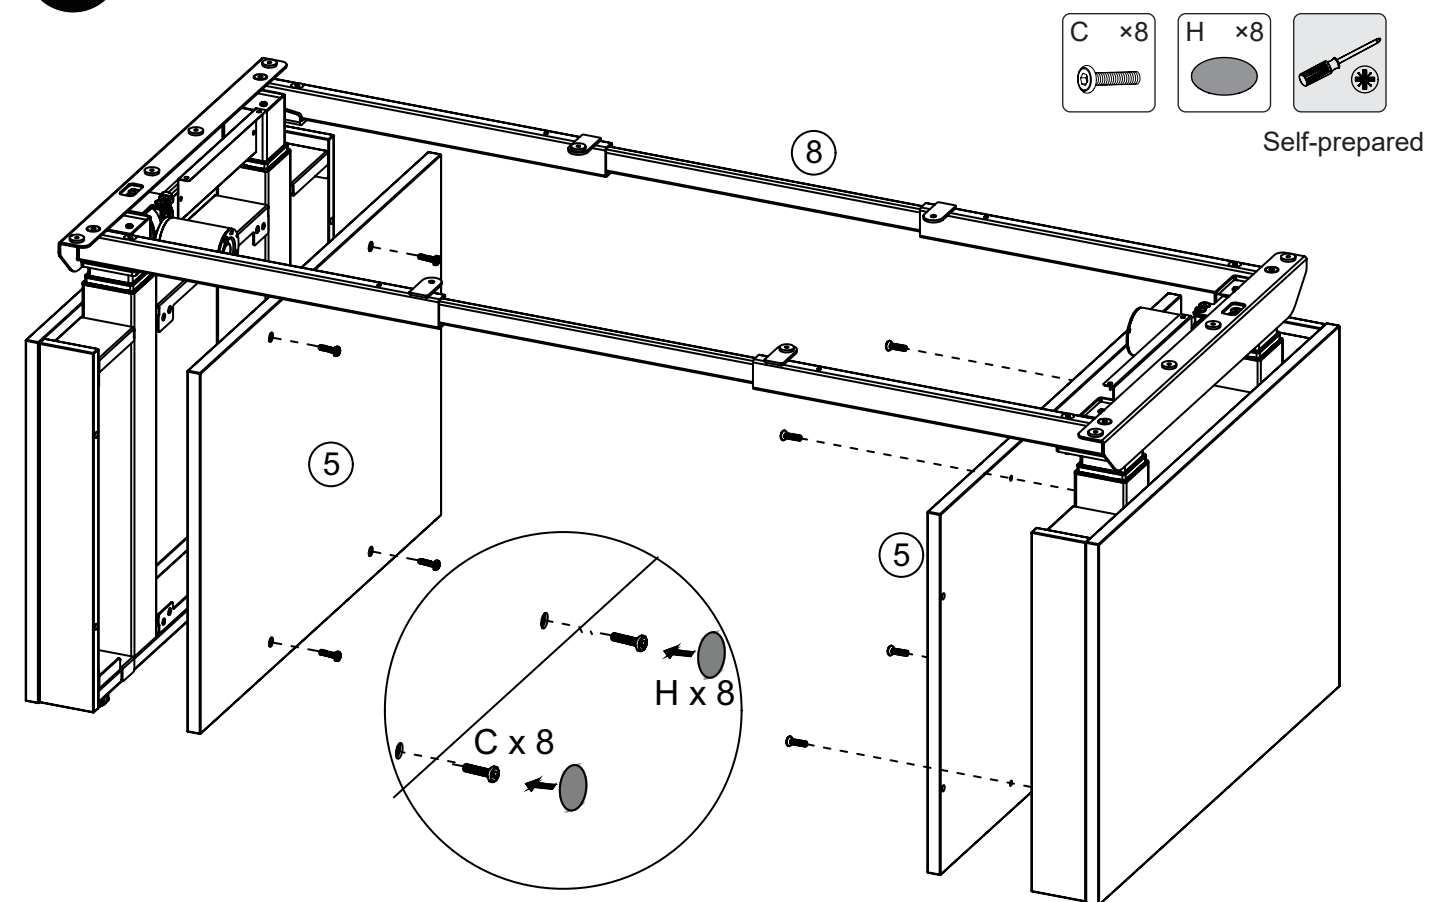

8

