



**Work
like new**

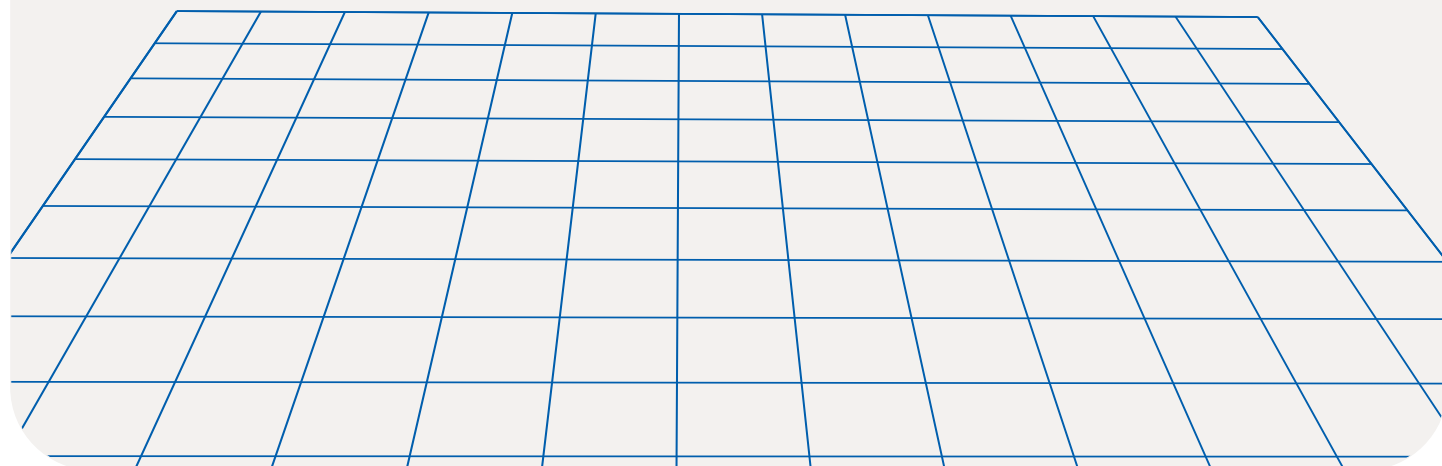

FlexiSpot


Item No. E5B-Lite/E5W-Lite
User Manual

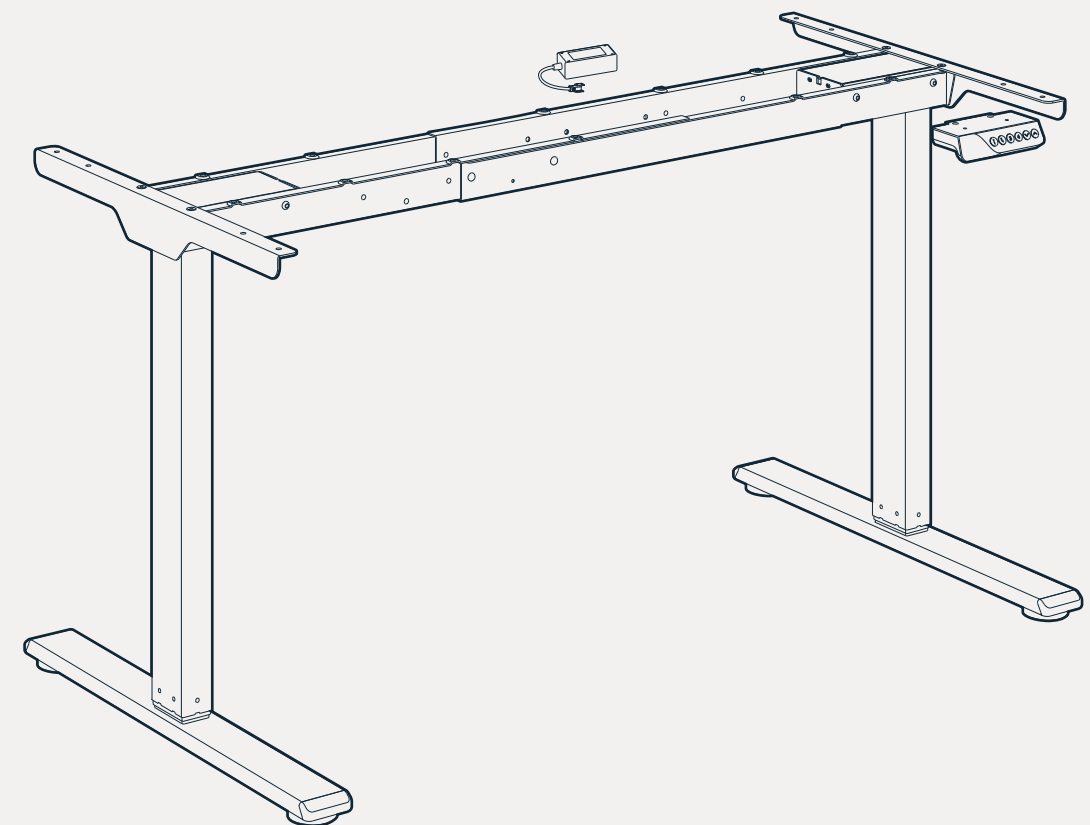


Specifications

Lifting Column	3
Max. Weight Capacity	220lbs (100kg)
Table Frame Width	43.9/50.6/58.5inch (1116/1286/1486mm)
Max. Speed	1in/s (25mm/s)
Height Adjustment	23.6in-49.2in(600mm-1250mm)
Adaptable Desktop Size	Length: 47.2in-70.8in (1200mm-1800mm)
	Width: 23.6in-31.5in (600mm-800mm)
	Thickness:>0.7in(18mm)


Installation Instructions

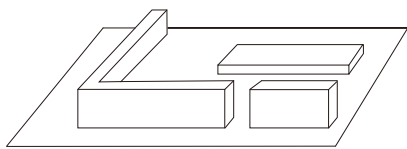

Place on carpet to avoid scratching

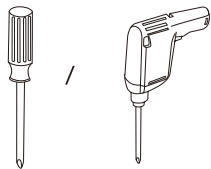

Drill required (not supplied)

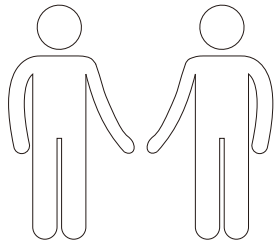

Two or more individuals need to collaborate

Accessories Package

Attention: The illustrations below are for guidance only and may vary slightly from the actual product. Please contact Customer Service if any parts are missing or if you have any problems during assembly.



 
 
 
 
 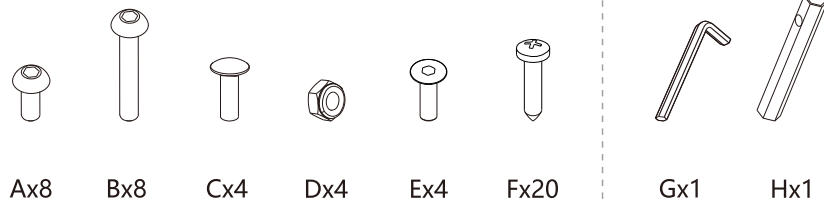


Diagram of Components

No.	Parts
①	Side bracket x2 
②	Left beam x2 
③	Right beam x2 
④	Column x2 
⑤	Handset x1  + 
⑥	Power adaptor x1 

No.	Parts
⑦	Pedestal x2 
⑧	AC power cable x1 
⑨	Extension cord x1 
⑩	Adapter cable x1 
⑪	Cable clip x4 



Note: Handle screws are stored separately.

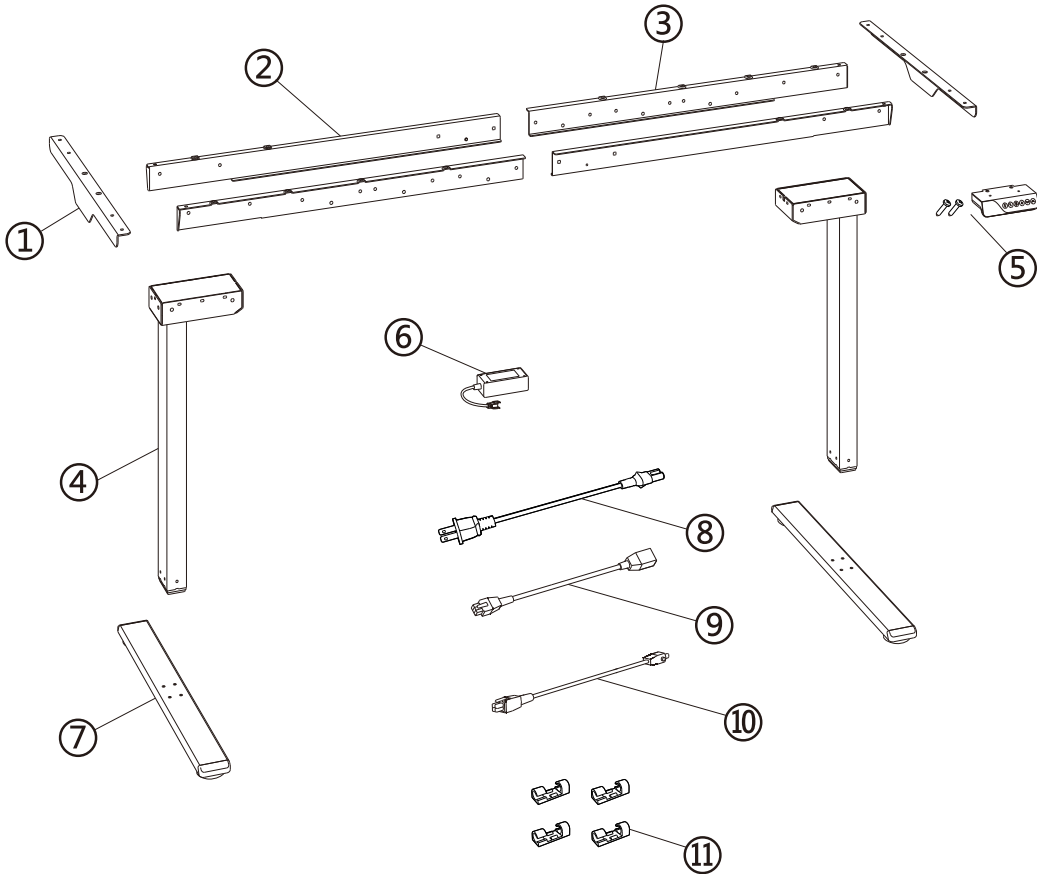

1 Connect the beams




 
The beam has three adjustable positions. Please adjust the beam to the appropriate length.

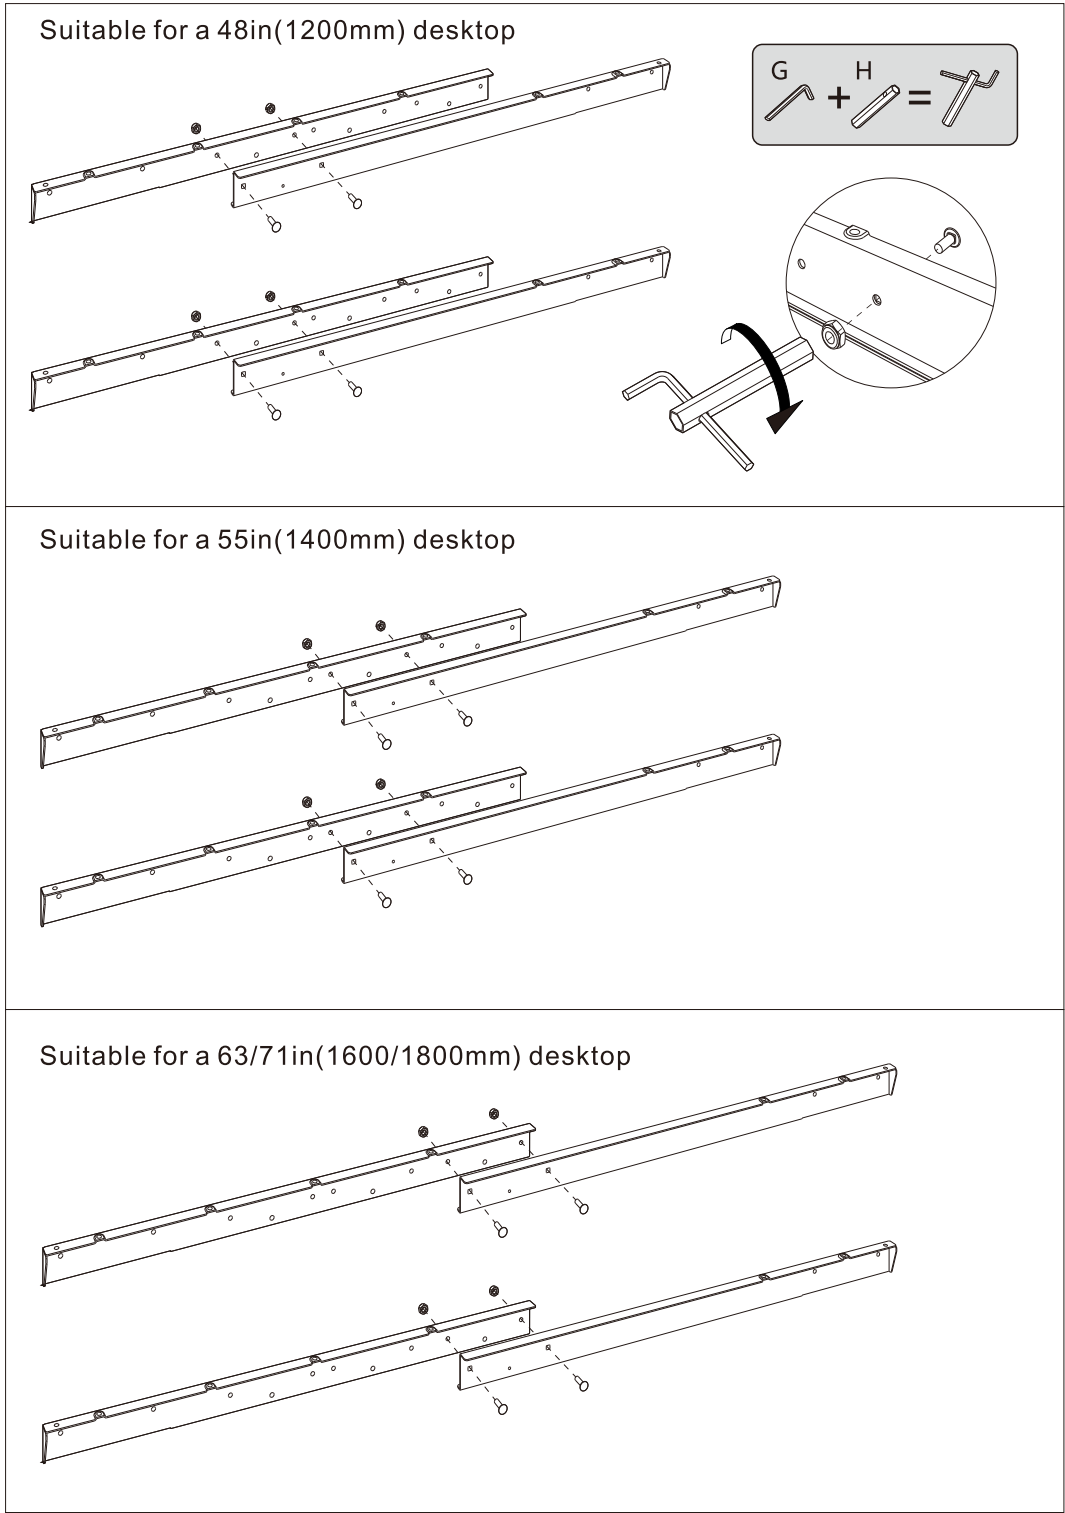

2 Install the beam





 Please pre-tighten all the screws for installing the cross beams, and then tighten them at the same time.

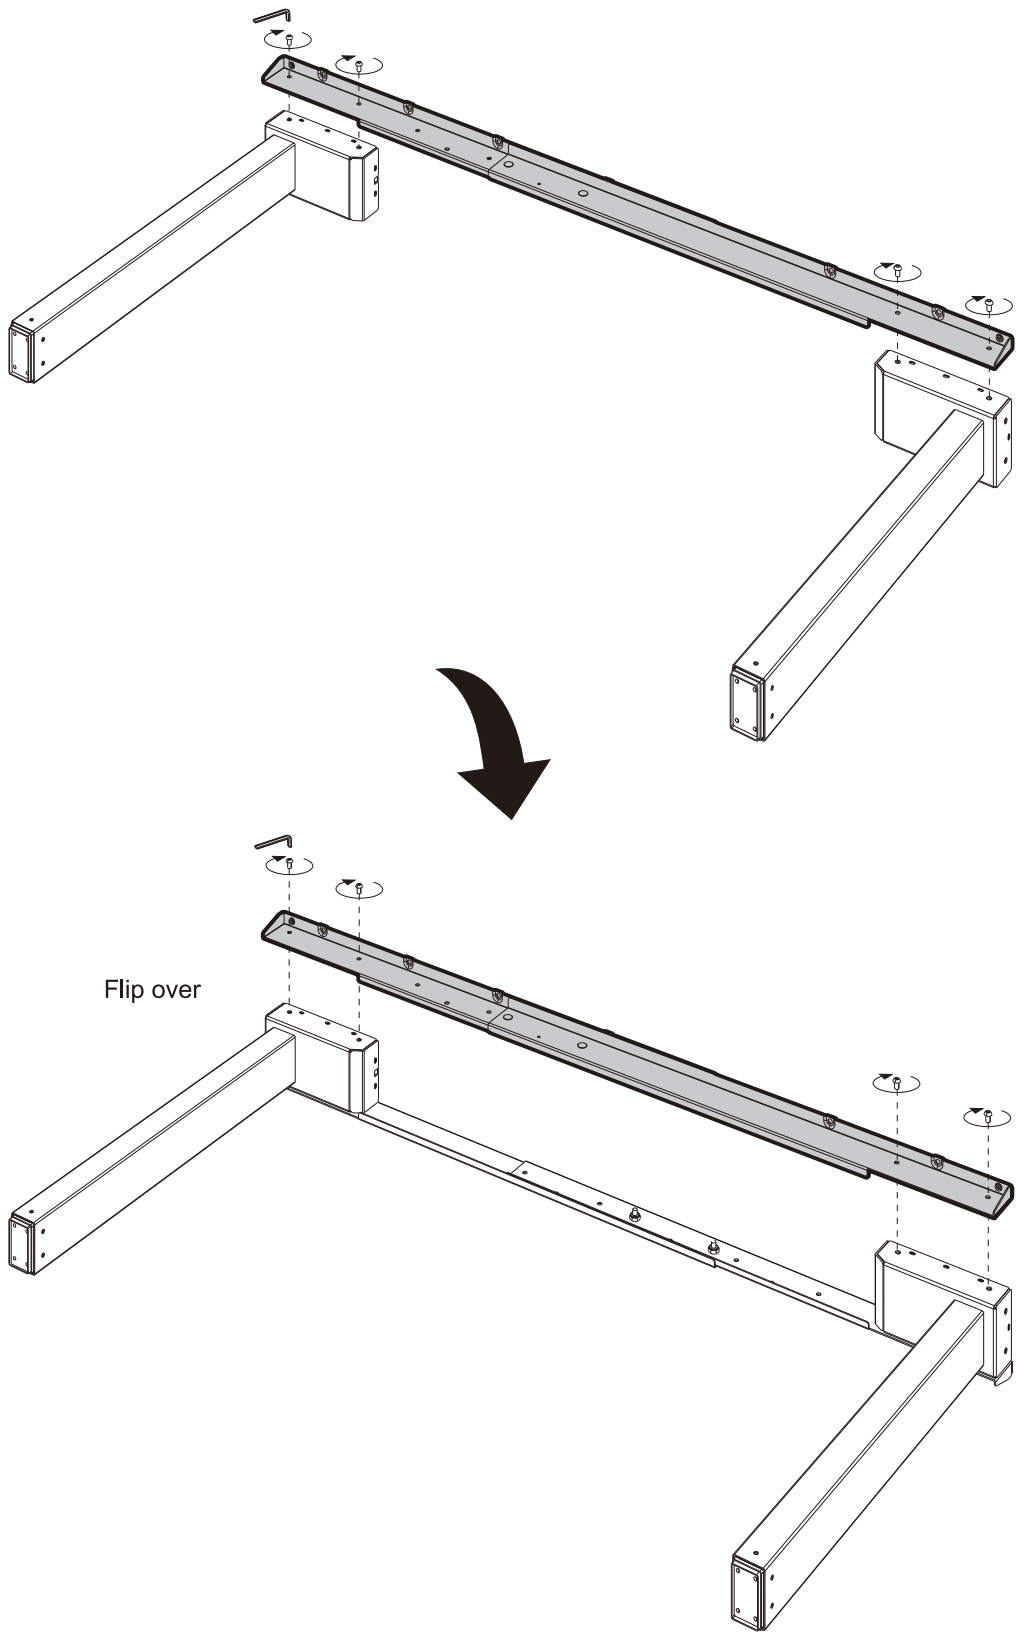



03 Install the Pedestal

  During installation, it is important to prioritize the installation of diagonal screws.

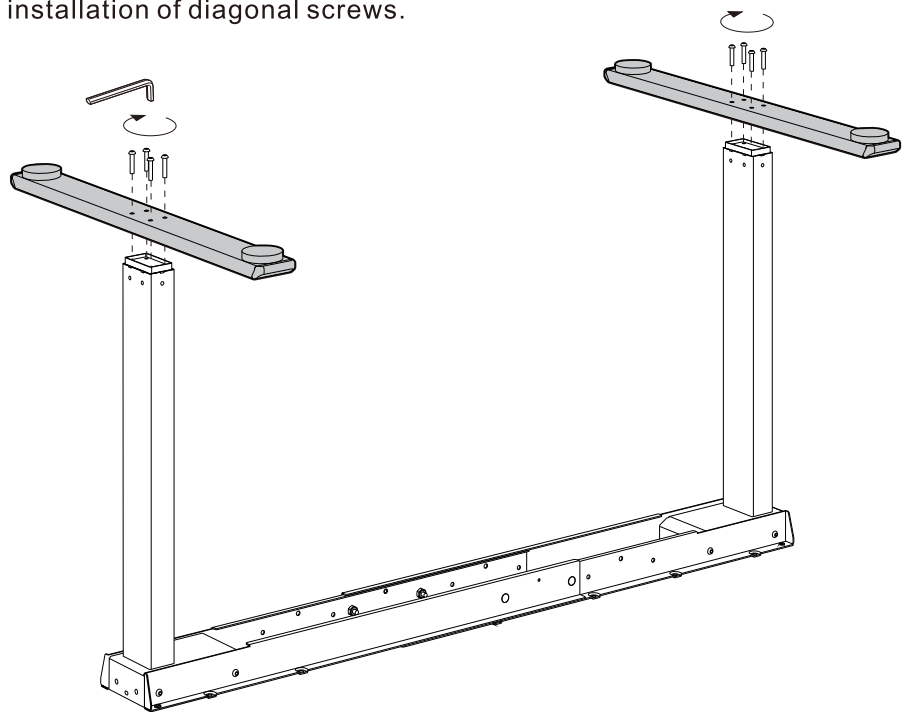



04 Install the bracket

 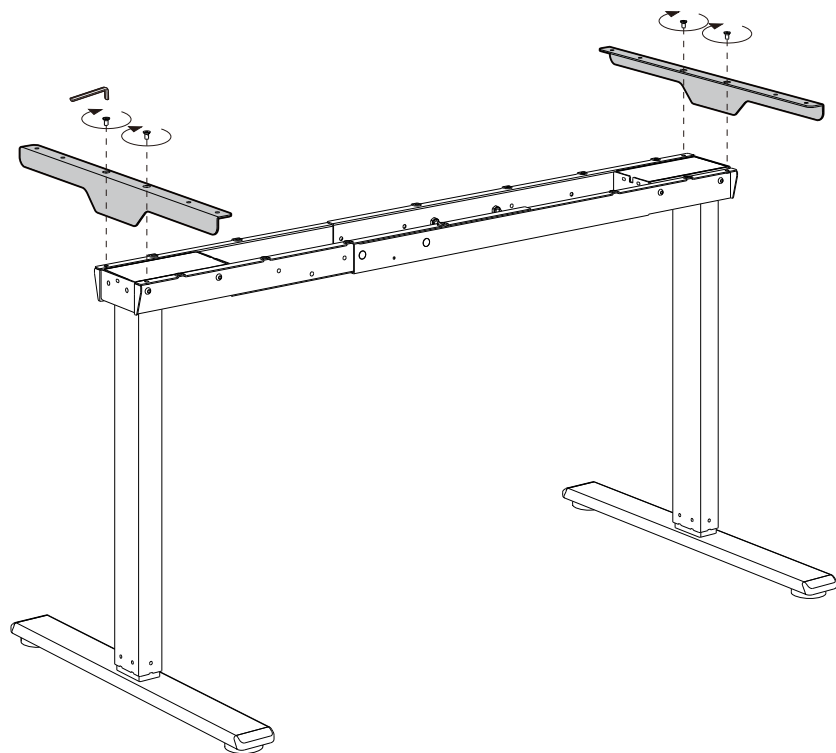

05 Install the Tabletop

Suitable for a 48in(1200mm) desktop

 The installation sequence for the screws is 

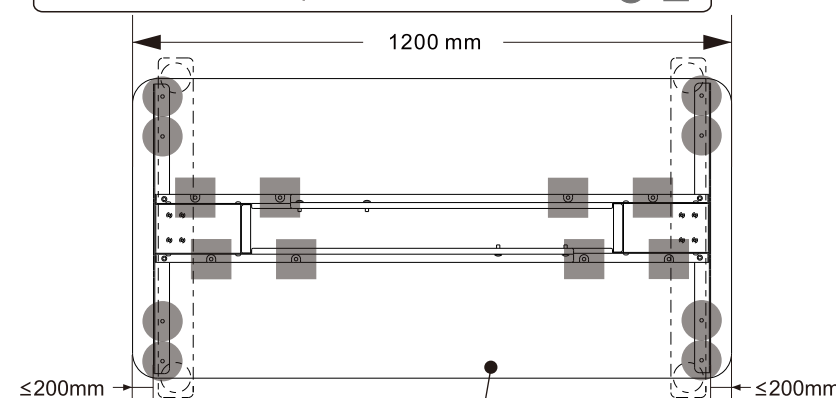



For self-provided tabletops, it is important to ensure sufficient strength. The reference value is 220 lbs, but the actual weight capacity may vary depending on the specific material of the tabletop.

 The distance between the supporting bracket and the edge of the tabletop should not exceed 200mm.



Suitable for a 55in(1400mm) desktop

 The installation sequence for the screws is 

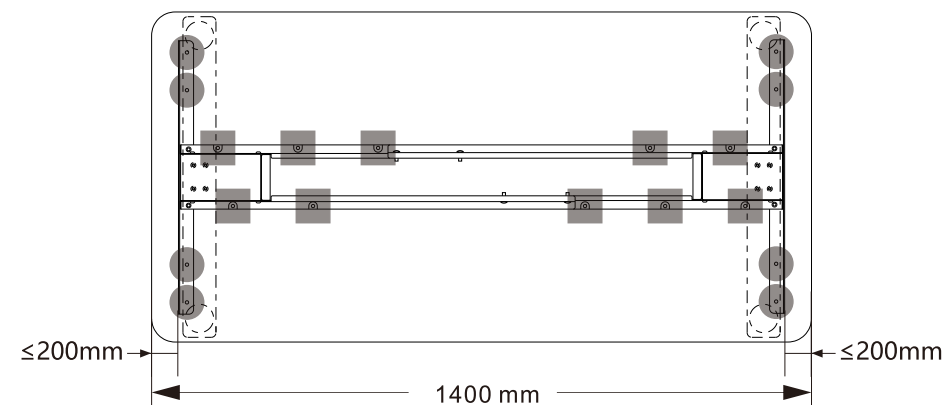


Suitable for a 63/71in(1600/1800mm) desktop

 
The installation sequence for the screws is 

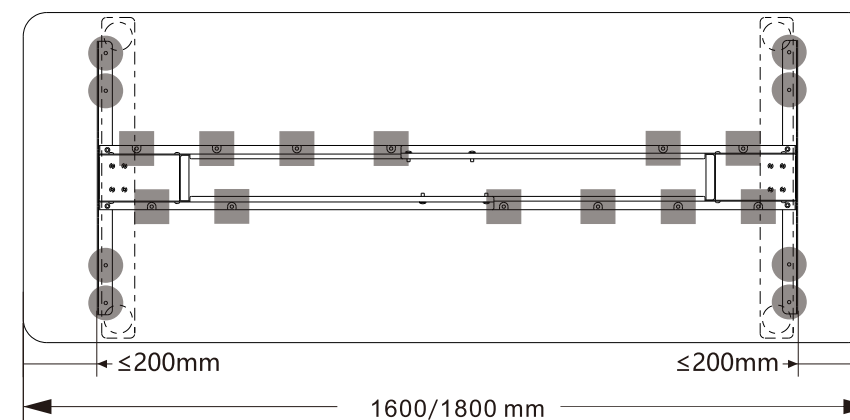



06 Install the Handset

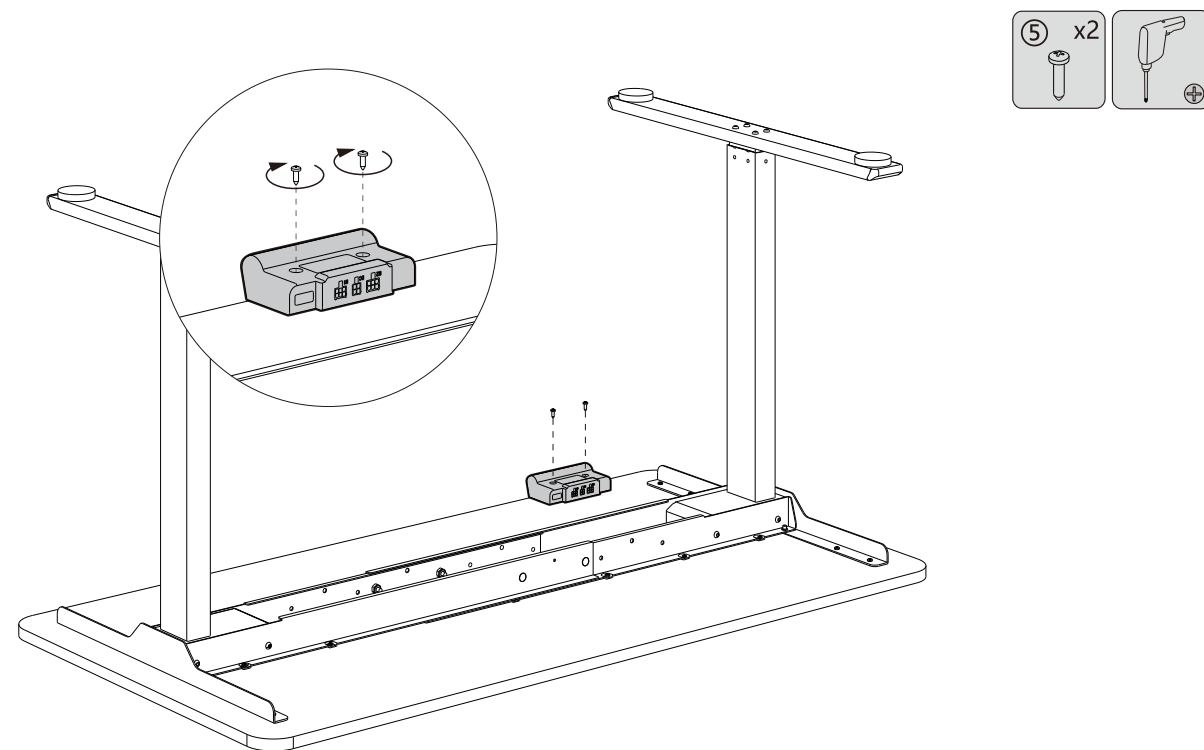

07 Install the adaptor

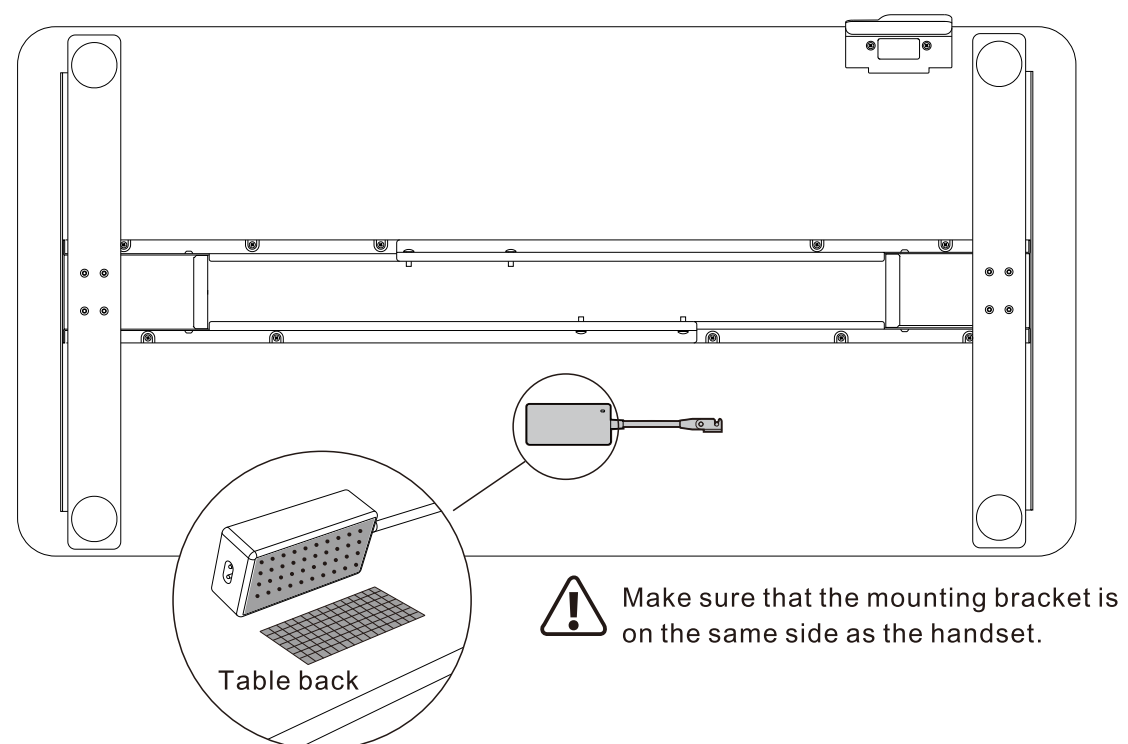

08 Connect the cables


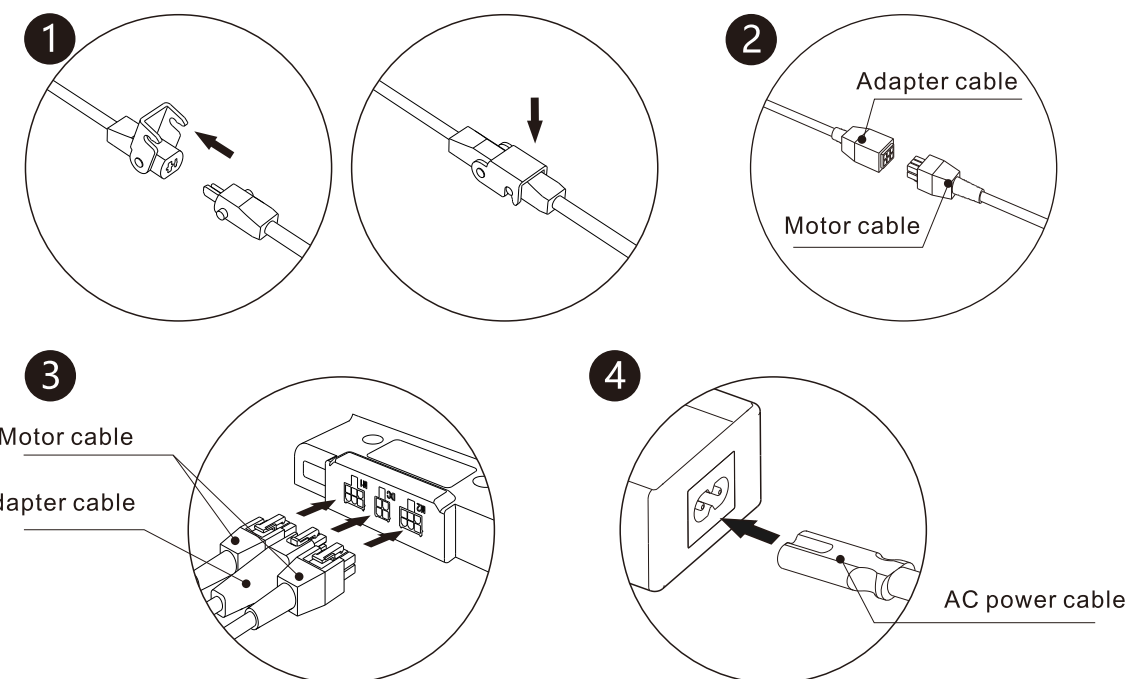
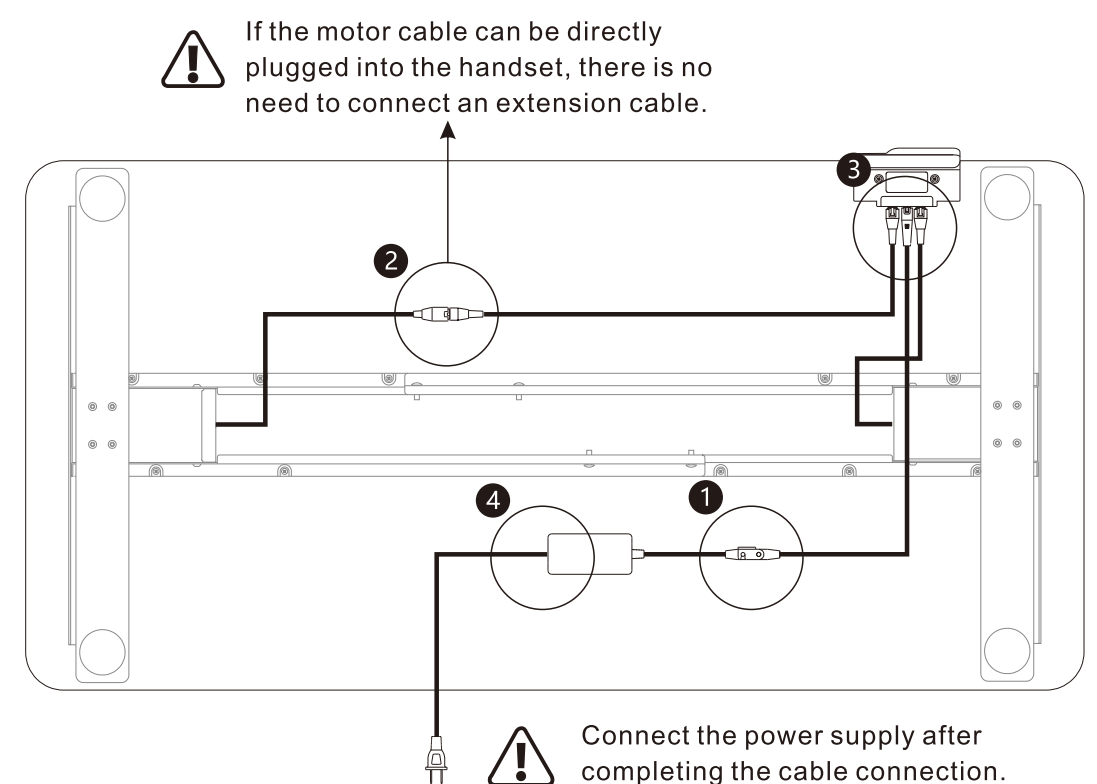


Use Cable clip (11) to secure the various connecting wires to the desktop, keeping the cables tidy.


Peel

Organize


Fix

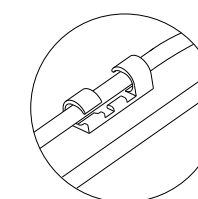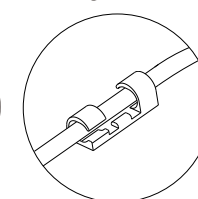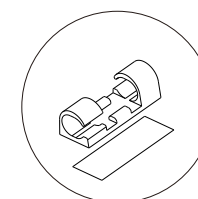

09 Flip the table

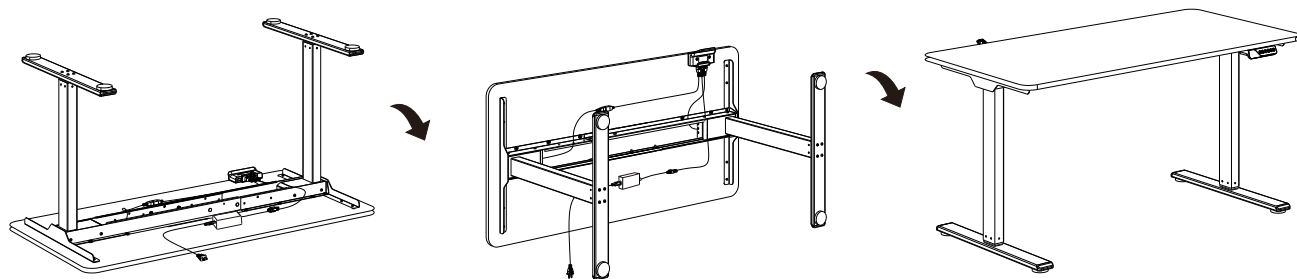

Keypad User Guide

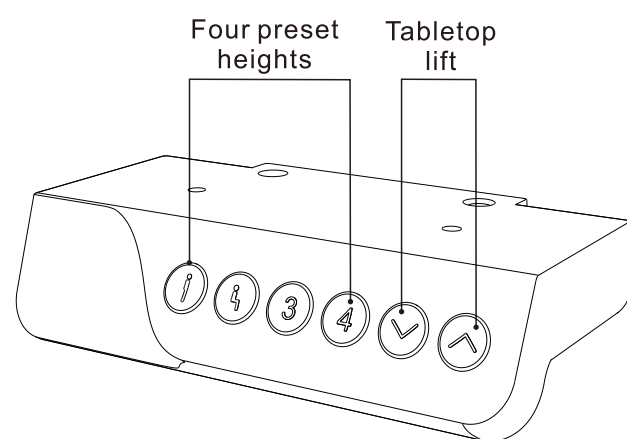


Note

Ensure that there are no obstacles blocking the movement of the table during the lifting process and confirm that all cables are long enough for the table to move up and down.

Suggestion


Set the most comfortable height for sitting to "1", and the most comfortable height for standing to "4". Other preset heights can be freely adjusted to other heights.

● Height Memory Function

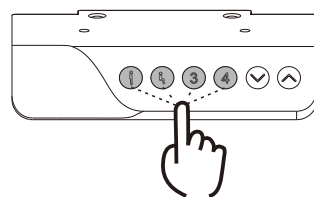

- Press and hold the "1" button for 3 seconds, and the screen will display "5-1", indicating that the current height has been successfully saved in memory. Then, you can operate the lifting table to any height, and by pressing the "1" button, it will automatically return to the saved height.
- The "1", "3", and "4" buttons also have the same height memory function as the "1" button. By repeating the above steps, you can save the corresponding height in memory. Then, by pressing the respective button, the lifting table will automatically move to the saved height.

● Adjusting Collision Sensitivity (Optional)

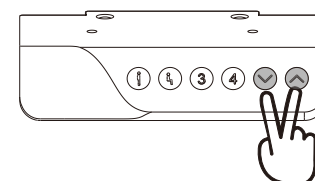


- By simultaneously holding down the "▲" and "▼" keys for 5 seconds, you can switch the sensitivity. One operation will switch to the next level, divided into 4 levels (R-3, R-2, R-1, R-0).
- The display screen shows "R-0", indicating that the collision prevention function is turned off.

The display screen shows "R-1", indicating low sensitivity.

The display screen shows "R-2", indicating medium sensitivity.


The display screen shows "R-3", indicating high sensitivity.
- When the table encounters an obstacle during the process of ascending or descending, it will immediately rebound, providing protection.

● Reset Function

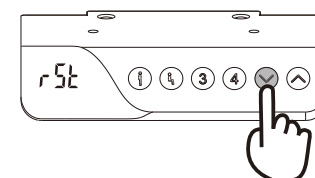

- When the display screen shows "r5t", the height-adjustable desk enters the reset state. Press and hold the "▼" button until the desk reaches the lowest position and stops rebounding. The display screen will show the height number. Release the downward button "▼" to complete the reset process.
- When the height-adjustable desk is in a stationary state, simultaneously press and hold the "3" and "4" keys for three seconds to enter the reset mode. Following the above steps will complete the reset process, and it will clear the memorized height settings.

● Error Code Processing

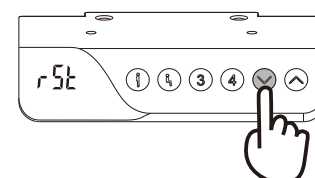

- If there are other error codes and pressing the "▼" downward key does not respond, please check that the connecting cable is not damaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The screen will display either "R5f" or "r5t". Press and hold the "▼" downward key to reset.
- If the display shows "E01" or "E02", please allow the table to rest for at least 18 minutes before using it again.
- If the desk still does not function properly after performing the above steps, please contact customer service for assistance.

Resolving Common Issues



This list is used for checking and solving common faults and errors. Please contact the manufacturer if problem you encounter is not on the list below.

Fault phenomenon	Method
Electronic functions are not functioning properly	Check whether the cable connection is normal;
Rising in a lowspeed	Check if overloaded, max loading: 220 lbs;
Downward sliding	
Frequently Reposition	
Only down but not up or only up but not down	Reposition;
Not enough up&down height	
The bottom cannot rise	
Overwork (Duty cycle: Max2min on/18min OFF)	Restart after suspend for 18mins while connecting with power;
Press the button and the desk goes up instead of down	Check for obstructions underneath the table or any wire harnesses hanging down.

Attention



- Power supply: AC100 - 240 V, frequency 50/60HZ;
- Working environment: 32°F - 104°F;
- Before cleaning, you have to unplug the power supply cable. Clean with a slightly damp cloth to wipe away the surface dust. Keep all electrical components away from liquids. Do not damage the connection line and keep the plug in a safe position.
- Inside the control box, there are electronic components, metal parts, plastic parts, wires and so on. They should be disposed in accordance with the local laws and regulations. They cannot be disposed as household waste.
- Before using the product, please make sure the product has been installed correctly.
- Before starting use of the product, please read the instructions to fully understand all the product's functions and settings.
- Keep children away from electric height-adjustable desks, control units and handsets. Manufacturer is not responsible of any damages that result from children's unpredictable behaviour.
- Slight noise caused by the multi wedge belt or brake system will not impact the use of this product.
- Do not use corrosive or abrasive materials to clean this product and please dispose of cleaning solutions in an environmentally friendly manner.
- Understand the risks associated with using this product. Children or those with cognitive impairment should not use this product without supervision.
- If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a relevant specialist to avoid any injuries.
- Please operate in a clean and safe environment. For example, do not left around your tools. And always be careful to deal with packaging materials, in order to avoid any kinds of possible danger. Potential chocking risk exists when children play with plastic bags!
- If necessary, retain the original package for future transportation.

Recycling and Disposal



This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contract the distributor or manufacturer for recycling assistance.

FlexiSpot Limited Warranty

This limited warranty offered by FlexiSpot covers defects in material or workmanship in new FlexiSpot products. This warranty extends to the original purchaser only and is non-transferable. Only consumers purchasing FlexiSpot products from authorized FlexiSpot retailers or resellers may benefit from our limited warranty.

What is Covered?

The FlexiSpot limited warranty covers our products against defects in material or workmanship as follows:

- FlexiSpot Height Adjustable Desk Frames

All height-adjustable desks purchased on or after October 5, 2016 include a 5-year warranty for the frame, and a 3-year warranty for the motor, controller and switch, electronics and other mechanisms.

- FlexiSpot Sit-Stand Desktop Workstations

All standing desks purchased on or after October 5, 2016 include a 5-year warranty for the frame, medium-fiber desktop and mechanisms.

- FlexiSpot Desk Bikes

All desk bikes purchased on or after October 5, 2016 include a 3-year warranty for the frame, and a 1-year warranty for the electronics and other mechanisms.

- FlexiSpot Mini Steppers

All desk bikes purchased on or after October 5, 2016 include a 1-year warranty for the frame, and other mechanisms.

- Accessories

All monitor mounts purchased on or after October 5, 2016 include a 5-year warranty for the arms, 3-year warranty for gas spring system and mechanisms.

What are your Remedies?

FlexiSpot will replace at no charge to the consumer the defective parts only or, at FlexiSpot's option, replace any product or part of the product that is defective because of improper workmanship and/or material, under normal installation, use, service and maintenance. If FlexiSpot is unable to provide a replacement and repair is not practical or cannot be completed in a timely fashion, FlexiSpot may elect to refund the purchase price in exchange for the return of the product. In the rare event that your FlexiSpot product is defective, we will provide you with a replacement item shipped at no cost to you within the continental United States. The shipping method for replacement products is FedEx Ground, but expedited shipping is available if you choose to pay the additional expense. In addition, you will need to pay the shipping costs if any products need to be shipped to you at an address outside the continental United States.

REPAIR OR REPLACEMENT (OR, IN LIMITED CIRCUMSTANCES, REFUND OF THE PURCHASE PRICE) AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. FLEXISPOT NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO CREATE FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH THIS PRODUCT.

FlexiSpot Limited Warranty

What is Not Covered?

Our limited warranty does not cover any problem that is caused by:

1. Conditions, malfunctions or damage not resulting from defects in material or workmanship.
2. Conditions, malfunctions or damage resulting from normal wear and tear, improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration.
3. Accessories, connected materials and products, or related products not manufactured by FlexiSpot.
4. Conditions, malfunctions or damage resulting from failure to follow the instructions and guidelines relating to the product's intended use.

Our limited warranty is void if a product is returned with removed, damaged or tampered labels or any alterations (including removal of any component or external cover).

How to File a Claim?

In order to receive the benefit of our limited warranty, you need to process your claim in compliance with the terms of this limited warranty and follow proper return procedure. To request warranty service, please contact customer service via email at contact@FlexiSpot.com or toll free at 855-421-2808. You will need to provide the sales receipt or other evidence of the date and place of purchase for your FlexiSpot product.

Implied Warranties and Limitation of Damages

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES (INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY, AND FLEXISPOT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS OR REVENUE, RESULTING FROM ANY BREACH OF EXPRESS OR IMPLIED WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, EVEN IF FLEXISPOT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some jurisdictions do not allow limitations on the duration of an implied warranty or the exclusion or limitation of special, indirect, incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Governing Law

This Warranty shall be governed by the laws of the State of California, USA, without giving effect to any conflict of laws principles that may provide the application of the law of another jurisdiction.

How State Law Applies

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.