

FlexiSpot

 
MASSAGE CHAIR OB100/OB101 OPERATION INSTRUCTIONS

SAVE THESE INSTRUCTIONS

Website: www.flexispot.com

Tel: 1-855-585-5618

Address: 6475 Las Positas Rd, Livermore, CA 94551

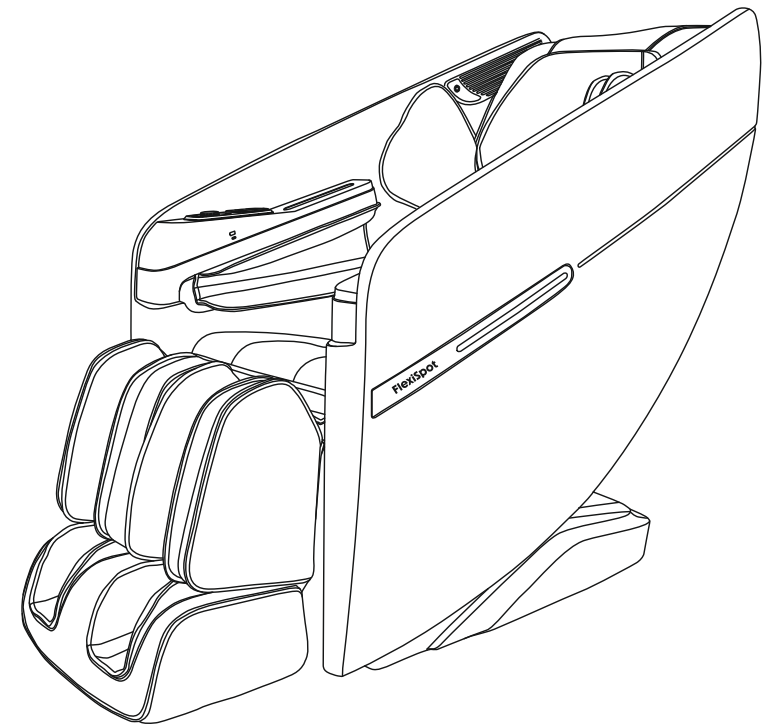

Please read this instructions completely before using this unit

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

CONTENTS

Before Use

Safety Precautions ----- 02-04
Place Massage Chair -----05-06
Before Use ----- 07-08
Product Structure ----- 09-13

Usage Method

Operation Instructions ----- 14-18

Maintain



Cleaning and Maintenance ----- 19

Important


Troubleshooting -----20
Product Specifications-----21

Safety Precautions (must be observed)


- Please read all relevant instructions carefully before use.
- The notes marked here will help you to use the product safely and correctly.
- In order to clearly indicate the extent of harm and damage, precautions are divided into **"Warning"** and **"Caution"** that may be caused by incorrect use. Both of them are important for safety and must be followed.

 Warning	Indicates that serious injury or death may result from improper use.
 Caution	Indicates that misuse may cause minor injury or property damage.


- Please pay attention to the symbol before each safety item.


 Forbidden	Absolute prohibition
--	----------------------


The following populations should not use this product

 Forbidden	<ul style="list-style-type: none"> ■ The device is not intended for use by persons (including children) with physical disabilities, sensory or neurological impairments or who lack experience and common sense, unless they are supervised and instructed in the use of the device by those responsible for their safety. Children must be supervised to ensure they do not play with instruments. ■ Patients with osteoporosis. ■ Patients with heart disease or wearing electronic medical devices such as a pacemaker. ■ People who have a fever. ■ Pregnant women or women on their menstrual period. ■ Patients who are injured or have a skin disease. ■ When unsupervised, any children are under the age of 14 and those unconscious are not allowed to use this product. ■ People who are told by their physicians to have rest or who feel unwell. ■ People whose bodies are wet are forbidden to use this product. ■ This product has a hot surface. Persons insensitive to heat must pay attention when using this product. ■ If the supply cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or similar department
---	---


Safety Precautions (must be observed)


Important safety warnings	
 Warnings	<ul style="list-style-type: none"> ■ Do not allow children to touch any movable part of this product. ■ Use the well-grounded power supply unit suitable for this product. ■ Pull out the plug after use or before cleaning to avoid any physical injury or damage to the product. ■ Operate this product as instructed in this manual. ■ Do not use any parts or accessories which are not recommended. ■ Do not use this product outdoors. ■ Please read the Operation Instructions carefully before operation. ■ Never use this product for any other purpose not listed herein. ■ 20 minutes of usage each time is recommended. ■ Do not use this product if the cover or leather is broken or damaged. ■ Do not drop anything into this product. ■ Never fall asleep while using this product. ■ Do not use this product if you are drunk or feel unwell. ■ Do not use this product within one hour after a meal. ■ Do not use this product with excessive force to avoid any injury.


Safety precautions	
 Caution	<ul style="list-style-type: none"> ■ Check whether voltage is consistent with the specification of this product. ■ Never insert or pull out the plug with a wet hand. ■ Do not let water flow into this product to avoid electric shock or cause damage to this product. ■ Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden. ■ Do not damage the wire or modify the circuit of this product. ■ Do not clean live parts of this product with a wet cloth such as a power switch and plug. ■ Be away from this product in case of power failure to avoid any injury if power is restored suddenly. ■ Stop using this product at once while it works abnormal, and consult your local supplier. ■ Stop using this product if you feel unwell, and consult your health care practitioner.

Storage conditions	
 Caution	<ul style="list-style-type: none"> ■ Storage room temperature: 5 °C to 40 °C. ■ Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.


Safety Precautions (must be observed)


Product service and maintenance	
 Caution	<ul style="list-style-type: none"> ■ This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission. ■ Do not forget to turn off the main power switch after usage. ■ Do not use this product if the power socket becomes loose. ■ If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment. ■ Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine. ■ Please clean this product with dry cloth. Never use thinner, benzene or alcohol. ■ The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed. ■ Do not use a sharp object to stab at this product. ■ Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving. ■ Please use this product intermittently. Do not keep it working continuously for a long period of time.

Operating environment	
 Caution	<ul style="list-style-type: none"> ■ Do not use this product in a very moist environment such as the bathroom. ■ Stop using this product immediately when the ambient temperature changes sharply. ■ Do not use this product in any heavily-dusty or caustic environment. ■ Do not use this product in a small space or a place without good ventilation.

Solutions to ordinary malfunctions	
 Caution	<ul style="list-style-type: none"> ■ If the motor sounds during operation of this product, this is the normal operation sound. ■ If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on. ■ If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.

 Place massage chair

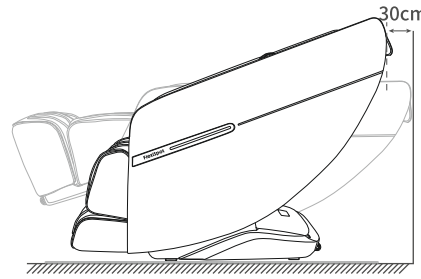Installation placement
<p>Make sure there is enough space for the massage chair can be tilted at least 30 cm.</p> <p>Do not expose the massage chair directly to high temperature environment due to sunlight(such as: in front of heating equipment), and place it to where can avoid high temperature and direct sunlight. It is recommended to lay a soft cushion for long-term use in a designated location. When laying the cushion, the size of the cushion should be enough to cover Keep the range where the machine touches the floor and the range where your feet touch the floor.</p>

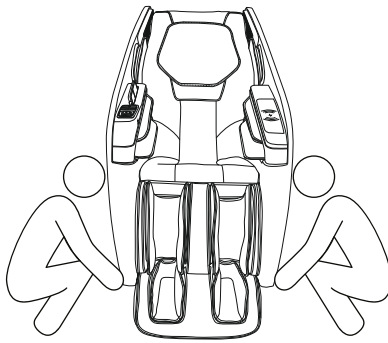 
Product lift instruction
<p>Require team work to lift and move the chair to avoid injury.</p> <ol style="list-style-type: none"> 1. Please lift the massage chair to move it on vulnerable ground such as wooden floor. 2. When moving on a similar wooden floor, it is recommended to lift it. Avoid damage to the casters. When the floor is lifted and moved to the designated position, be careful to keep your hands out of the way to avoid injury, and be careful of your feet being crushed. Do not let go of the unit until the unit is completely flat, the floor may be damaged, therefore, it is recommended to place mats, etc. on the floor.


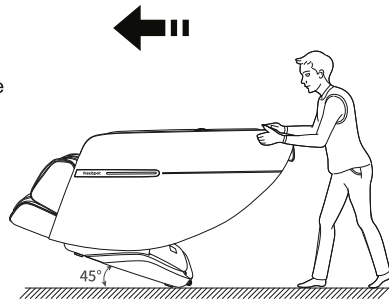 
Place massage chair

Move method

Use the rear casters to move the massage chair. Move the chair by tilting it down and backward about 45° as shown in the diagram.

 
NOTE: Excessive force to tilt will cause the chair to tip over completely and product damage.

1. Before moving, please shut down the machine properly to reset the whole machine, and then cut off the power.
2. Please keep the chair vacant when moving. (People, pets or clutter will not be able to stay on the chair.)
3. When moving, do not cross a drop barrier higher than 2mm or a gap greater than 5mm.
4. When using casters to move this product, single continuous movement is not supported; if the distance exceeds 50 meters, please make this product move slowly and evenly.



How to disassemble and use headrest cushion and backrest cushion


Using a headrest cushion can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (recommended to use a headrest cushion). The backrest cushion and the backrest are connected by a zipper (1), and the headrest cushion and the backrest cushion are connected by a zipper (2).

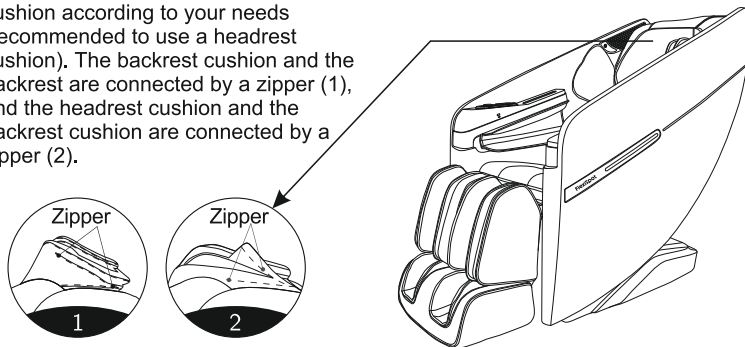

Before Use

Calf installation instructions

 
1. Insert the wire of the calf and the air pipe into the front socket of the steel frame assembly (Figure 1).
2. Then push the connected wire and air pipe into the hole in the backrest frame (Figure 2).
3. After the wire docking is completed, open the calf fixing covers on both sides of the steel frame assembly (Figure 3).
4. Lift the calf into the notch, close the fixing covers, and secure it in place with 2 pieces screws (Figure 4).

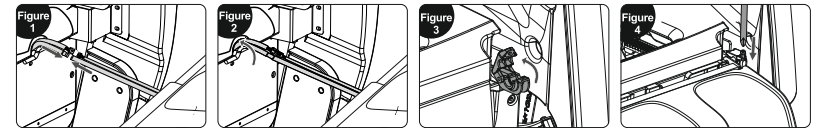


Turn on the power

⚠ Caution

 
Plug in power cord

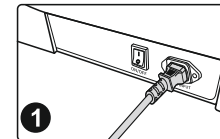

Schematic diagram of power on

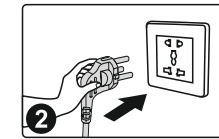 

Turn on the power switch ("I" position)

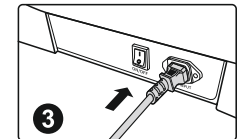 


⚠ Warn

- Please check whether the power cord and power plug are damaged before use.
- Please supply power to this product in accordance with the working power requirements of this product's calibration.
- It is strictly forbidden to use a power supply other than the nominal power supply of this product.
- It is strictly forbidden to connect various power conversion devices to supply power to this product without authorization.

Before use


Check around

 Make sure that there are no people, pets and other objects around the unit.

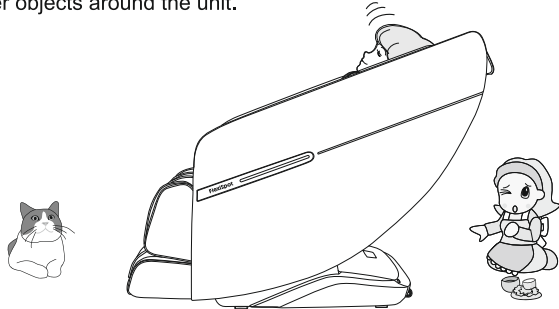


Make sure there are no foreign objects in the gaps of the machine

 Before massaging, make sure that no foreign objects are caught in the legs, feet, etc. Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule. Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.


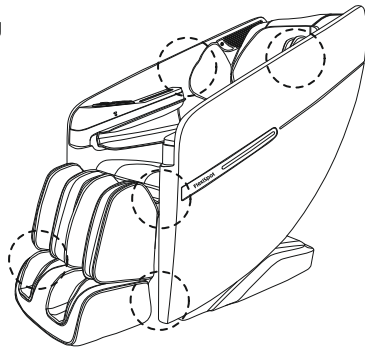


Product Structure

 Parts description

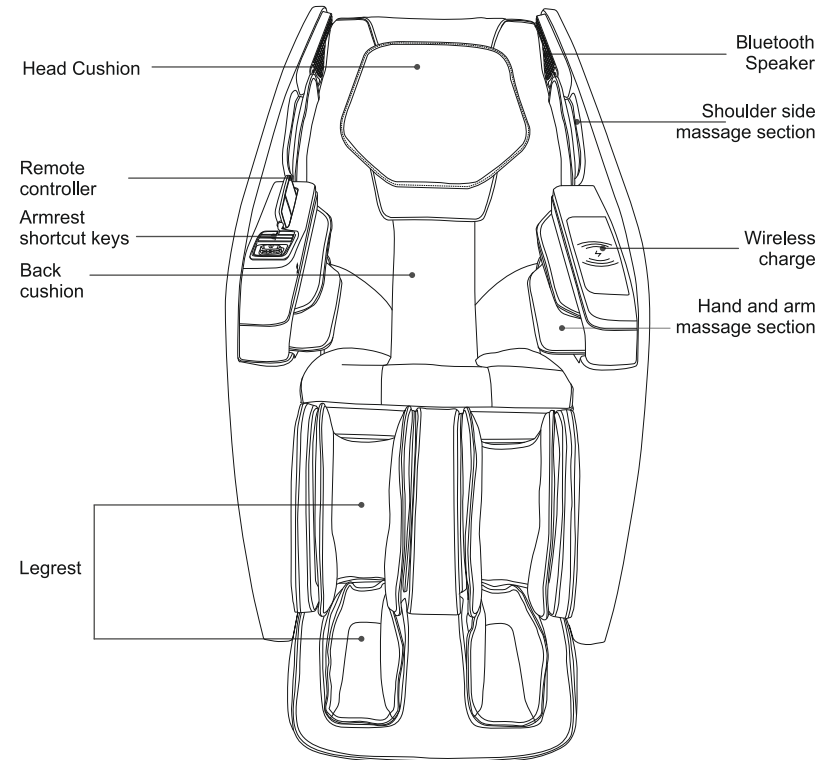


  I. Introduction of the remote controller

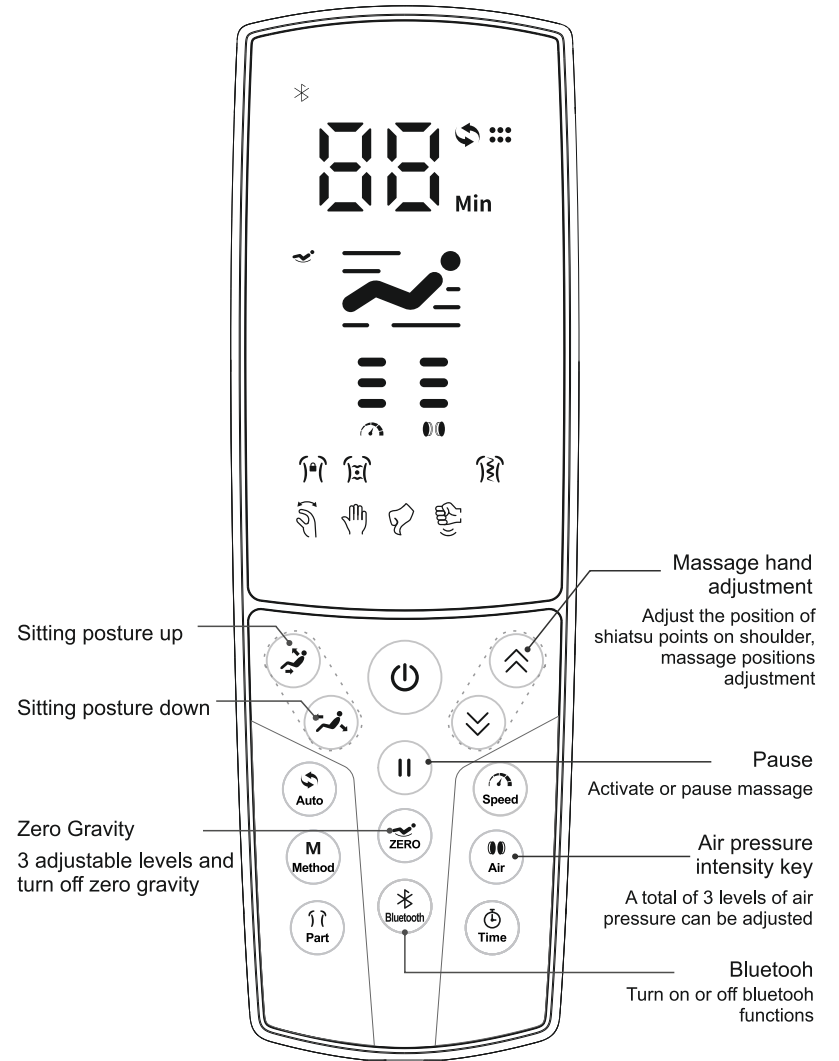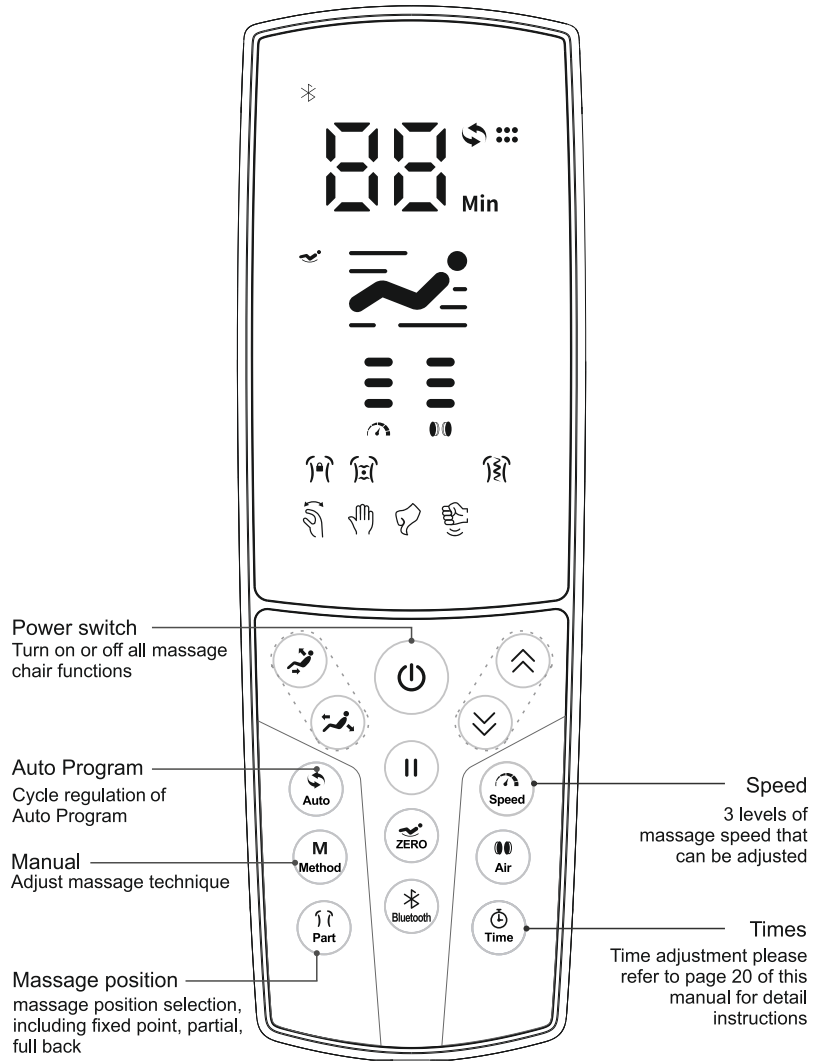

Product Structure

 II. Introduction to Armrest Shortcut Keys

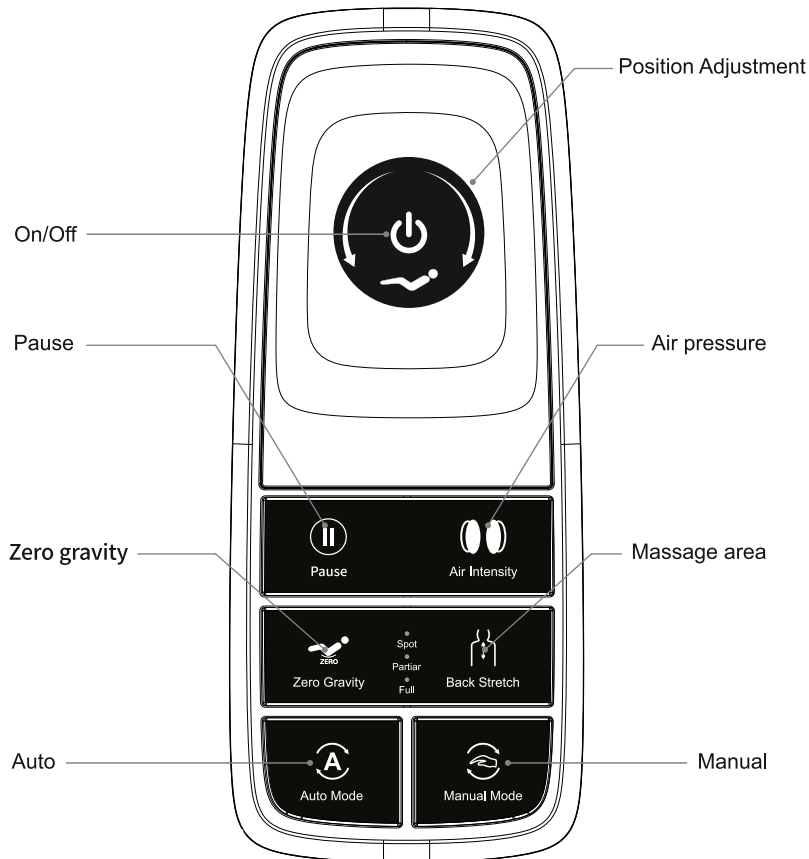


Product Structure

Function	Description
	Power key: Press and hold this key to turn ON/OFF the massage.
	Linkage lying knob: By rotating this knob clockwise, the backrest will move downward slowly and the legrest will rise slowly; by releasing it, such down/up action of the backrest and the legrest will be stopped.
	Linkage sitting knob: By rotating this knob counterclockwise, the backrest will rise slowly and the legrest will move downward slowly; by releasing it, such up/down action of the backrest and the legrest will be stopped.
	Press this key during massage, and all the massage actions will be suspended at once. (Please note the massage chair will turn off after 20min). Then press this key again to restore all the previous massage actions.
	Air pressure key: Each time the button is pressed, it switches to an air pressure mode, with a total of four modes (Including turning off air pressure), which can be switched cyclically.
	There are four automatic modes (Including turning off zero gravity) which can be switched according to your needs.
	Message area key: Press this button to switch the back stretch mode
	Auto mode key: Each time the key is short pressed, it will be switched to next automatic massage function.
	Manual key: Each time the key is short pressed, it will be switched to next technique massage function.

Operation Instructions


III. Start message


 
1. Press the power button  to start the massage.

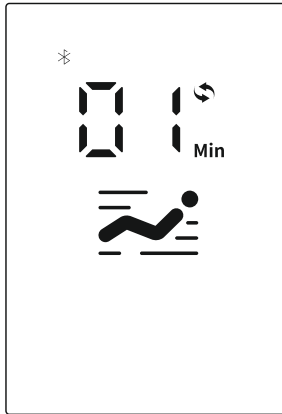


Power on status diagram

   2. Automatic angle adjustment.
3. Automatic human shoulder position detection, keep the sitting posture fit with the massage chair.
4. Shoulder position fine-tuning, if the detected position deviates from the actual shoulder position, adjust it to the appropriate position through the up and down buttons of the shoulder position, there are 11 shoulder positions in total. If there is no adjustment within 10 seconds, it will enter into the massage function.

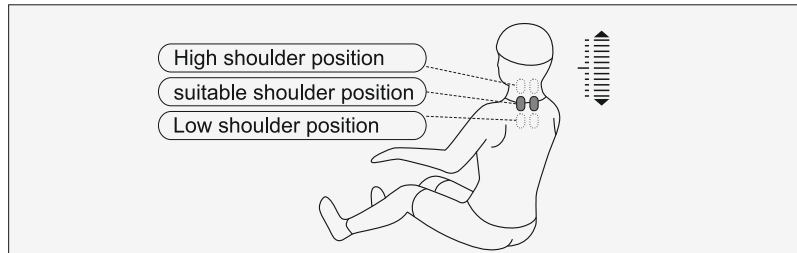






In the process of detecting shoulder position and massage position, press and the up  or down  keys to adjust the shoulder position when there's beep sound.

Note: You can select the automatic function during the booting process. Repeatedly selecting Auto Program button  to skip the booting process and enter the massage directly.

Operation Instructions

IV. Automatic message

1. Automatic Program Selection


- (1) Press the hand controller's automatic program button  to initiate the massage with the selected automatic program.
- (2) Automatic Program Switching:
 - 1) Press the hand controller's automatic program button ; the screen's numerical display  will start flashing (the program switch will automatically close if there is no operation within 5 seconds).
 - 2) During the flashing period of the numerical display  on the screen, press the hand controller's automatic program button  again to switch to another automatic program. After making the selection, the massage chair will begin the massage.

• Automatic message

Function	Description	Display
Comfort	The most comfortable massage experience.	01
Relax	The depth of the soft and comfortable massage, relieve body fatigue.	02
Rocking	Through the massage chair rocking back and forth, mimic the function of rocking chair, with unique massage method, relieve fatigue and fall asleep easily.	03
Back&waist	Focus on back and waist massage	04
Shoulder&neck	Focus on shoulder and neck massage	05
Full body	Deep massage to rejuvenate the body	06
Spinal massage	Focus on spine massage and fullyrelieve the fatigue and pain from your body	07
Ache relieve	Deep massage on the acupressure pointscan effectively relieve ache.	08






Operation Instructions

V. Manual massage(Please use this function after power on)

1. Massage technique, press the remote manual key  , you can choose the massage technique.

(1) Massage technique: kneading, tapping, kneading, shiatsu, knocking and stop, press the manual key to adjust.










(2) Information interface method display.


Function	Message roller adjustment
Stop	Press this key to massage without any technique.
Knead 	3 adjustable massage speed
Tap 	
Knead&Tap 	
Shiatsu 	
Knock 	

2. Massage speed, press the speed key  , you can adjust the massage speed.

(1) The massage speed is optional, 1st is the slowest, and 3rd is the fastest.


 



(2) Information interface speed display.

Speed		
Level 1 	Level 2 	Level 3 
		
		

3. Press the position key  , you can select the massage position.


(1) Massage parts: fixed-point, partial, full back; Cyclic switching.

(2) Information interface part display.

Function	Description		
Spot 	Massage at a fixed spot.	When choosing fixed-point and partial massage area, you can adjust the massage area by pressing and hold the "up key" and "down key" on the remote	
Partial 	Massage at a fixed part.		
Full 	Round trip massage on full back.		










Operation Instructions

VI. Air pressure massage(Please use this function after power on)



1. Press the air pressure key  , you can adjust the air pressure intensity and turn off the air pressure function.

(1) Air pressure intensity: After the air pressure function is turned on, the air pressure intensity can be adjusted, a total of 3 levels are adjustable, 1 means the weakest intensity, and 3 is the strongest.

(2) Information interface air pressure display.

Air		
Level 1 	Level 2 	Level 3 
		
		

VII. Other manual functions


Function	Button	Description	Display
Timing	 Time	Time adjustment, every time to press will add 5 minutes, can not exceed 30 minutes, if more than 30 minutes return to the minimum time value.	


VIII. Angle adjustment (Please use this function after power on)

1. Zero gravity:

Press the handset zero gravity key  , each time you press it, change a zero gravity mode, total three modes and off mode.

2. Full body angle:


Press and hold the seat-down key  of the remote to start adjusting the angle of the massage chair downward, the backrest will descend, and the footrest will rise, and issued "di...di..."until it reached the top, and the adjustment will stop when the button is released;

Press and hold the seat-up key  on the remote to start adjusting the angle of the massage chair upward, the backrest rises, and the footrest descends, and issued "di...di..."until it reached the top, and the adjustment stops when the button is released.


When the adjustment reaches the limit, the adjustment will stop and a beeping sound will be issued.

Operation Instructions

IX. Operation Instructions for Bluetooth Speaker Play

 
1. Press the air Bluetooth key  , you can turn on/off the bluetooth function.
2. Enter the smart device main menu. Open "Settings" and select the "Bluetooth" option. Open "Bluetooth", and Bluetooth will automatically "Search for a New Bluetooth Device".
3. The smart device will search for the corresponding Bluetooth model (FlexiSpot-OB100/FlexiSpot-OB101). Click the "Match" button. If you are asked whether to match with the device, you just select "Match" to complete matching.
4. Turn on "Music Player" in the smart device and select the song to play.

X. Massage close


Press the remote controller switch key " " to turn off. when the massage time is up, the massage automatically turns off all massage functions, and the backrest mechanism and leg mechanism do not reset.

Cut off the power supply of the whole machine, as shown in the attached picture (the schematic diagram of the power cut off of the whole machine).


Turn off the power switch ("0" position)

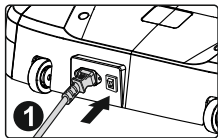

Schematic diagram of unplugging the power plug

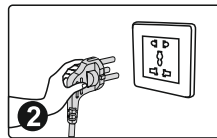 

Unplug the product from the power cord

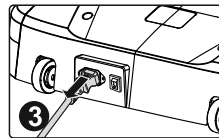 

Cleaning And Maintenance

Clean PU leather and plastic parts

Wipe the leather with a soft, dry cloth.

- Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.
- When using commercially available leather care products (rags), please follow the instructions for use.
- If the PU leather is particularly dirty, wipe it by the following methods.

- ① Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.
- ② Use the above soft cloth to wipe the leather surface.
- ③ Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.
- ④ Wipe with a wrung soft cloth.
- ⑤ Let it air dry naturally.

 
- When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.

- Do not use a hair dryer to dry the surface.

- As the color of the fabric will stain the surface of the PU leather, be careful when wiping the chair with denim and colored fabrics.

- Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.

- PU leather may be discolored, so when using hair dye, please cover the touched part with a towel.

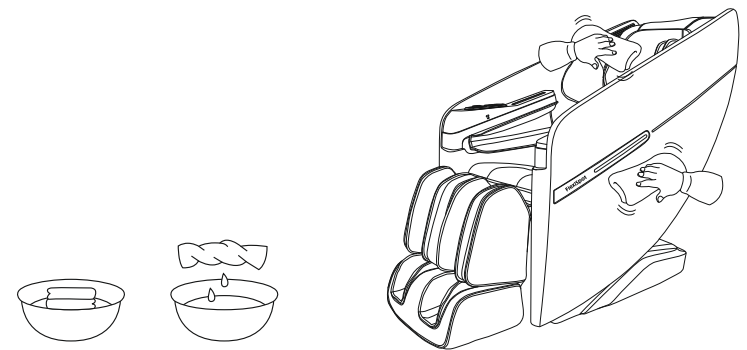

Troubleshooting

Fault	When the calf mechanism or the backrest reaches a certain position, press the corresponding adjustment button and it will no longer change, and a continuous "beep, beep" sound will be emitted.
Solution	Due to product structure design and ergonomic requirements, this product has a limited protection design for the limit state of attitude adjustment. At the same time, a reminder sound will sound when the limit is reached.

Fault	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage program or other working state. If it is not operated, the machine will automatically shut down after 20 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.

Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal phenomenon. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.

Fault	The massage wheel did not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.

Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or doubts about this product.

Product Specification

Model: OB100/OB101
 Name: Massage Chair
 Rated voltage: 110-120V~ 60Hz
 Rated power: 100W
 Rated time: 20min
 Safety structure: Class I