 


Live like new

Website: www.flexispot.com

Tel: 1-855-585-5618

Address: 6475 Las Positas Rd. Livermore, CA 94551

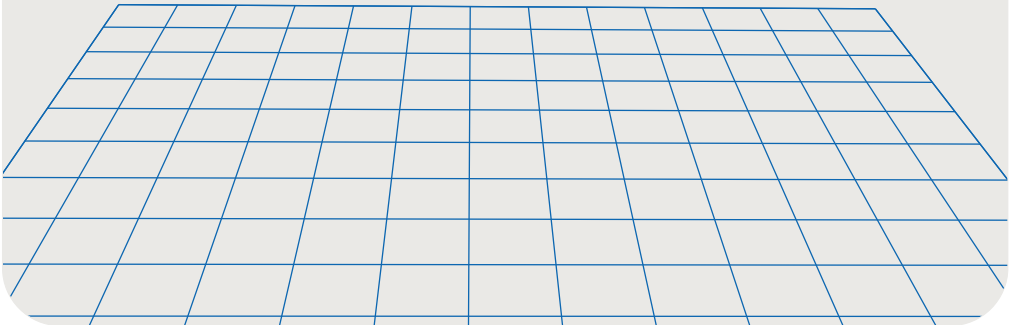

FlexiSpot

Item No. N3-F

User Manual

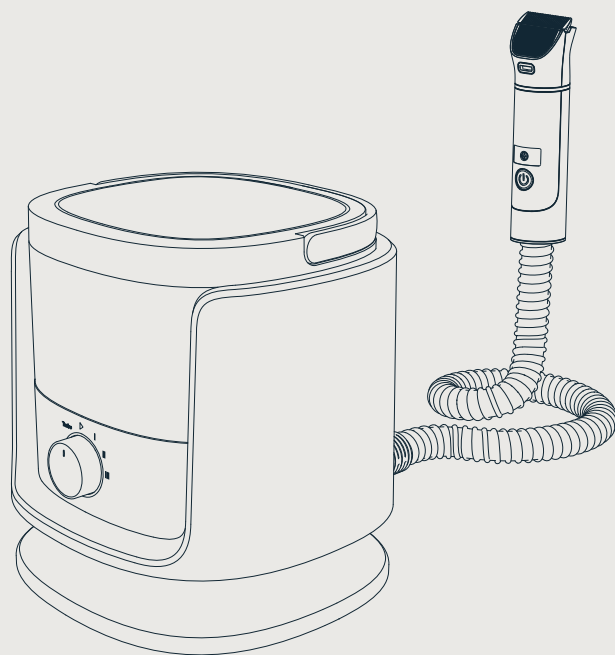 


Table of Contents

04

Safety Warnings

05

Precautions

06

In the Box

07

Vacuum Device

08-09

Use of Accessories

10

How to Use

11-13

Care and Maintenance

13

Specifications

14-15

Troubleshooting

16

Limited Warranty

17

Limited Warranty

Safety Warnings

 
1. This product is for household use only. Use this product solely for domestic purposes, avoiding commercial or industrial use, outdoor, or wet conditions.
2. Supervised Usage: Operate in a secure environment under supervision by someone aware of the product's safe use. Never let children or individuals with impaired thinking skills use it unsupervised.
3. Caution around Children and Pets: Take extra care around kids and pets. Prevent them from playing with or near the product.
4. Proper Disposal and Storage: Dispose of packaging materials properly and keep them away from children and pets. Avoid using or storing the product in wet places like outdoors or bathrooms.
5. Electrical Safety: Avoid contact with wet hands or using the product on wet surfaces. Do not use if the power cord or plug is damaged.
6. Product Handling: Refrain from disassembling the product, using it to pick up flammable liquids or high-temperature objects. Avoid using it in flammable environments or putting heavy objects on top.
7. Suction Port Safety: Keep fingers and foreign objects away from the suction port to prevent injury or product failure.
8. Filter Maintenance: Regularly clean the dust cup and filter to prevent product failure or accidents. Avoid using aromatic chemical products on the filter.
9. Maintenance Precaution: Disconnect from the power supply before cleaning or maintaining the product to prevent electric shock or injury.
10. Overheating Prevention: The device has built-in overheating protection. If the motor temperature rises unusually or if the air inlets are blocked, the device will automatically stop. In such cases, remove the dust container and clean the air inlets or filter. Wait for 60 minutes before turning the device back on.
10. Filter Installation: Ensure proper installation of the filter to prevent product malfunction.
11. Accessory Safety: Be cautious of sharp edges on accessories. Pay attention to safety when using accessories like the deshedding tool and electric clipper.

Note: The flexible hose contains electrical wiring and should not be used to pick up or clean water. Regularly check for damage and refrain from using if the hose is compromised.


Precautions

- Do not operate or unplug the power cord with wet hands to avoid malfunction and electric shock. PLEASE FOCUS ON THIS POINT.
- Please do not use it in places with smoke and other flammable stuff. Because it may cause fire and explosion, please do not inhale highly flammable liquids and combustibles.
- For the first use, a peculiar smell may occur. Please do not worry. It will disappear shortly and does not cause side effects on the human body.
- Please stop using the product if a burning smell appears and persists.
- Please remain the dust container and filter in a clean state. Malfunctions and accidents may occur if they are dirty.
- Before maintenance, ensure to cut off the power and unplug the cord. If the device power turns on in the maintenance process, a risk of electric shock, accidents, or injuries may arise.
- Please ensure the filter is installed correctly on the device. If the filter is removed or installed incorrectly, it will be one of the reasons for malfunction.

In the Box

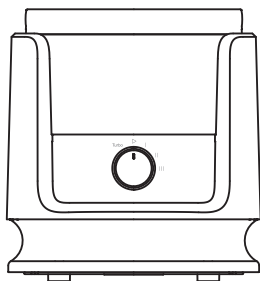


Vacuum Device

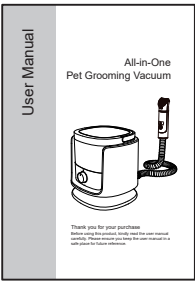

User manual



 
Slicker combo

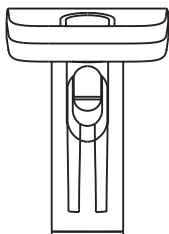

Grooming combo



 
Trimmer




Massage brush



 2 in 1 flat brush

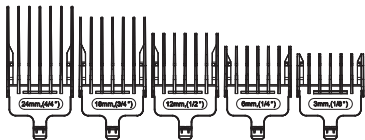


Clipping Comb

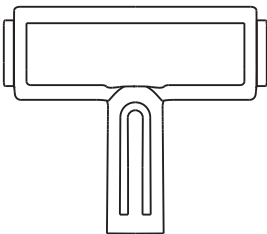 


Pet hair roller brush



 Paw trimmer



Nail grinder

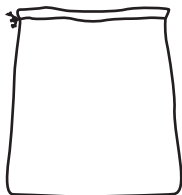 


Storage Bag



Hose

 
Vacuum Device

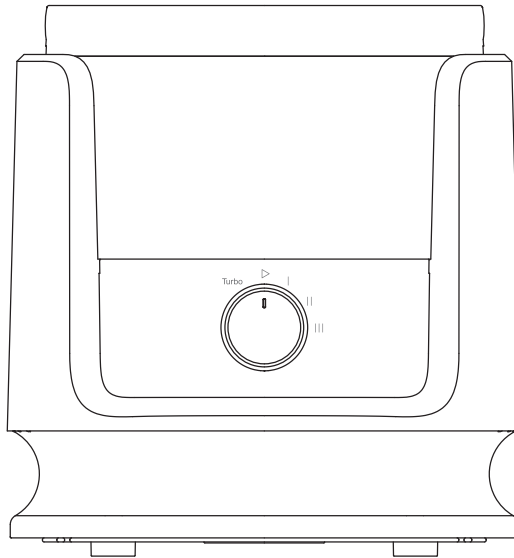

Functional description

1. Rotate to “ Turbo ” is the turbo mode, and the status of the light circle is all on and run;
2. Rotate to “ ▸ ” is the standby mode, and the status of the light circle flash three times, then off;
3. Rotate to “ | ” is the 1 level speed, and the light circle is fully on and flash slow, brightness is 20%;
4. Rotate to “ || ” is the 2 level speed, and the light circle is fully on and flash slow, brightness is 100%;
5. Rotate to “ ||| ” is the 3 level speed, and the light circle is fully on and flash faster, brightness is 100%.

 
Use of Accessories

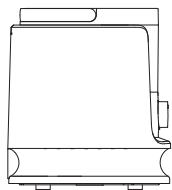

Vacuum Device



 
Hose

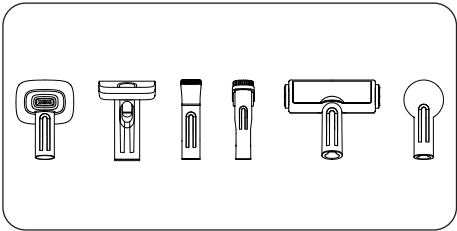


Grooming Brush

Clean the floating hair and dust on the pet's fur.
Comb the pet's hair to make the hair more fluffy.

 Press the button down

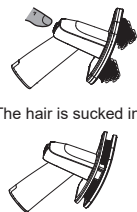


The hair is sucked in

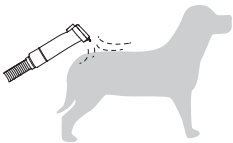 

Deshedding Tool


Remove loose hair quickly.

 Note: Please be careful about the sharp edge of the deshedding tool to avoid skin scratches caused by excessive force.

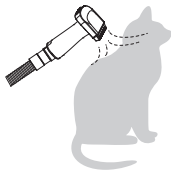


Pet hair roller brush

 Clean the hair falls on clothes, sofas, and carpets.

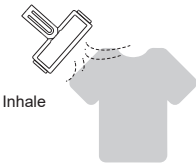

2 in 1 flat brush

 Suck the hair falls between seams of sofas and carpets.

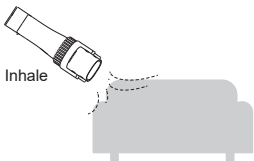

Massage brush

It can remove the residual floating hair and miscellaneous hair on the pet.
Grooming is good for blood circulation and skin metabolism.



Trimmer

 
Pet paw trimmer

Shaved and inhaled the pet hair on the sole of the pet, no residue, foot hair will not fly around.

Note:

Please be careful with soft parts of pet skin.

Don't overexert, cause the cut to the skin

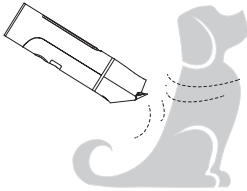


Pet paw trimmer

Shaved and inhaled the pet hair on the sole of the pet, no residue, foot hair will not fly around.

Note:

Please be careful with soft parts of pet skin.

 Don't overexert, cause the cut to the skin.


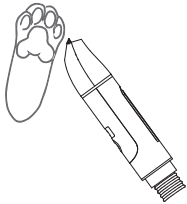


Pet nail grinder

Polish your pet's nails to achieve cosmetic results.

Attention:

  Do not sand too much to avoid damaging pets.

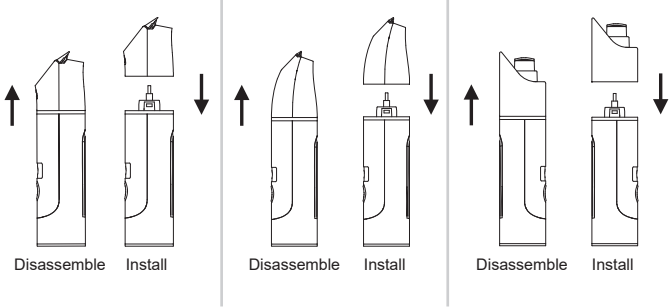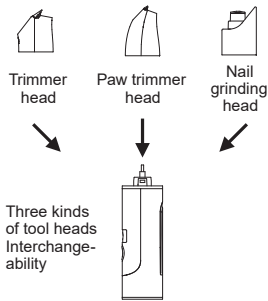


Guide combs

For pet hair styling, according to different hair type needs, change the hair comb of different lengths (optional use).

Attention:

 Hair comb is scattered and small, please keep it properly when not in use, beware of loss.

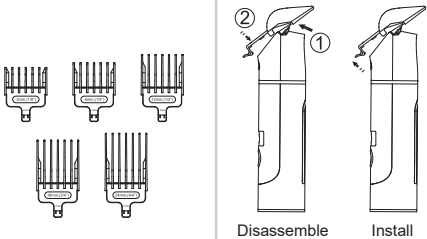


How to Use

Helpful Tips:


Pets might feel afraid or resistant during their initial encounters with the vacuum cleaner. To assist them in adjusting, consider setting the device to the 1 speed mode during the first stage to allow pets to acclimate over approximately two weeks.



 
Put the dust container along the direction of the arrow in the figures

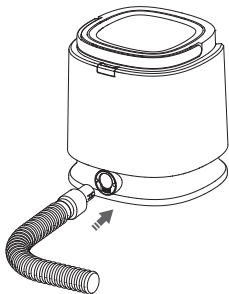

Rotate to lock the hose on the machine

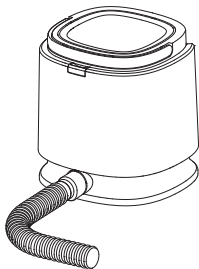 


Get the hose installed in place

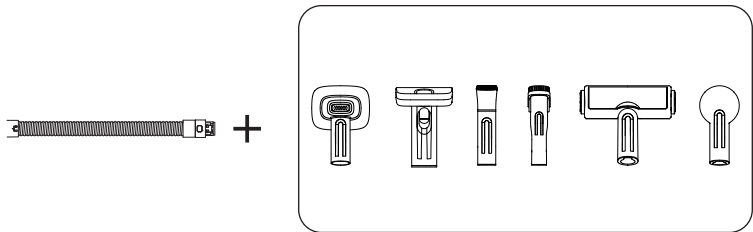 


Adjust the required attachment

Care and Maintenance

 
Clean the Dust Cup

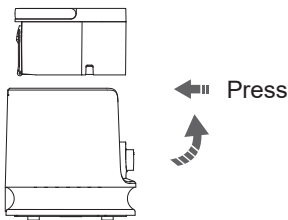

 Follow the arrow direction in the figure to take the dust container out.

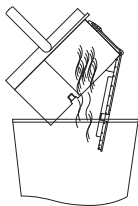


 Open the dust container and empty the trash.

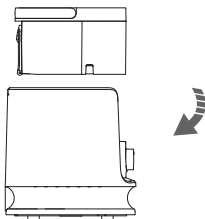


Follow the arrow direction in the figure to reinstall the dust container.

 
Clean the Electric Clippers



 
Exert a force to take off the blade by the direction in the figure.

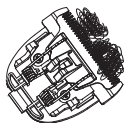

Clean the debris from the blade.

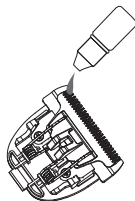 


 Add lubricant to the blade (Lubricant unincluded).

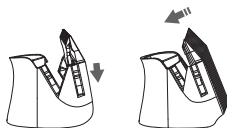


Align the bottom of the blade in place and press it down to reinstall.

 The Flexi filtration system consists of a HEPA filter and a sponge, which can be removed and cleaned separately, but will need to be replaced after 6-9 months.

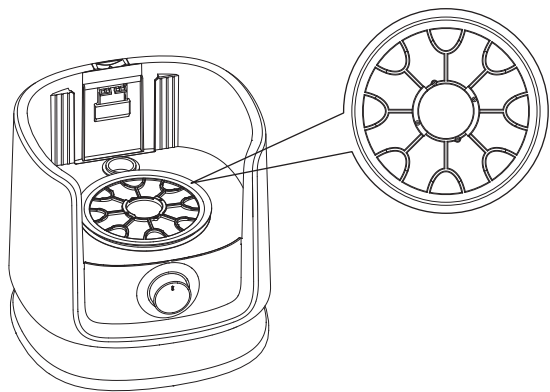

Clean the Sponge Filter

 
Remove the dust container and detach the sponge from the container

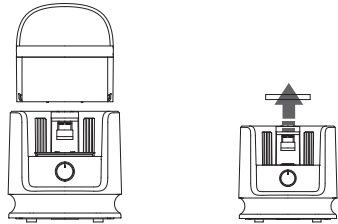


Wash the sponge with running water and drain it after washing.



 Place it in a well-ventilated place for at least 24 hours of drying.

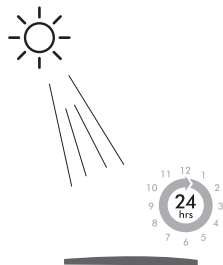

 Install the sponge back into the container after it is dried. Ensure it has been installed.

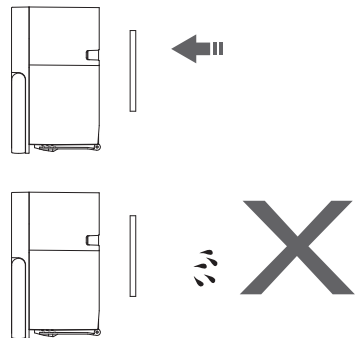

Notes:

- It is necessary to clean the filter with cold water at least every other month.
- The maintenance period is different based on the use frequency and condition. Clean the sponge when it gets dirty.
- Disconnect the power supply and unplug it from the socket during cleaning.
- Be sure to install a sponge filter after drying.

Specifications

Vacuum Device

Specifications	Details
Name	Pet Grooming Vacuum
Model	N3-F
Dust Cup Capacity	3.5L
Power	350W
Input	60Hz
Rated Voltage	AC 120V
Rated Frequency	60Hz
Vacuum (kPa)	1 speed mode ≥ 3 kPa 2 speed mode ≥ 6 kPa 3 speed mode ≥ 8 kPa Turbo mode ≥13 kPa
Product Size	10*9.64*10.7 inches
Weight	5.77 lbs
Hose Length	5.74 feet
Wire Length	7.87 feet

Troubleshooting

Please stop using the product at once if any abnormal situation occurs during the use process. Below are the troubleshooting problems for your reference.

#	Problem	Reasons	Solutions
1	The vacuum cleaner does not turn on properly	The plug is not inserted correctly	Plug it back in
		The switch button is not turned on	Press the switch button to turn on the vacuum
		The vacuum is in a state of overheating protection	Check whether there is a blockage in the soft tube or the air inlet parts. And clean the dust container, sponge filter, and HEPA. Then install them back into the vacuum and wait for 60min to turn it on again
		Other malfunctions	Contact customer service for help
2	Weak suction	The hose has a blockage	Clean the hose and the parts of the air inlet
		The dust container is full	Empty the dust container
		The sponge filter has a blockage	Clean the sponge filter and HEPA
		The dust container or accessories are not installed correctly	Check and reinstall the dust container and accessories according to the instructions
		The HEPA is not dry enough after washing	Only use the HEPA when it is dry enough after cleaning

3	The groomer does not turn on properly	The switch button is not turned on	Press the switch button to turn on the vacuum
		The blade / trimmer / grinder / brush has a blockage	Follow the instructions to clean the blockage on the blade /trimmer / grinder / brush
		Other malfunctions	Contact customer service for help
4	The groomer is not sharp enough	The hair is sucked up and not easy to cut	Set the vacuum cleaner to the "1 speed mode" state
		The blade / trimmer / grinder / brush has a blockage	Follow the instructions to clean the blockage on the blade / trimmer / grinder / brush
		Other malfunctions	Contact customer service for help
5	The pet does not cooperate	The vacuum is too noisy	Set the vacuum cleaner to the "1 speed mode" state
		The pet is not used to the device	Some pets may need an acclimation period of about 2 weeks

Limited Warranty

This limited warranty offered by FlexiSpot covers defects in material or workmanship in new FlexiSpot products. This warranty extends to the original purchaser only and is non-transferable. Only consumers purchasing FlexiSpot products from authorized FlexiSpot retailers or resellers may benefit from our limited warranty.

What is Covered?

FlexiSpot WhisperFlow Pet Grooming Vacuum

All pet grooming vacuum in the N3 series purchased on or after October 5, 2016 include a 2-year warranty and 30-day no-questions-asked return.

What are your Remedies?

FlexiSpot will replace at no charge to the consumer the defective parts only or, at FlexiSpot's option, replace any product or part of the product that is defective because of improper workmanship and/or material, under normal installation, use, service and maintenance. If FlexiSpot is unable to provide a replacement and repair is not practical or cannot be completed in a timely fashion, FlexiSpot may elect to refund the purchase price in exchange for the return of the product. In the rare event that your FlexiSpot product is defective, we will provide you with a replacement item shipped at no cost to you within the continental United States. The shipping method for replacement products is FedEx Ground, but expedited shipping is available if you choose to pay the additional expense. In addition, you will need to pay the shipping costs if any products need to be shipped to you at an address outside the continental United States.

REPAIR OR REPLACEMENT (OR, IN LIMITED CIRCUMSTANCES, REFUND OF THE PURCHASE PRICE) AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. FLEXISPOT NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO CREATE FOR ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH THIS PRODUCT.

Limited Warranty

What is Not Covered?

Our limited warranty does not cover any problem that is caused by:

1. Conditions, malfunctions or damage not resulting from defects in material or workmanship.
2. Conditions, malfunctions or damage resulting from normal wear and tear, improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration.
3. Accessories, connected materials and products, or related products not manufactured by FlexiSpot.
4. Conditions, malfunctions or damage resulting from failure to follow the instructions and guidelines relating to the product's intended use.

Our limited warranty is void if a product is returned with removed, damaged or tampered labels or any alterations (including removal of any component or external cover).

How to File a Claim?

In order to receive the benefit of our limited warranty, you need to process your claim in compliance with the terms of this limited warranty and follow proper return procedure. To request warranty service, please contact customer service via email at contact@FlexiSpot.com or toll free at 1-855-585-5618. You will need to provide the sales receipt or other evidence of the date and place of purchase for your FlexiSpot product.

Implied Warranties and Limitation of Damages

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES (INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY, AND FLEXISPOT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS OR REVENUE, RESULTING FROM ANY BREACH OF EXPRESS OR IMPLIED WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, EVEN IF FLEXISPOT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some jurisdictions do not allow limitations on the duration of an implied warranty or the exclusion or limitation of special, indirect, incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Governing Law

This Warranty shall be governed by the laws of the State of California, USA, without giving effect to any conflict of laws principles that may provide the application of the law of another jurisdiction.

How State Law Applies

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

