


FlexiSpot

FlexiSpot

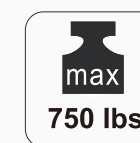

Note:
Pictures are for reference only;
actual product may vary.

Adjustable Bed Base S6TXL
User Manual



CONTENTS

COMPONENT AND ACCESSORY LIST	01
INSTALLATION	02
REMOTE BUTTON GUIDE	05
VIBRATOR MESSAGE MODE DESCRIPTION	08
REMOTE CONTROL PAIRING CODE	08
SYNC SLICE INSTALLATION	09
BATTERY BACKUP UNIT	09
TROUBLESHOOTING	10

COMPONENT AND ACCESSORY LIST

Attention:
The drawings shown below are for reference only. The finished product may be slightly different from the actual product. Please refer to the actual product. Don't hesitate to get in touch with our customer service if any tool is missing or whenever you encounter installation problems.

Required Parts List

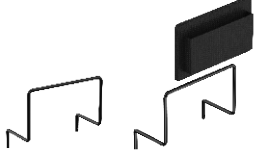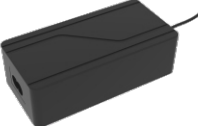1. Bed Frame*1 	2. Sidebar*2 Storage Bag*1 	3. Mattress Retainer Bar*1 Mattress Retainer Bar Cloth Cover*1 
4. Wireless Remote*1 	5. Power Adapter*1 	6. AC Power Cord*1 
7. Battery*3 	8. Adjustable Leg*6  Felt Pad*6 	

Optional Parts List

9. Sync Cable*1 	10. Sync Slice*1 	11. Battery Backup Unit*1 
--	---	--

Note:
1. The sync cable (9) and sync slice (10) are only available on the TXL bed.
2. In case of power failure, the battery backup unit (11) can be used to install two 9V batteries to power the bed.

INSTALLATION



Attention:
Safety and Precaution: The installation of the adjustable bed must always be done by 2 people and the product should always be be on a flat surface before opening.


Step 1

- 1. Carefully open the lid and take out the bed (1) , paying attention not to puncture the box with any sharp objects when opening it.
- 2. Place the bed frame (1) on a clean and level surface (as shown below).
- 3. Take out all the accessories carefully and put them aside.



Step 2


Cut off the cable tie, then connect the foot motor wire and foot vibrator wire to the control box.

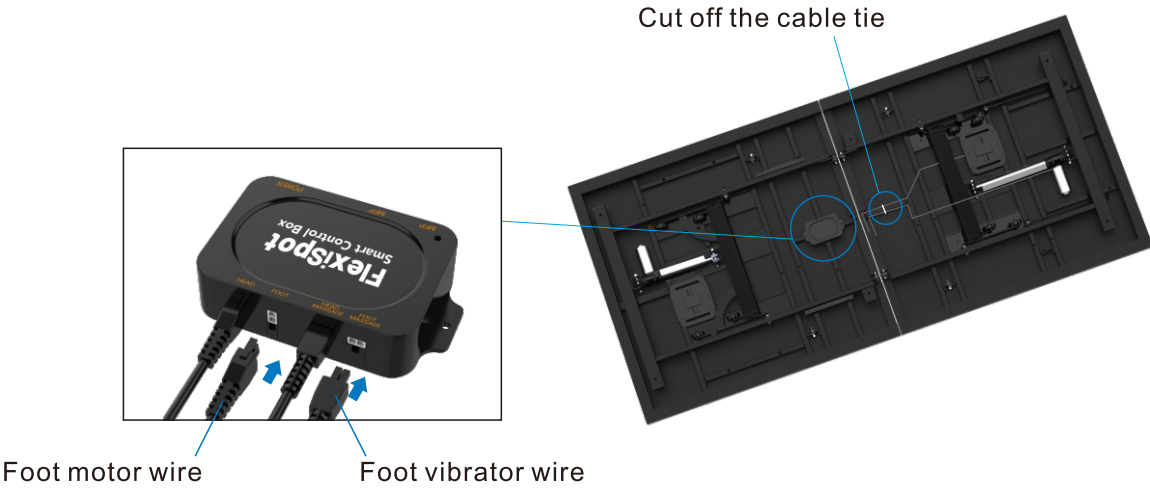

INSTALLATION


Step 3

1. Connect the adapter cable (located on the control box) to the power adapter (5).
2. Connect the AC power cord (6) to the power adapter (5).

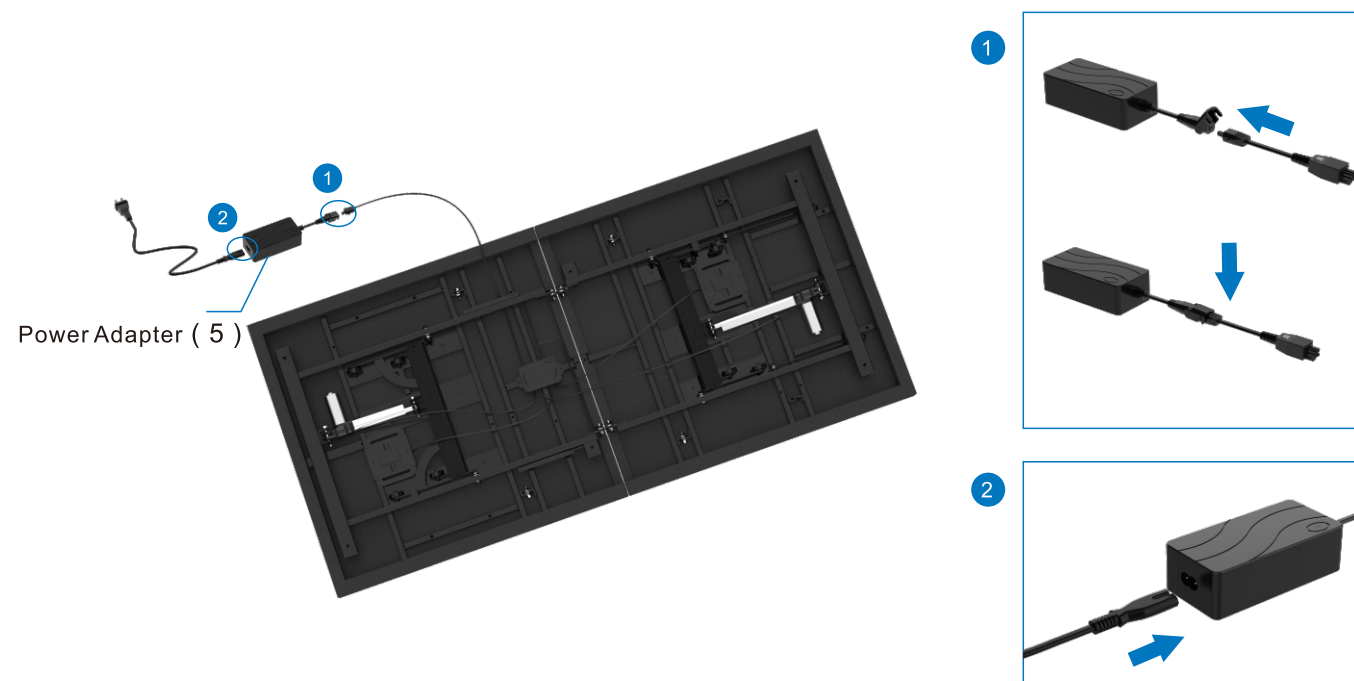

Step 4

Refer to the electrical configuration diagram (below) to verify the wiring is installed correctly.

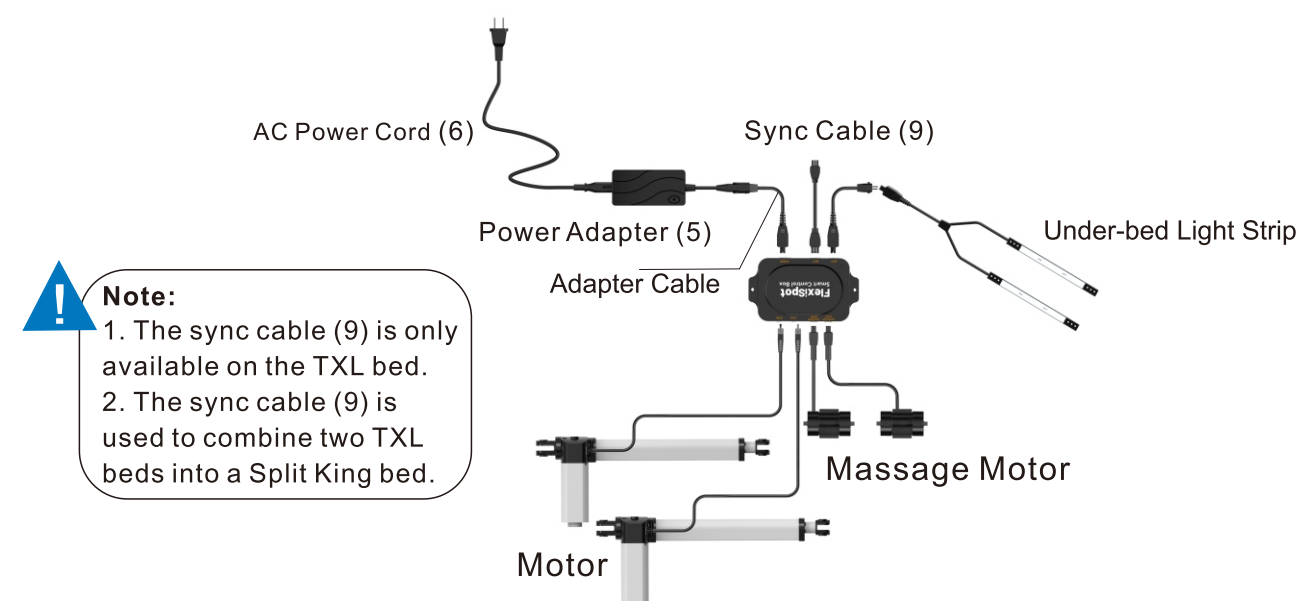


FlexiSpot

INSTALLATION

Step 5


1. With the bottom of the bed frame (1) facing up, install the adjustable legs (8).
2. Paste the felt pads (8) on the legs (8).

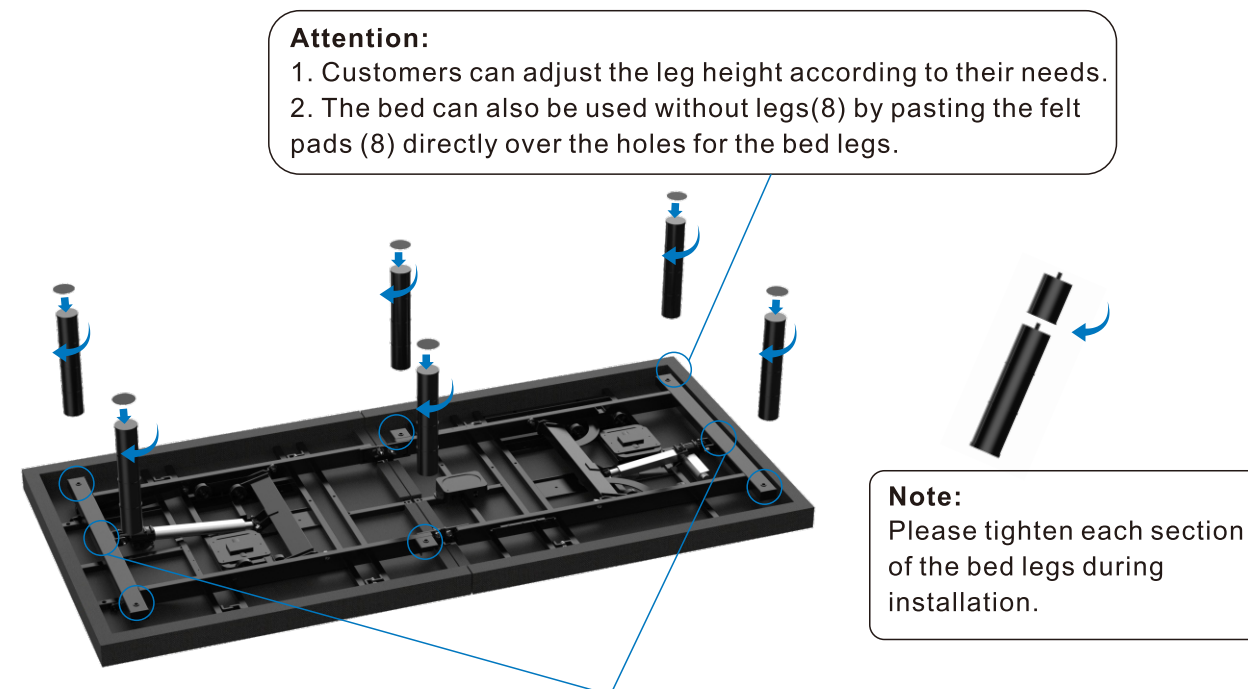

Note:
When moving this bed, please hold the thick beam instead of the bed surface.

Step 6

1. Following the directions on the sticker, flip the bed frame(1) while grasping the beam securely.
2. Install the sidebars(2) and the mattress retainer bar(3) according to the jack location.
3. Install the remote control storage bag(2) and the mattress retainer bar cloth cover(3).

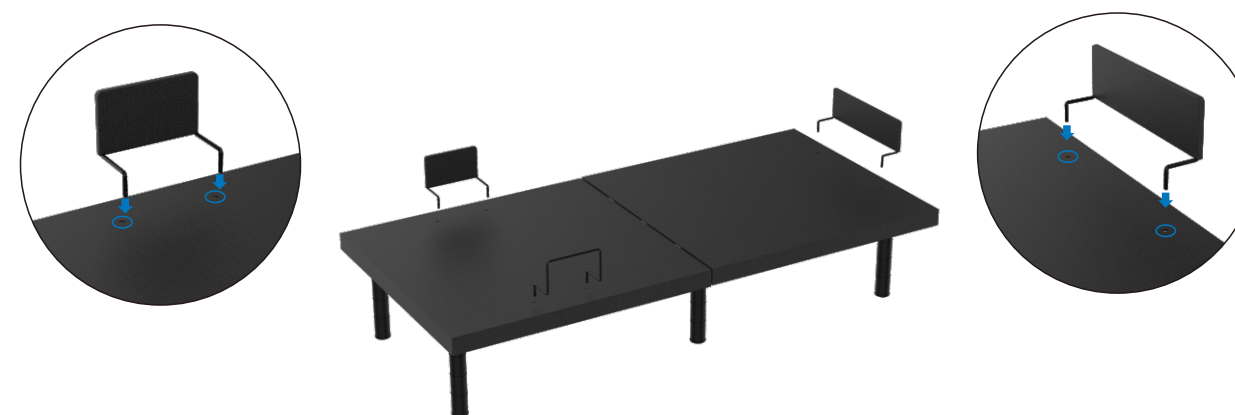

Note:
Do not drag the bed during daily use, as it might cause bending of the bed legs.

Warning:
1. The adjustable bed MUST be turned over by two people. Please handle it gently.
2. Do not concentrate stress or force on a single bed leg during the process of handling and turning over the bed.

INSTALLATION


Step 7

Plug in the AC power cord (6) into a power outlet.
When the bed is successfully powered on, the under-bed light will flash.



Note:
When the bed is in a non-flat position, do not engage in roughhousing, jumping on the bed, so as to avoid damaging the frame.

REMOTE BUTTON GUIDE

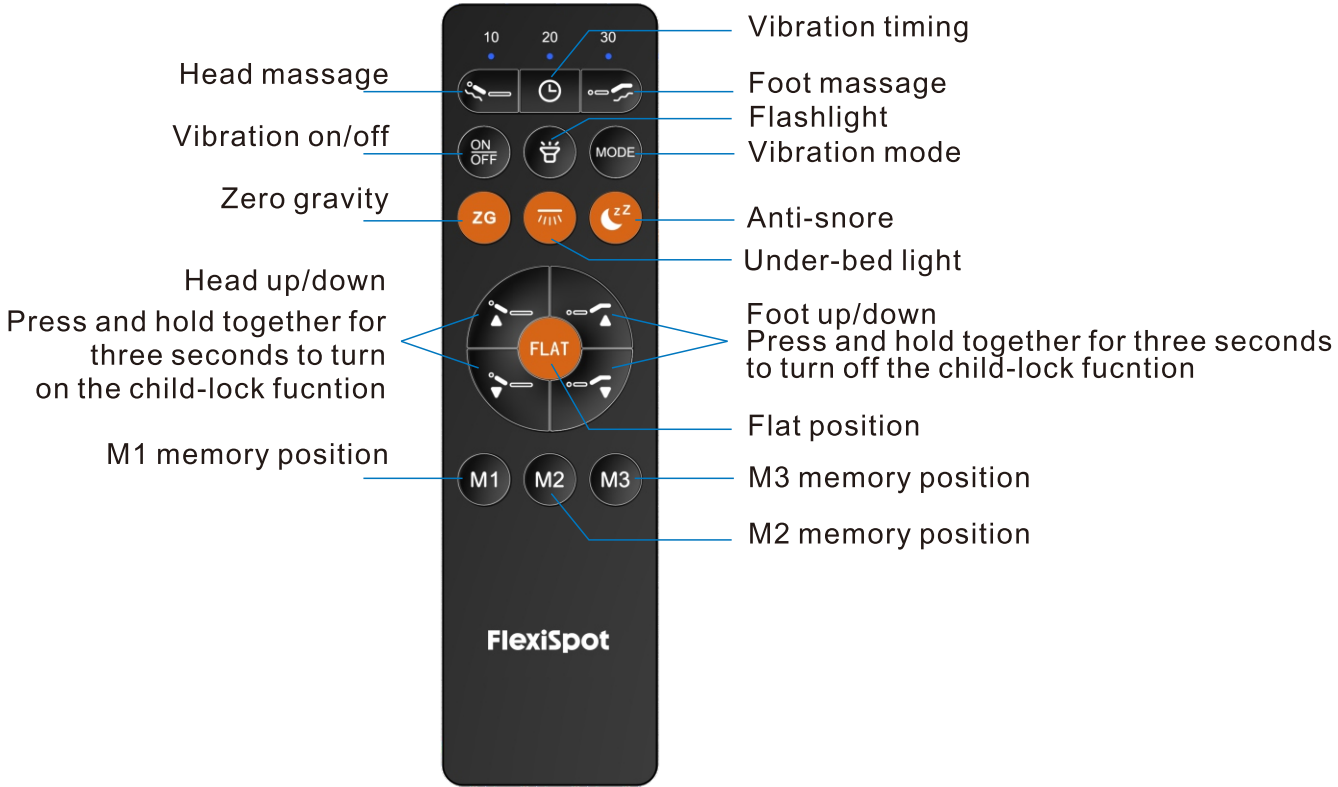


REMOTE BUTTON GUIDE



	Head and foot vibrator intensity-adjustment button; adjusts massage intensity (0-6)
	Timer button; toggles between 10, 20, and 30 minutes of massage time
	Turns head and foot vibrators on/off
	Turns flashlight on/off
	Toggles between vibrator modes 1, 2, and 3
	The one-touch zero-gravity preset position helps you release stress and relieve fatigue
	Control the under-bed light
	Easy up/down buttons for the head section
	Easy up/down buttons for the foot section
	One-touch flat position setting
	One-touch memory positioning


Memory Function

After adjusting the bed to the desired angle, program the memory preset as shown in the figure below.

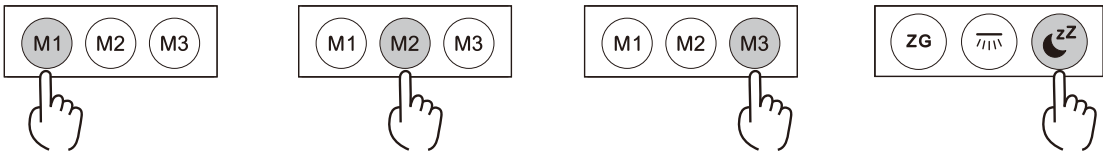


Press and hold "M1" / "M2" / "M3" / "Anti-snore" for five seconds.
The backlight will flash three times, indicating the position has been saved to memory.

Child-Lock Function

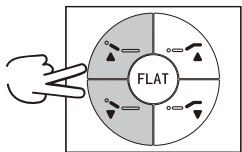


Press the "Head up" and "Head down" buttons at the same time and hold for three seconds. The backlight will flash three times and then stay on, indicating the child-lock is on. Buttons will not function when the child-lock is on, as indicated by the backlight flashing twice when any button is pressed.

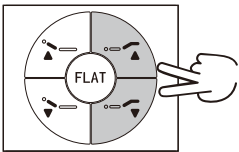


Press the "Foot up" and "Foot down" buttons at the same time and hold for three seconds. The backlight will flash twice at first, then flash three times before turning off, indicating the child-lock is off and button functionality is restored.

Reset to the Default Angle

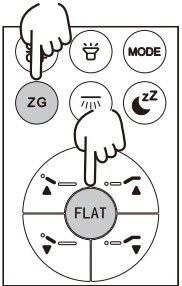

Press and hold the Zero gravity button and the Flat button on the remote. After five seconds, the backlight will flash three times, indicating that the memory position has been restored to the default angle.


Synchronization Function

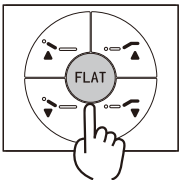

1. Press and hold the "FLAT" button for five seconds until the backlight of the remote control blinks three times and then stays on. This means the synchronization function is on.
2. Press and hold the "FLAT" button for five seconds until the backlight of the remote control blinks three times and then turns off. This means the synchronization function is off.

Note:


1. Before using the synchronization function, please refer to [Sync Slice Installation] to install the sync cable (9) and sync slice (10).
2. When using the synchronization function, only use one remote control. Do not use two remotes to operate the unit at the same time.
3. After the synchronization function is successfully enabled, the two beds will automatically be flat. During the leveling process, any remote control operation related to the lifting of the motor will lead to synchronization interruption and synchronization failure.

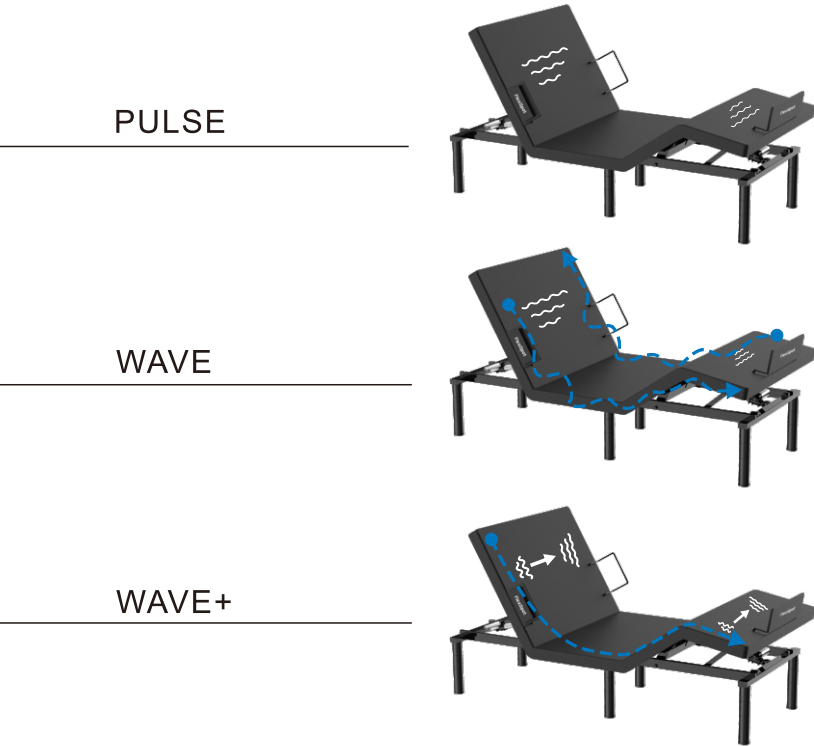


REMOTE CONTROL PAIRING CODE

The remote control and the bed have been matched when leaving the factory. If you find the buttons on the remote control are not working, or you have replaced the original remote with a new one, please follow the steps below to re-pair it to the bed.

a Unplug the power supply and the indicator light of the power adapter(5) goes out.

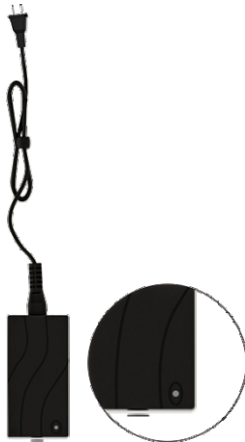

b Turn on the power again after the indicator light of the power adapter (5) is off. Within 10s, after you power the bed again, hold button and button for a few seconds.

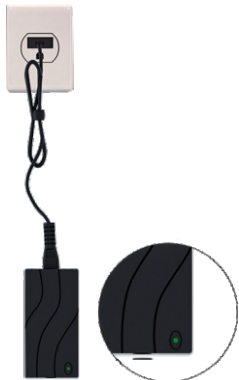

c The backlight on the remote (4) will start blinking when it enters the code pairing status. The backlight will turn off if the code pairing is successful; otherwise, it blinks.
After the code pairing is successful, press the FLAT button to reset the bed. After the bed is completely flat, the remote control (4) can be used normally.




SYNC SLICE INSTALLATION


Note :
1. This step is used to combine two TXL beds into a Split King bed.
2. The sync slice (10) is fixed on the bed base when the product leaved the factory. Bed legs (8) are required to install the sync slice (10) .



1. Place the bed in the desired location and connect the two ends of the sync cable (9) to the two control box interfaces on the bottom of the two beds (only one sync cable (9) is required).

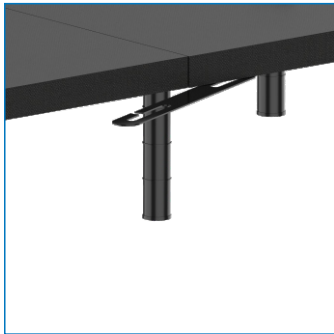

2. Unscrew the bed leg (8) at the head of the bed, snap the "a" end of the sync slice (10) onto the leg bolt, and screw the bed leg (8) back on.

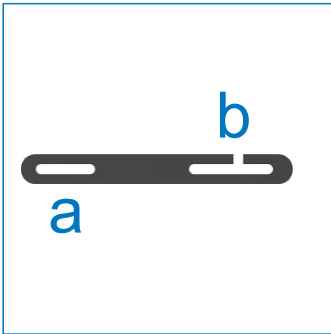

3. Swing the sync slice (10) to connect the "b" end of the sync slice (10) to the leg bolt at the head of the second bed and tighten the bed leg (8) .

4. After installing the sync slice (10) on the bed legs at the head of the two beds, repeat steps 2 and 3 to install the sync slice (10) on the legs at the foot of both beds. The two beds will be connected.


5. After the installation is complete, the synchronization function is enabled by default. If it is not enabled, please refer to the [Remote Button Guide] - [Synchronization Function] in the user manual to enable synchronization of the two beds.

BATTERY BACKUP UNIT

Use the battery backup unit (11) to level the bed in the case of a power outage. The spare batteries cannot be used for normal bed operation. (Note: only head-down button and foot-down button can be used.)



1. Disconnect the power supply from the adapter cable.

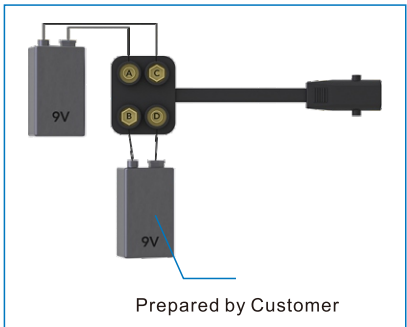

2. Put two 9V alkaline batteries (Prepared by Customer) in the battery backup unit (11). Do not mix batteries from different brands.



3. Connect the battery backup unit (11) to the adapter cable on the control box.

TROUBLESHOOTING

If you experience any of the problems below, please follow the suggested solutions.

Problem	Solution
Remote control buttons are not working.	1. Make sure the batteries are charged; replace all batteries if necessary. 2. Please refer to [Remote Control Pairing Code] for instructions on how to re-pair the remote. 3. Confirm whether the child-lock is turned on. If you need to unlock it, please follow the [Child-Lock Function] [page 7] to turn off the child-lock.
The bed isn't functioning or is unresponsive.	1. Confirm whether the child-lock is turned on. If you need to unlock it, please follow the [Child-Lock Function] [page 7] to turn off the child-lock. 2. Make sure the connection between the control box and the motors is correct. 3. Make sure all power cords are properly connected. 4. Check that the power cords are plugged into a working power source or outlet.
The raise and lower functions are responsive, but the bed can't return to the flat position.	1. Remove any obstructions that may interfere with the operation of the bed. 2. Check whether the head and foot of the bed are too close to the wall.
You can hear a clicking sound under the adjustable bed when you raise or lower the head of the bed.	This is normal; the lift motor makes a clicking sound when in use. No action is required.
Sometimes the adjustable bed makes a squeaking noise.	1. Use lubricant to lubricate the joints of the components such as pins, nuts, bolts, bushings, etc. 2. Ensure nuts are not over-tightened. 3. When placing lubricated pins, nuts, bolts, or bushings back into the adjustable bed, do not over-tighten nuts. 4. For additional lubrication, after completing these steps, spray the pins, nuts, bolts, bushings, or bed joints with lubricant.
There is a lag during adjustment.	1. Check for debris or obstructions under or around the bed and clear them. 2. Make sure that the control box and the power motor are well connected.
Zero gravity and Memory position buttons cannot be used, while other function buttons can be used normally	Press the Flat button to level the bed, then press the Zero gravity or Memory position button again after 3 seconds.