

Electric Recliner

Item No.X2


User Manual



+1 (855) 585-5618


Cautions

1. Children should use the sofa under adult supervision to avoid accidents.
2. Please pay attention to whether there are pets, children, or obstacles in front and behind the sofa when using it.

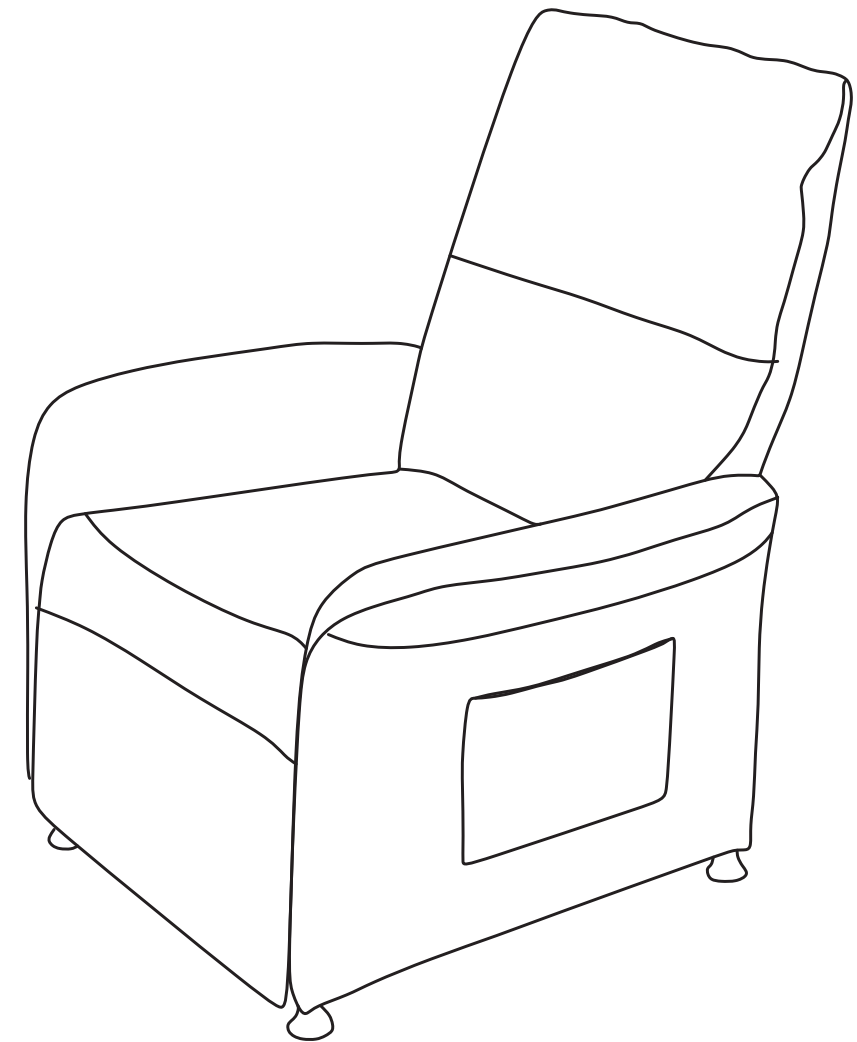


Component List

• SCREW ACCESSORIES •

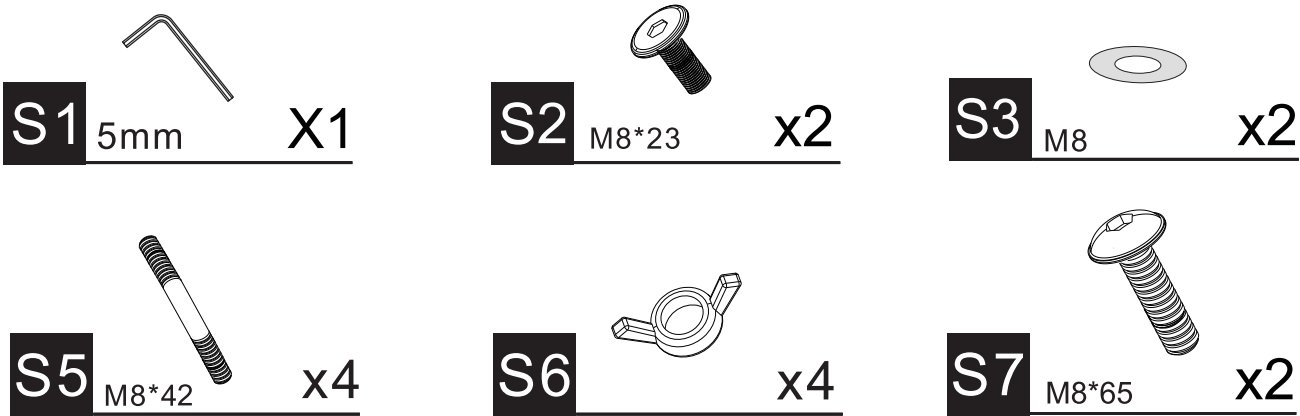



• PARTS ACCESSORIES •

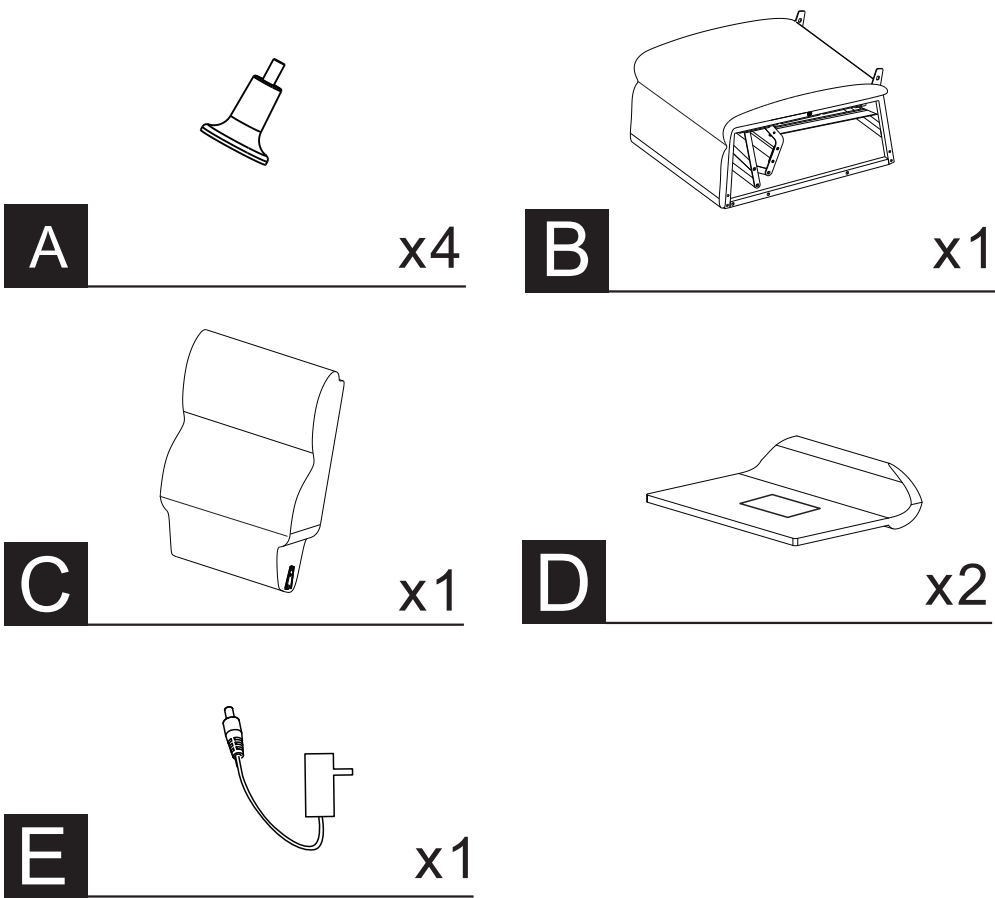

Installation Guide


1

Remove the fixing screws and take out the backrest.

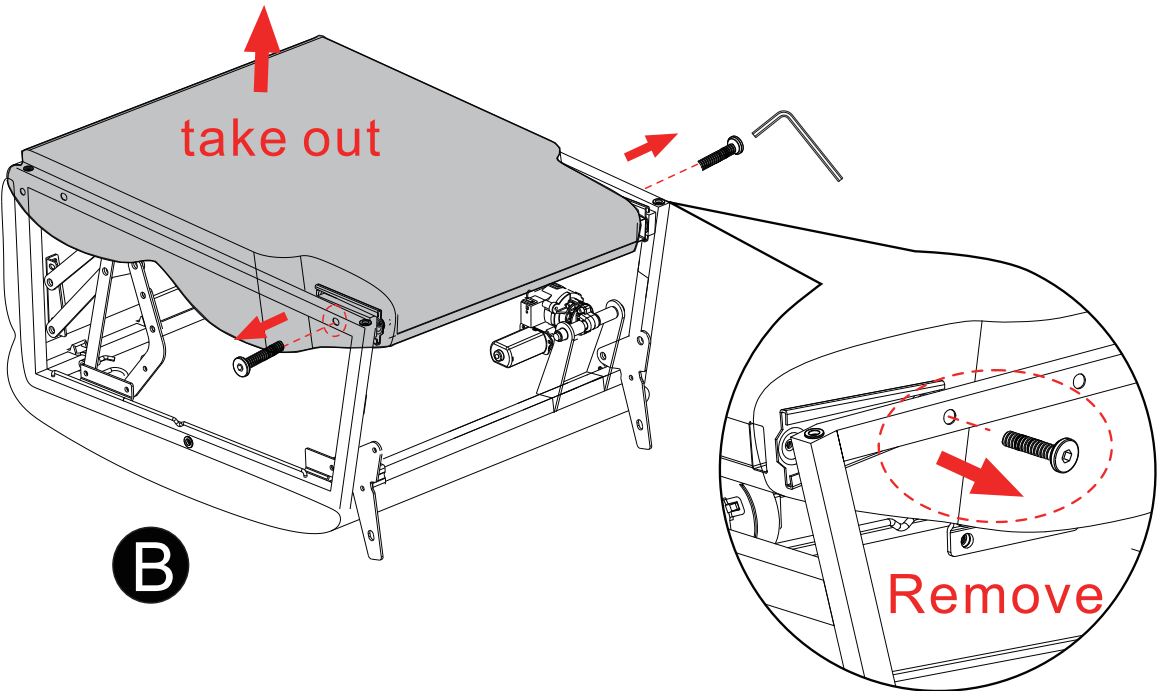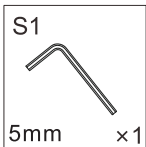


2

Install four sofa legs by hand.

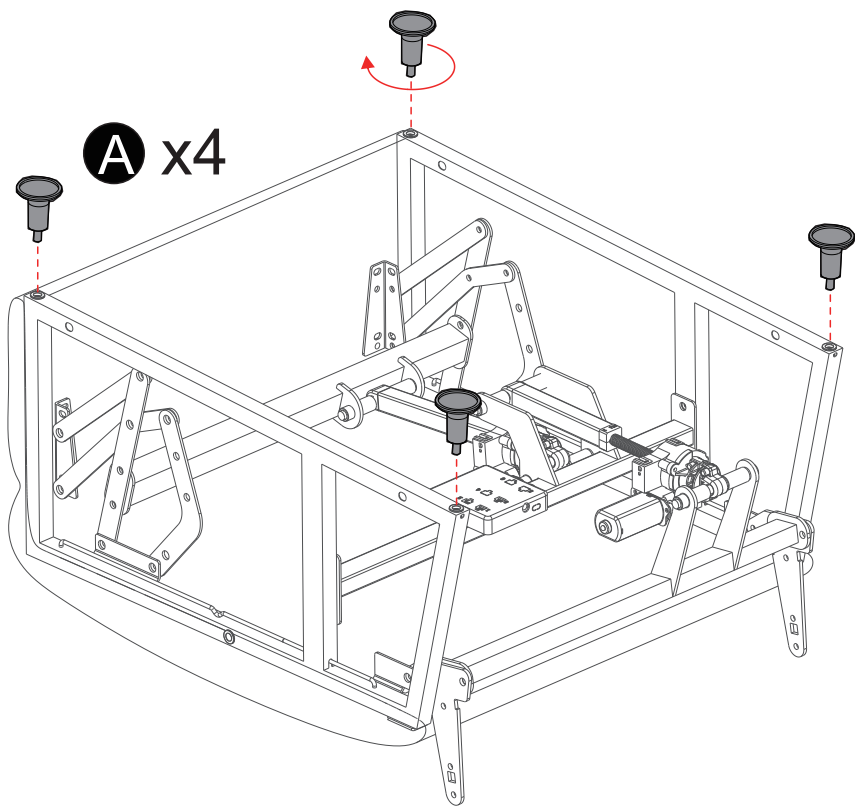



3

Align the buckles on the backrest C with the seat B and secure them with S2.

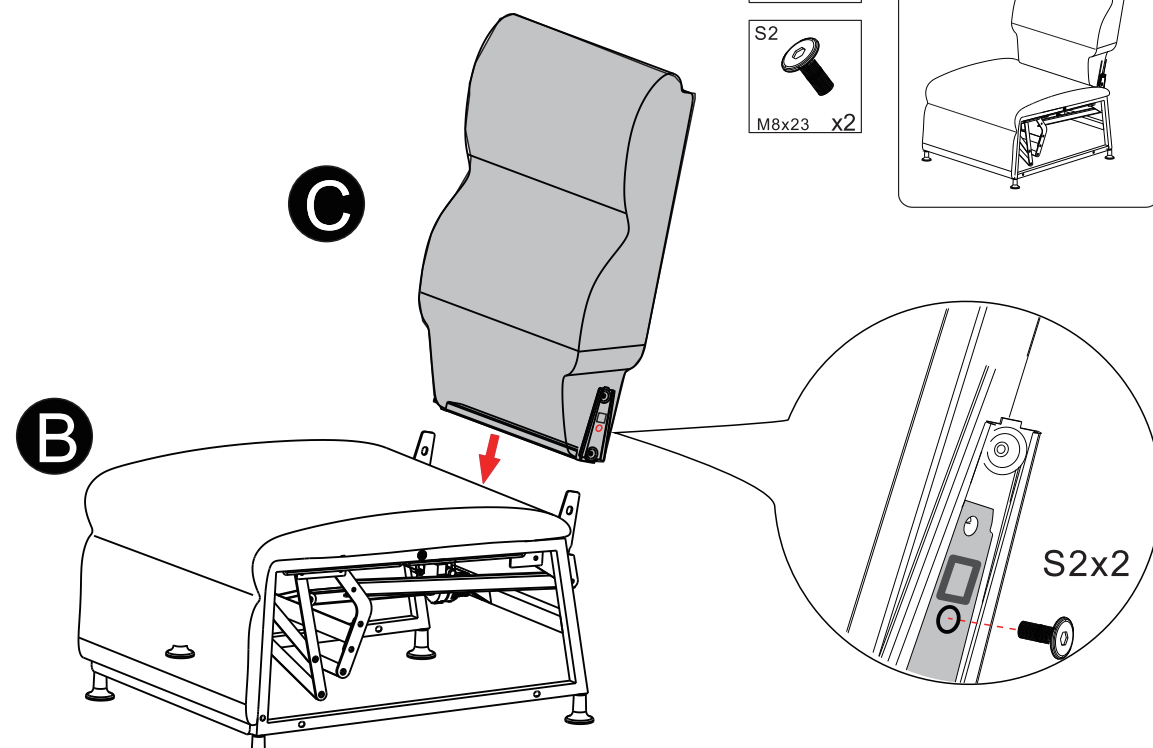



4

Turn the sofa upside down with the left side facing up.

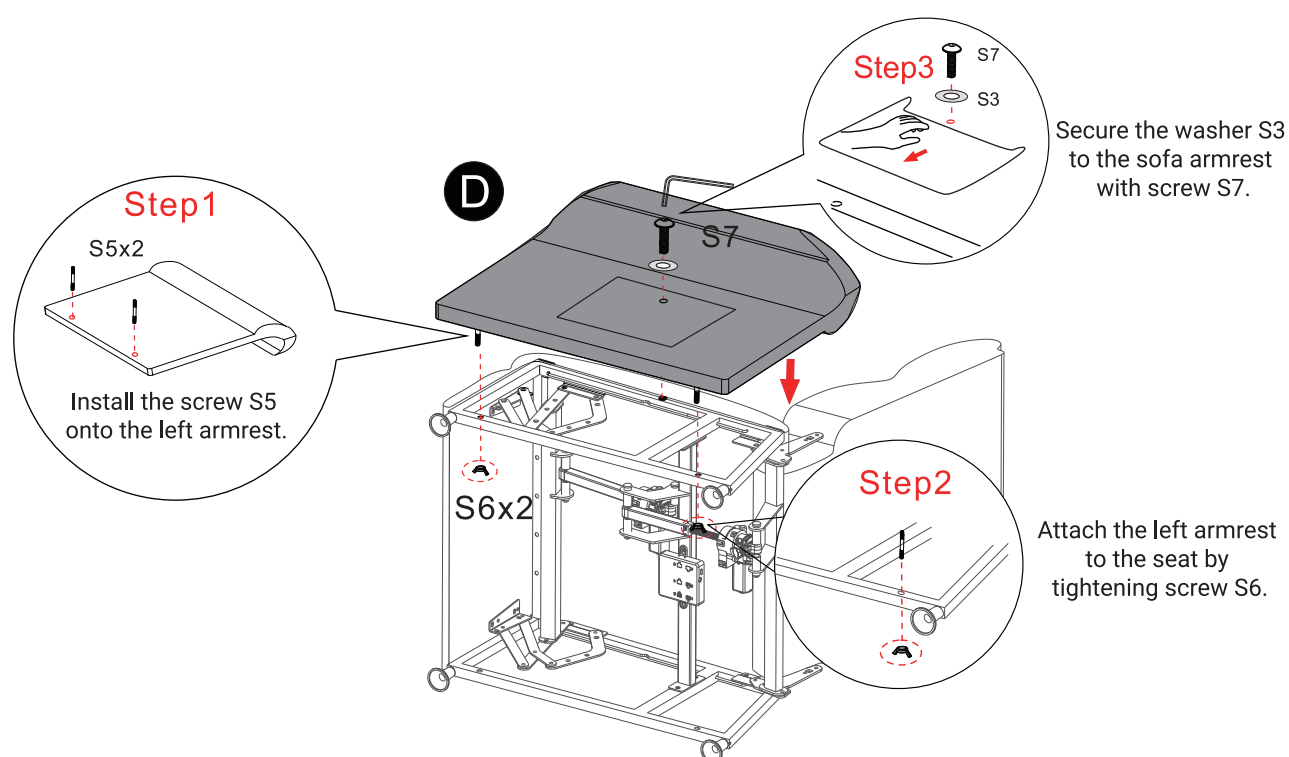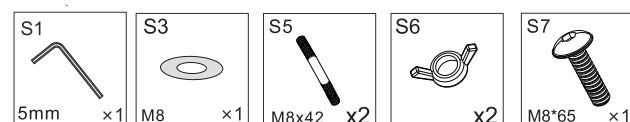

5

Turn the sofa upside down with the right side facing up. Repeat the previous steps. Connect the cables.

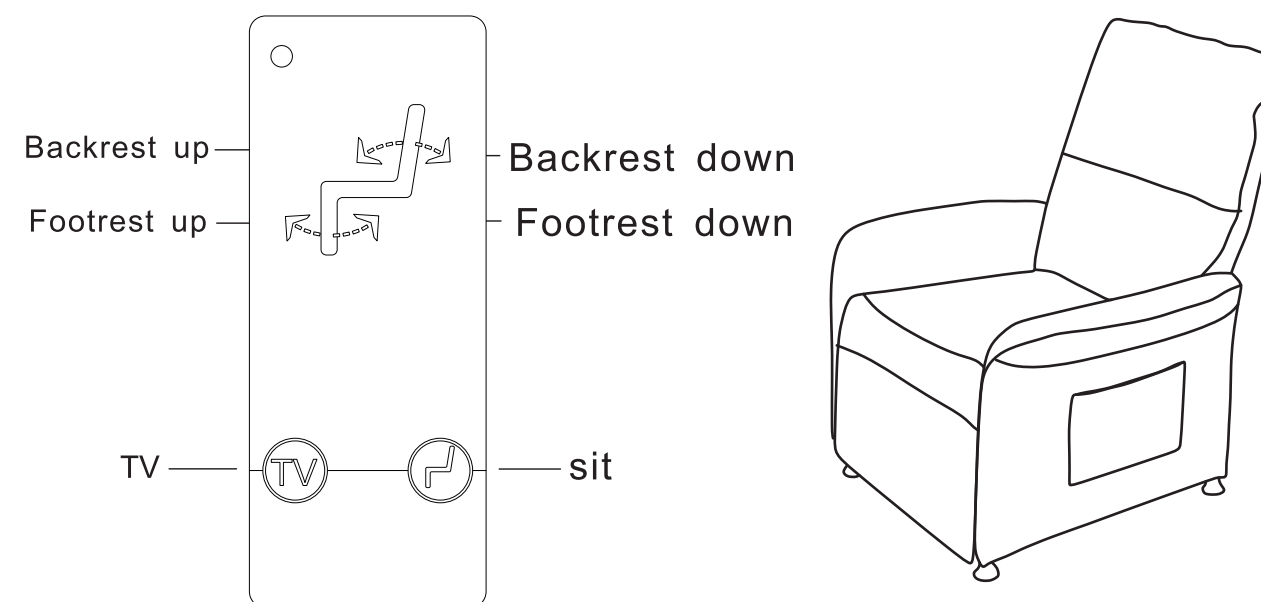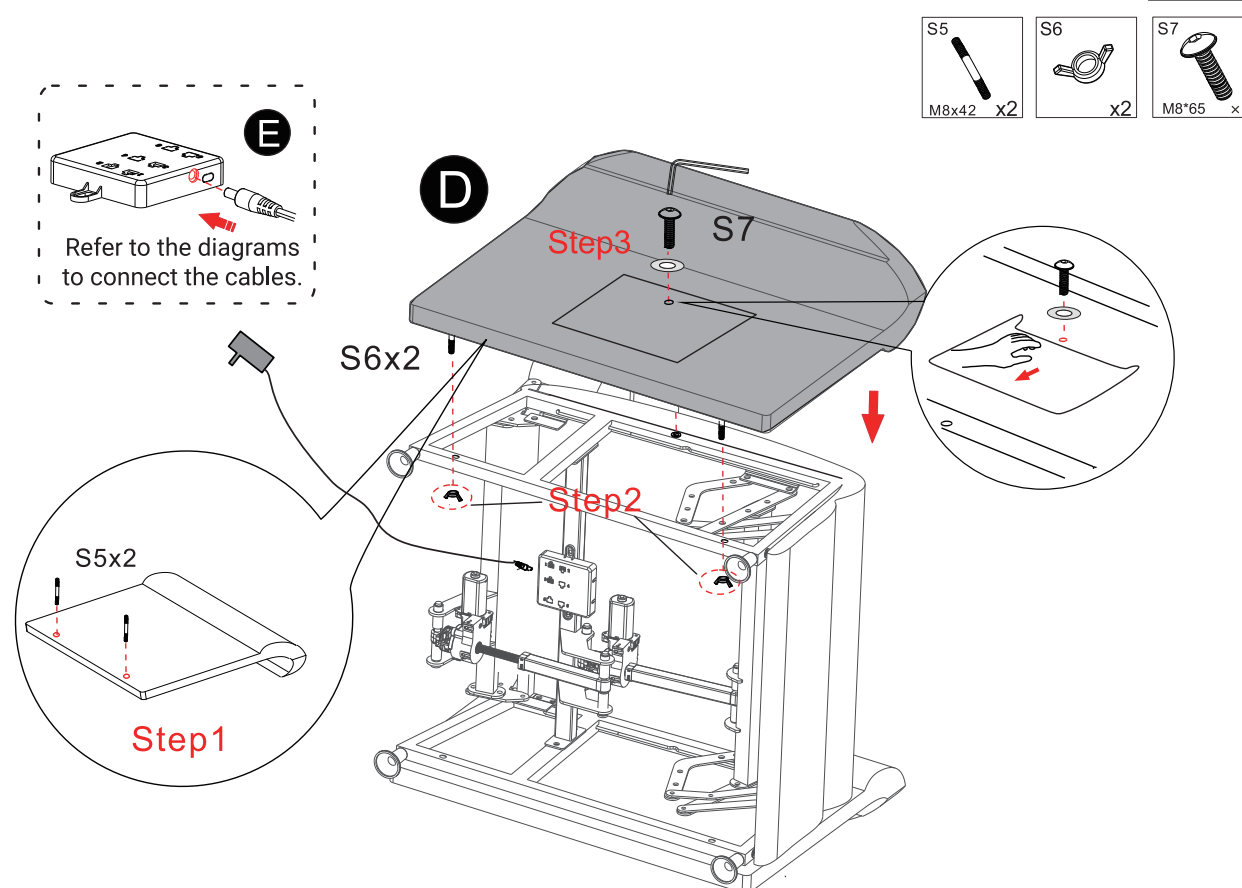

1. Raise the chair from its initial state (back upright, footrest closed).
2. Double-clicking the Lift button until the chair reaches the desired height.
3. Press any button to interrupt the operation.
4. Double-clicking the RST button to restore the chair's state.