





Item No. XL3B/XL3T
User Manual

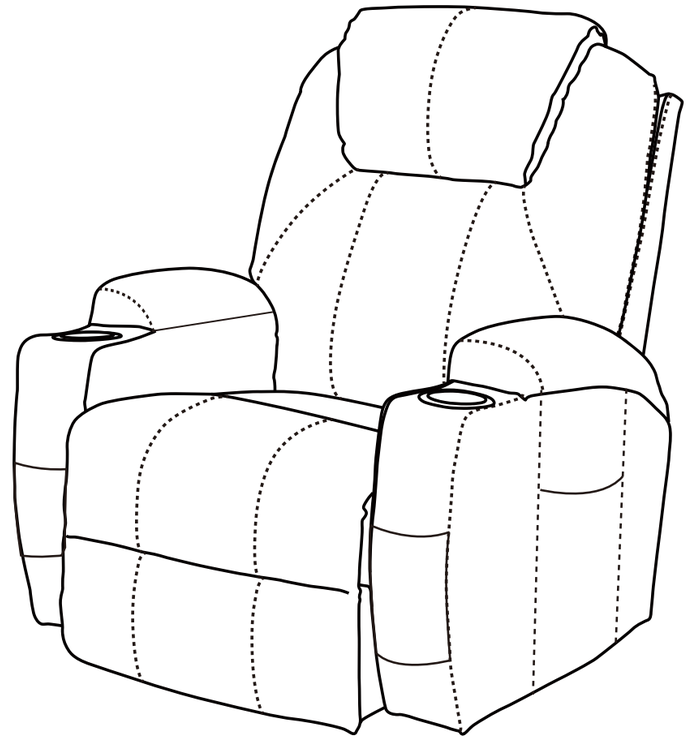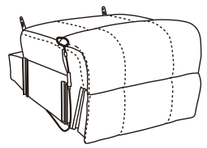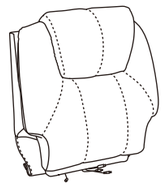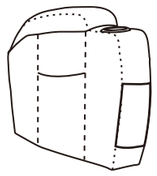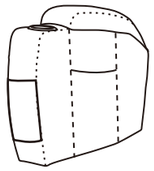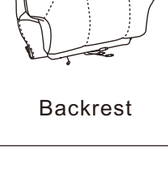


+1 (855) 585-5618


Component List

A  Chair base	B  Backrest
C  Left Armrest	D  Right Armrest
E  Remote control	F  Power Source
G  Massage Remote	H  Massage Plug

1


Insert two armrests to the chair base, make sure the slots on the armrests fully assembled to the bottom part.

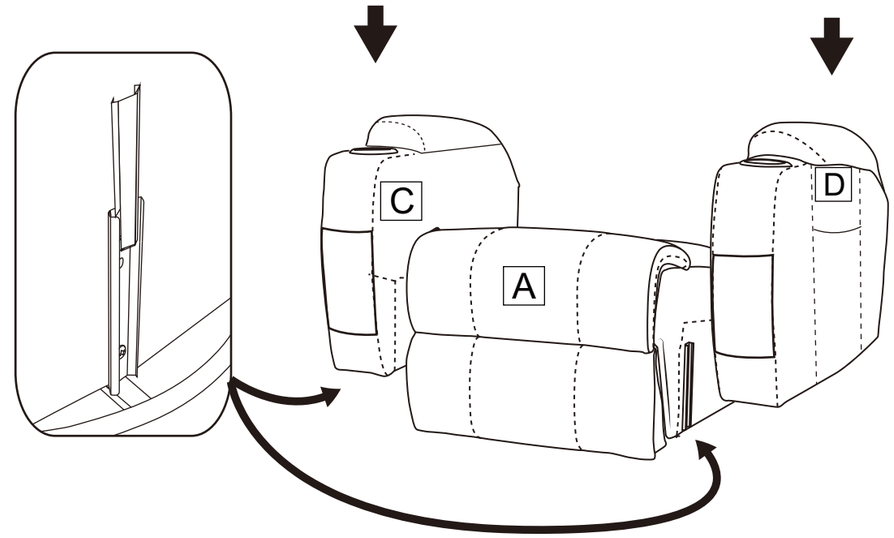


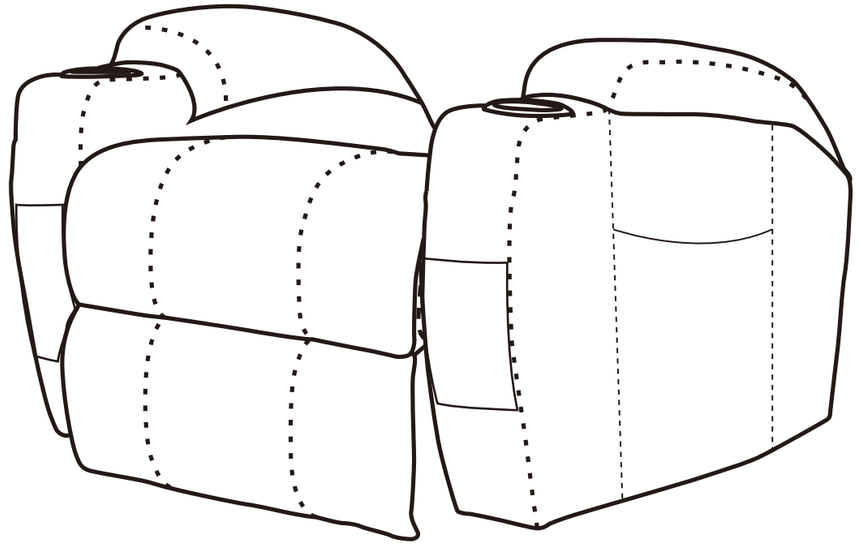

2


Insert chair back to the chair base, make sure the slots on the back fully assembled to the bottom part.

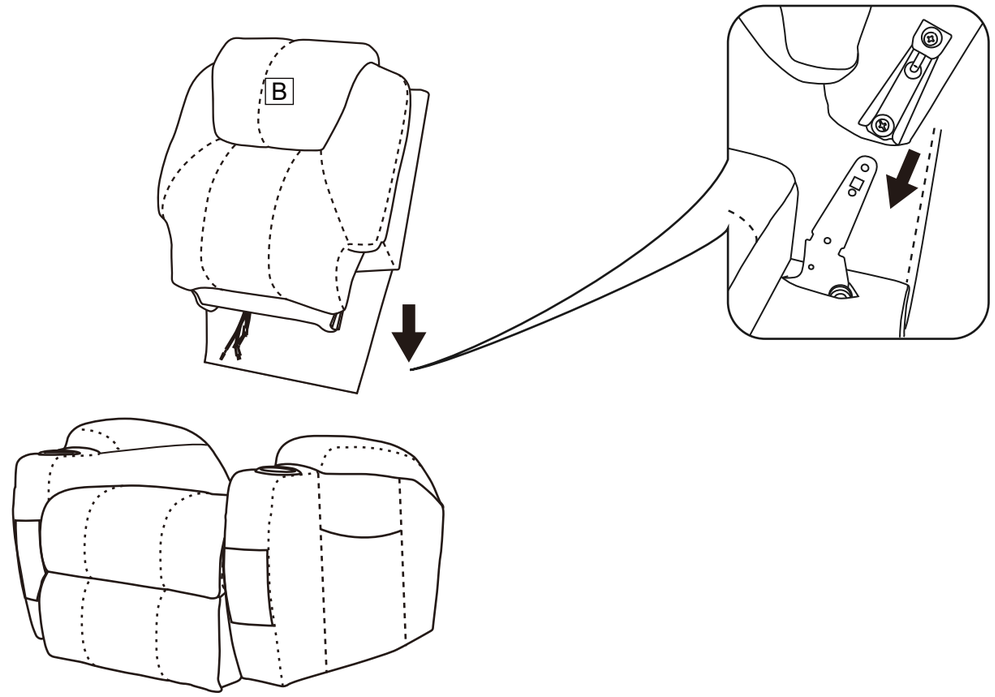

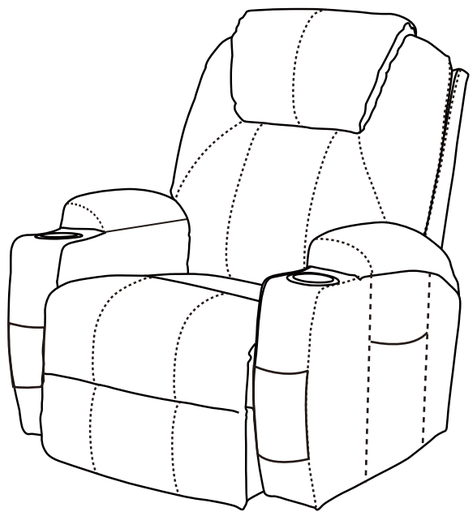


3

No.1 and No.2 wire connect with the backrest and chair base.
No.3 wire connects with Massage Plug (H) and backrest.
No.4 wire connects with backrest and Massage Remote(G).
No.5 wire connect the Motor and power source (F).
NOTE
1: Two same color wires connect.
2: Plug power cord and power source into outlet, then you can use all function.

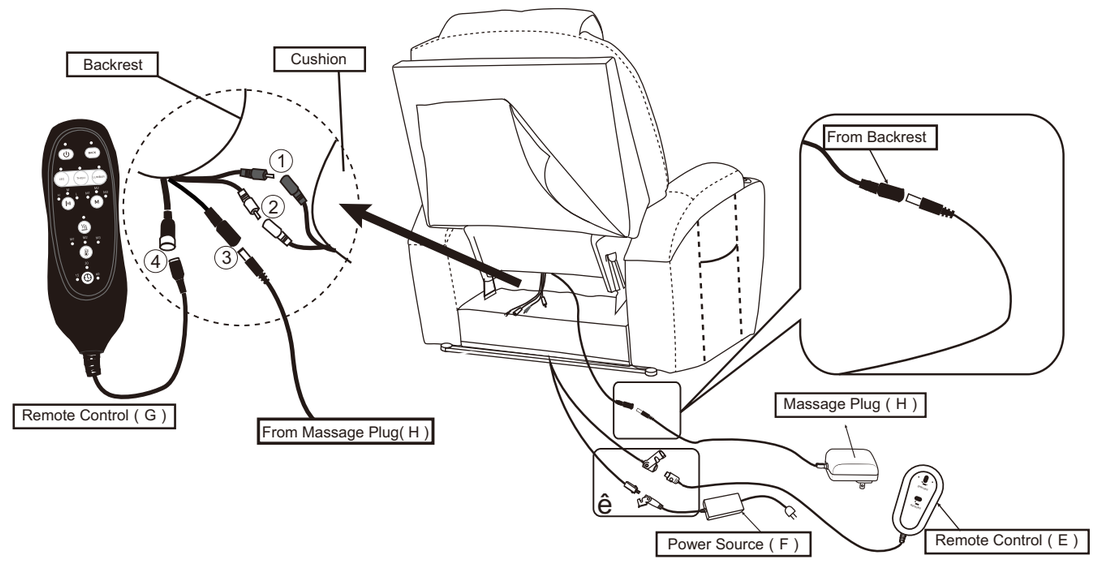


4 How to Use Remote Control?


How to recline?

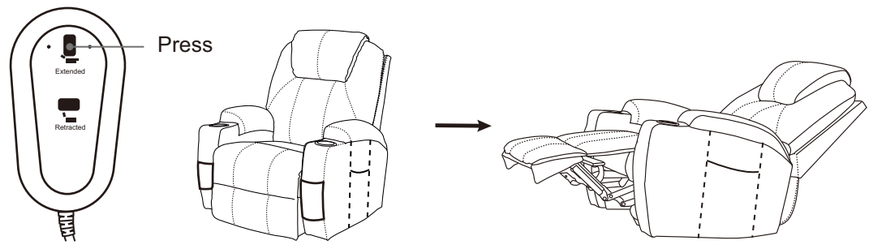

How to get footrest latch down and stand?

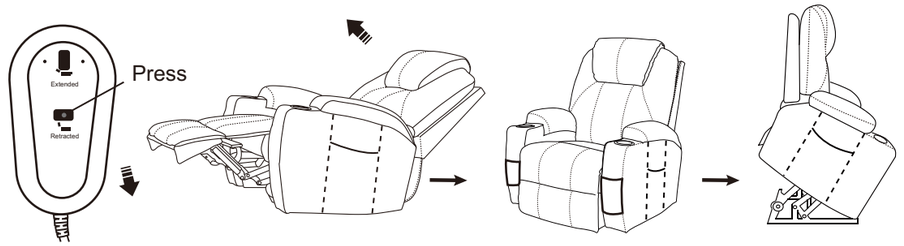

5 How to Use Massage Remote?

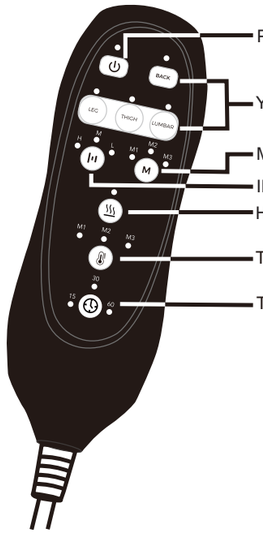

POWER : Turn on/off remote control.

You can choose 1-4 massage parts(back, lumbar, thighs, legs)to enjoy.

MODE : Select different massage mode to enjoy.

INTENSITY : Control massage function from low to high.

HEAT : Turn on/off heat function for lumbar part only.

TEMPERATURE : Select the heating temperature from M1 to M3.

TIMER:15 mins/30 mins/60 mins

FAQ

1.Q: Missing parts when received.

A: Please check if you already received two boxes we shipped to you. Sometimes the two boxes will not arrive in same date, hope you can wait for 2-3 more days or contact us for more help.

If you already have two boxes, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions. We will send replacement to you asap.

2.Q: Some parts damaged when arrived.

A: Please send clear photos about damaged part to us as attachment, we will check and offer you best solution soon.

3.Q: The massage function does not work.

A: Please check if all wires connect correctly, the power source (F) may be defective if indicator does not light on, or if the lights doesn't turn on when you press “ON/OFF” button on the remote, that means the remote is defective.

Please kindly send messages with clear photos to describe the problem, then we will send necessary replacement to you.

4. Q: The chair is stuck on lifting or reclining position, and no response when you press the lifting or reclining button.

A: Please kindly check if the power source (F) and remote(E) are connected well . Sometimes the power source (F) and Remote (E) may fall off from the motor. If they connect well, then check the lift motor if it has some anomaly, like some noise comes out when you press the lift and recline button. If you can make sure the motor is defective, please contact us for replacement.

5. Q: The Heat function does not work or can’t feel.

A: Please check all wires connection the same as question 3 first. If the remote also works well, you will need wait for 5-10 mins after you press the "HEAT" button. The heating function only works at lumbar position and the heat temperature isn’t very hot.

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

1.Make sure the product is connected to an outlet having the same configuration as the plug.

2.Always unplug the function sofa from the power source after use, and before cleaning.

3.Do not reach for function sofa if it has fallen into water. Unplug immediately.

4.An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, before putting on or taking off parts or attachments.

5.Do not use outdoors.

6.Do not carry this appliance by supplied cord as a handle.

7.Keep the cord away from heated surfaces.

8.Close supervision is necessary when this appliance is used by on or near children, invalids or disabled persons.

9.This unit is not a toy. Children should not use it or play with it.

10.Make sure all functions stopped, then remove plug from outlet.

11.Make sure the footrest is retracted when function sofa is not in use.

12.When moving the footrest, please ensure that there are no people, pets, or obstacles nearby, otherwise accidents such as collisions or crushing may occur.

13.Do not jump on the footrest or on the sofa as it may cause damage or injury.

14.Do not stand or sit on the footrest when it is extended, as this may cause the frame to break or flip over.

15.The product has been tested and approved for users weighting up to 300lbs per seat.

16.Use this appliance only for its intended use as described in this manual. Do not use attachments not provided with the unit.

Health Caution

1.If you have any concerns regarding your health, consult your doctor before using this product.

2.Individuals with pacemakers should not use this product.

3. If you experience pain in a muscle or joint for a prolonged period of time. Discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.

Maintenance Instructions

TO STORE:

Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by power cord.

TO CLEAN

1.Ensure the unit is unplugged from the power source, and allow to cool before cleaning.

2.Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.

3. Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniture polish, paint thinner or water hotter than 120° to clean the unit.

To clean the unit, make sure the function sofa is unplugged. Allow the unit to cool and the wipe down with a damp clean cloth. Do not use any strong chemical cleaners.