
FlexiSpot

Item No. E2LB-V3/E2LW-V3


User Manual

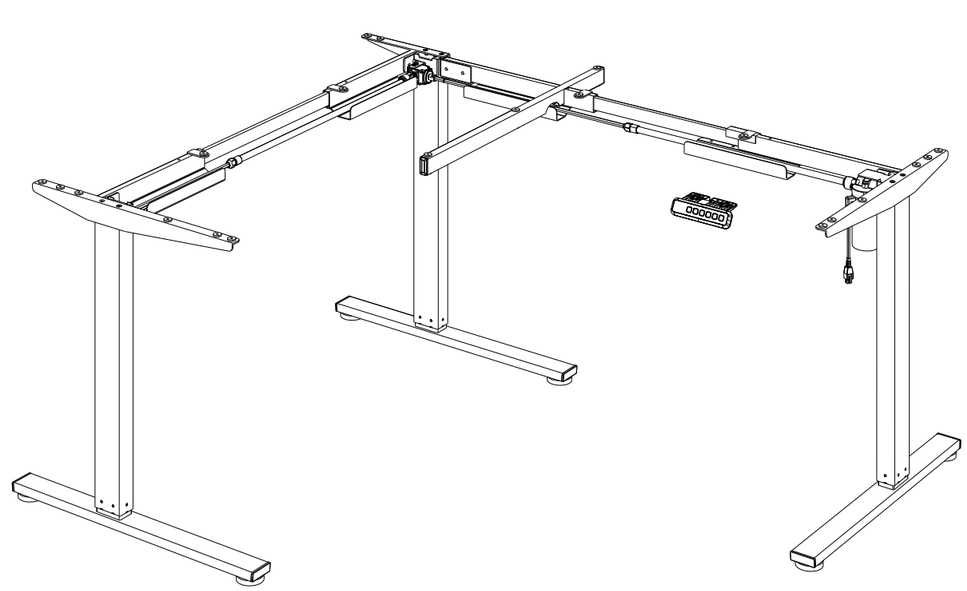


Specifications

Lifting Columns	2
Max. Load Capacity	220 lbs (100 KG)
Max Speed	0.79"/s (20 mm/s)
Maximum height	45.8" (1165 mm)
Lowest height	28.3" (720 mm)


Option A

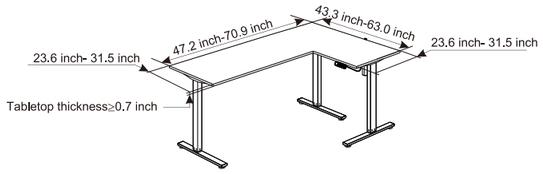


Option B

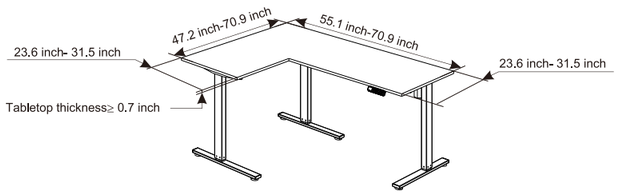


Assembly Notes

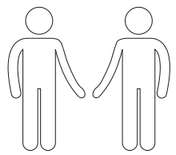

Cooperative assembly




Assemble on carpet to prevent scratches





Phillips screwdriver or drill required (not provided)



Product List


Note: The following line drawings are for reference only and in some cases may be different from the actual part; please refer to the actual part. If you find missing parts or have installation problems, please contact customer service.

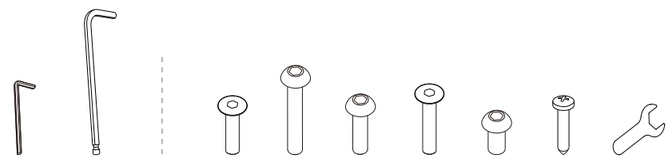

Parts Included


①	Short support plate x 1	
②	Middle column connecting joining plate x 1	
③	Long crossbeam x 1	
④	Long drive rod x1	
⑤	Short crossbeam x 1	
⑥	Short drive rod x 1	
⑦	Long support plate x 1	
⑧	Right support plate x 1	
⑨	Baffle x4	
⑩	Left column x1	

⑪	Middle column x1	
⑫	Right columnx 1	
⑬	Adaptor holder x 1	
⑭	Adaptor x 1	
⑮	Controller x 1	
⑯	Deskfeet x3	
⑰	Power cord x1	
⑱	Support tube x1	
⑲	Cable management tie x4	

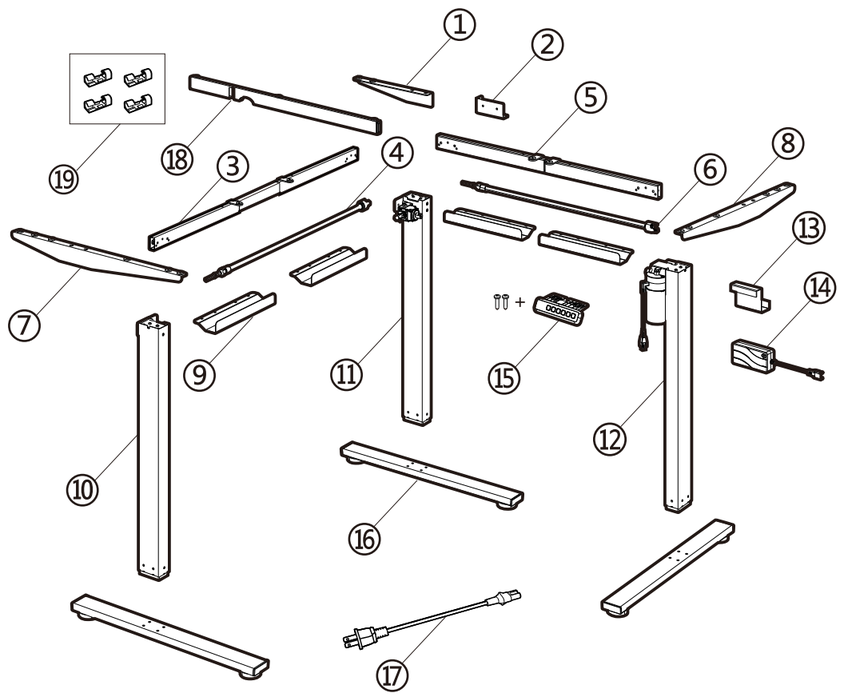


01 Install middle column connecting joining plate

B x1 C x2

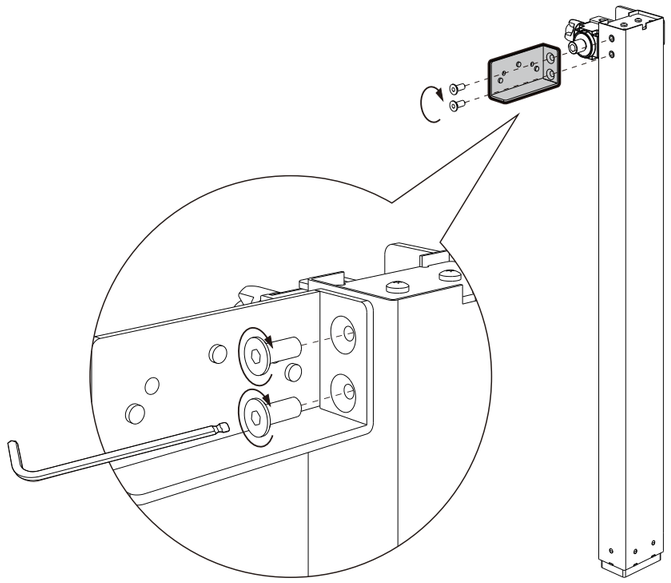


This product varies in assembly steps depending on the assembly method. Steps 3 and beyond will differ accordingly.For **Option A,** refer to steps **A-3** through **A-15**; for **Option B**, refer to steps **B-3** through **B-15**, reflecting the different assembly outcomes.

Option A:
Pages P2-P13

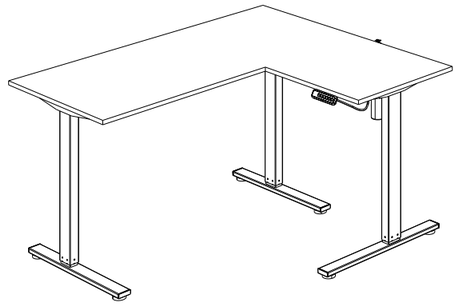

Option B:
Pages P14-P23

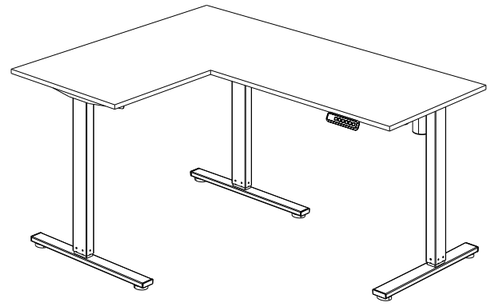


A-3 Install the crossbeam

B x1 E x8


02 Install the desk feets


B x1 D x12

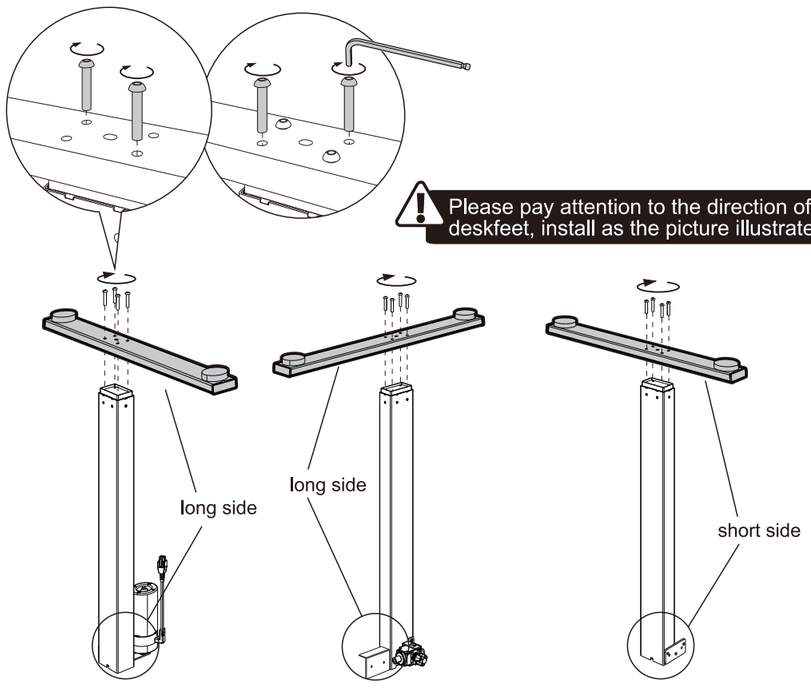



A-4 Extend the crossbeam


B x1

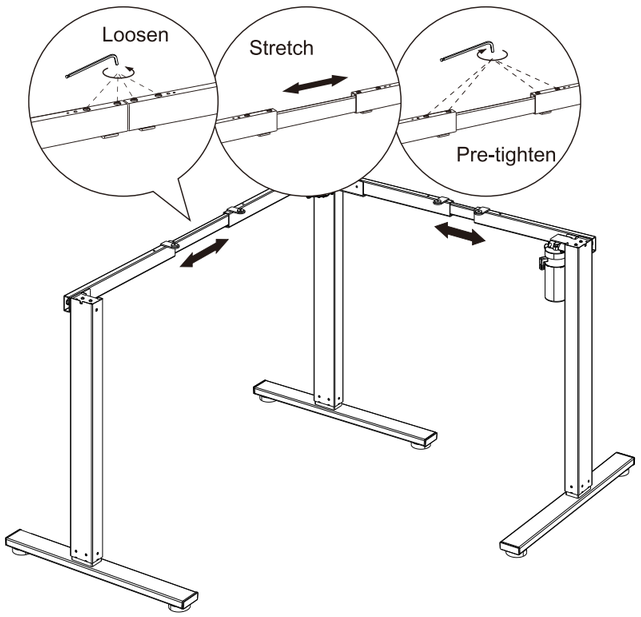

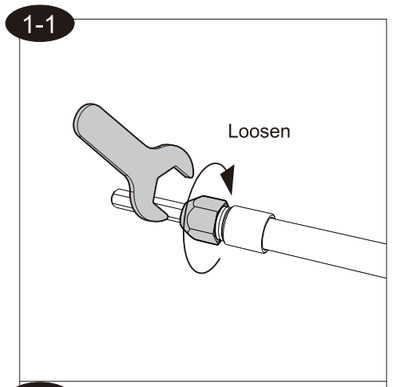

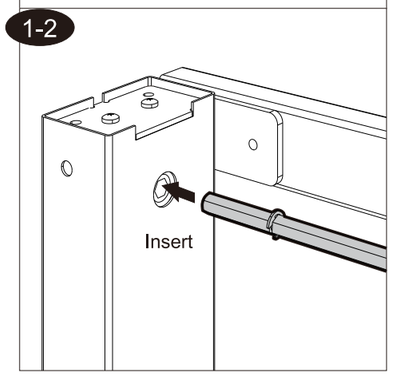


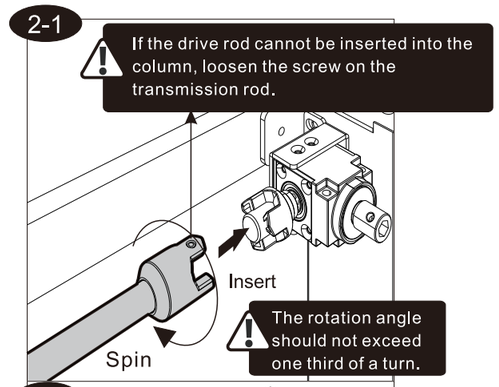


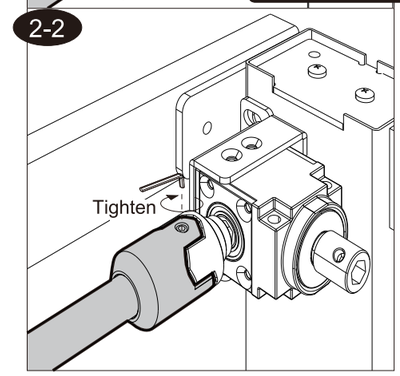



A-5 Install the drive rod


A x1 B x1 I x1

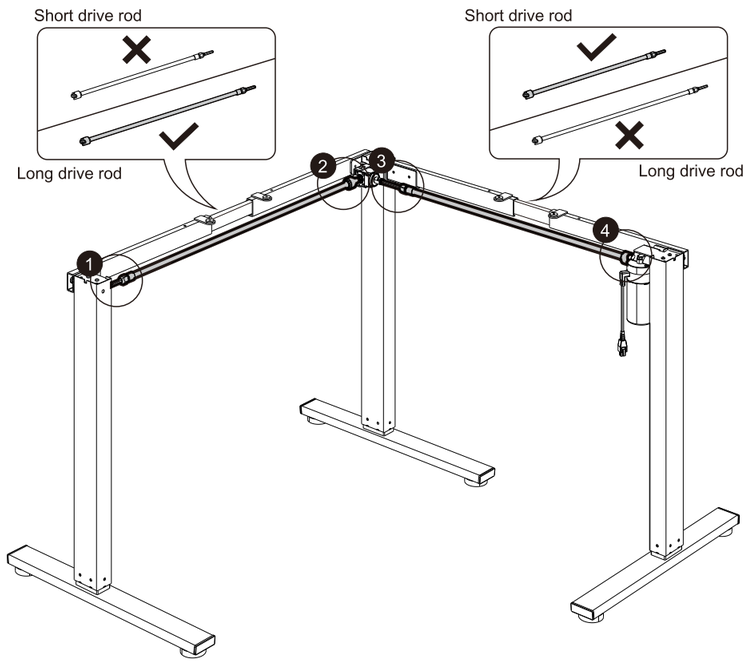

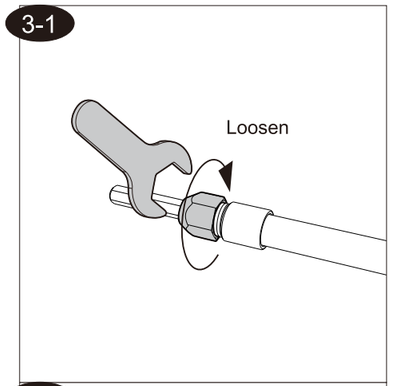

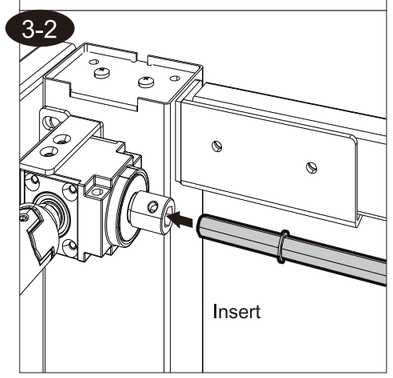

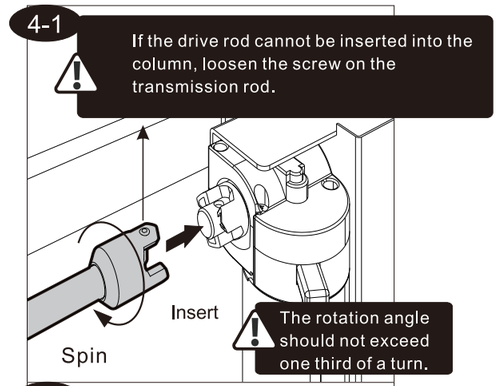

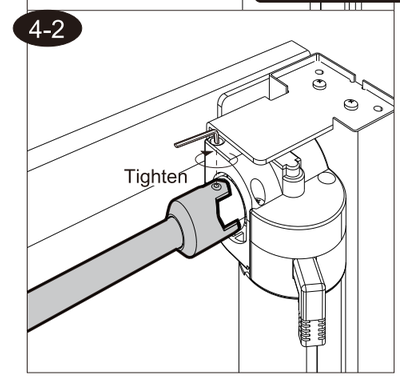



A-6 Install the support plate

Make sure the longer side of deskfeet⑯ and support plate⑦⑧ face the same direction

B x1


F x6

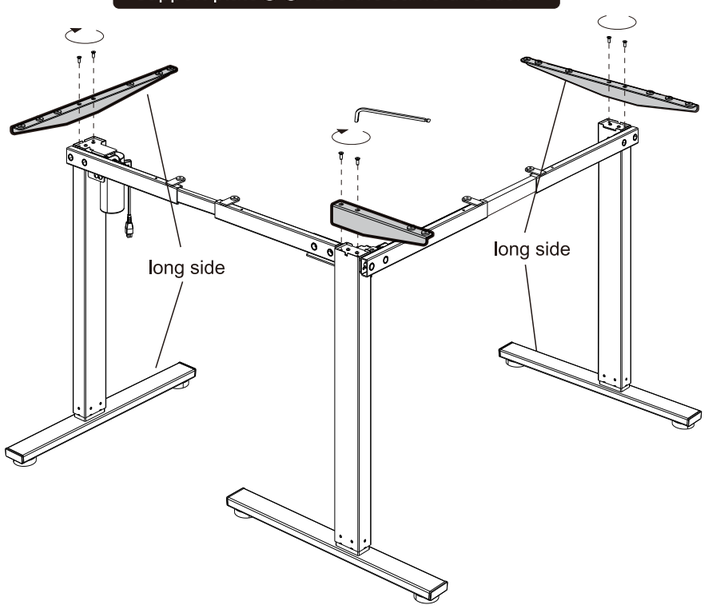

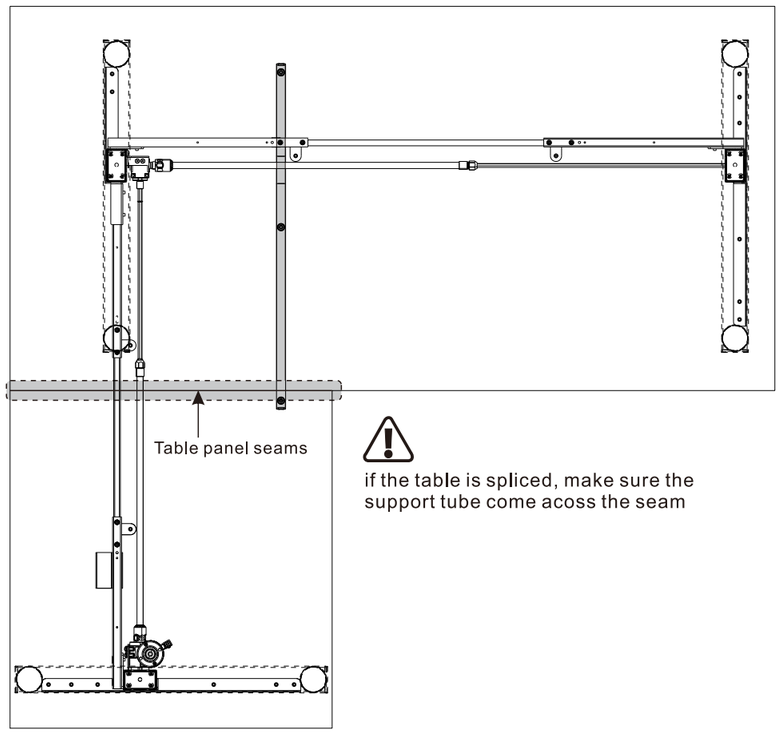

if the table is spliced, make sure the support tube come acoss the seam


A-7 Place the frame on the desktop and install the adaptor holder&support tube

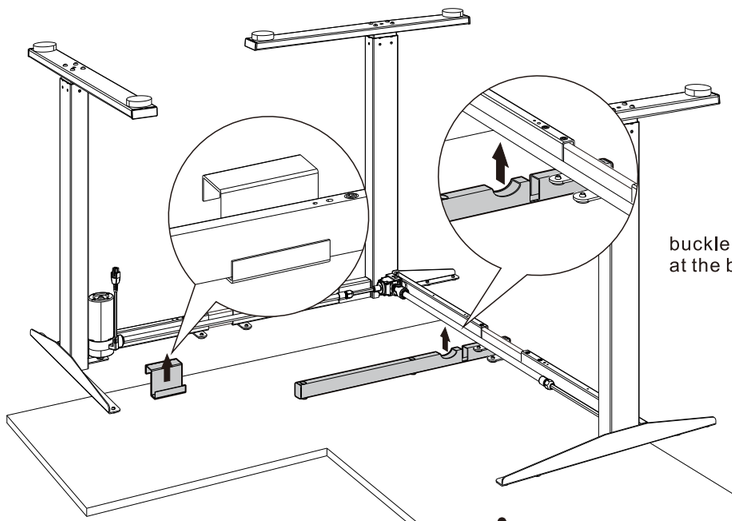

buckle the support tube at the beam

buckle the adaptor holder at the beam nearing motor


If the table board is provided by yourself, please ensure that the table board is strong enough. 100kg load bearing is the reference value of the frame, the actual use should be subtracted from the weight of the table board.

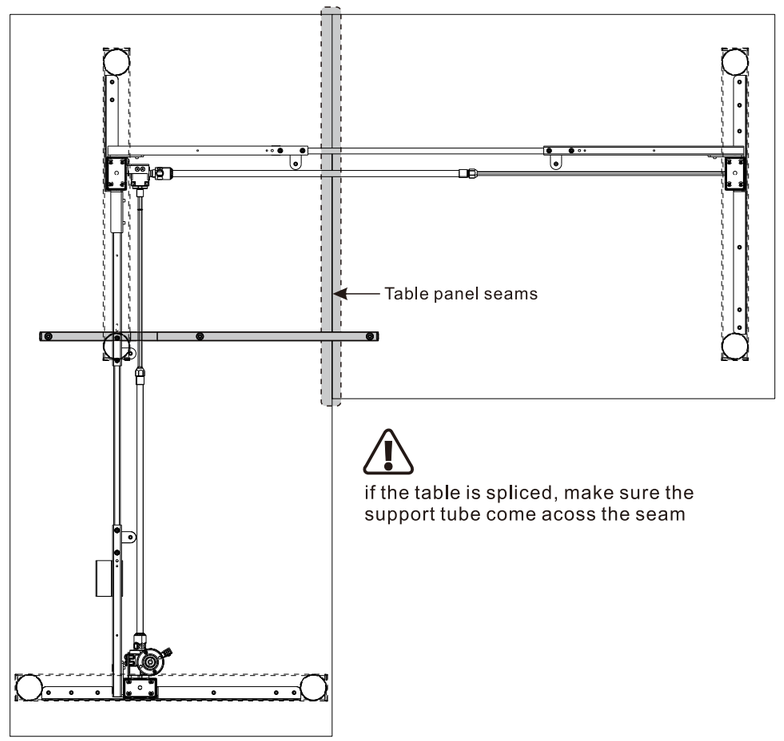

if the table is spliced, make sure the support tube come acoss the seam

A-8 Adjust the cross beams and drive rods to appropriate position




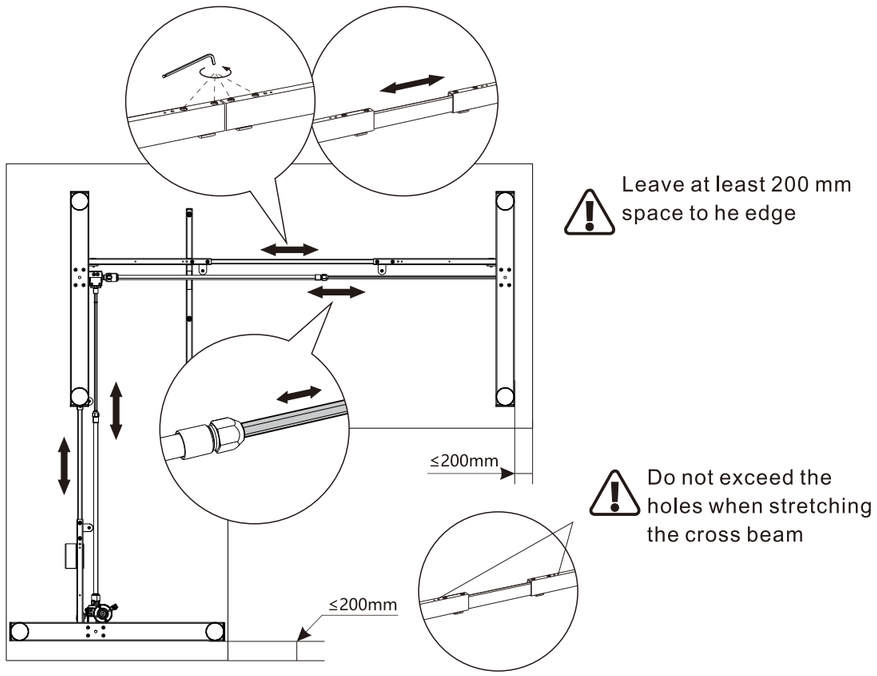


Leave at least 200 mm space to he edge

Do not exceed the holes when stretching the cross beam


A-9 Attach the frame to the top




Screw sequences are

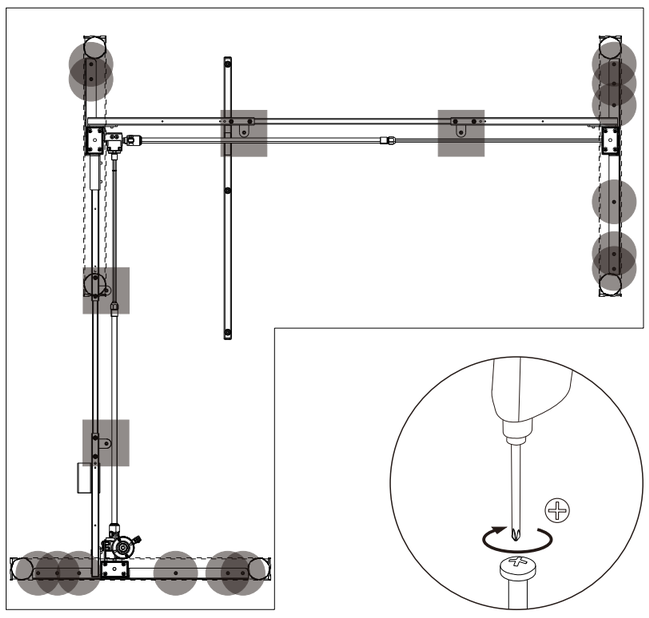



A-10 Tighten the screw on the support tube



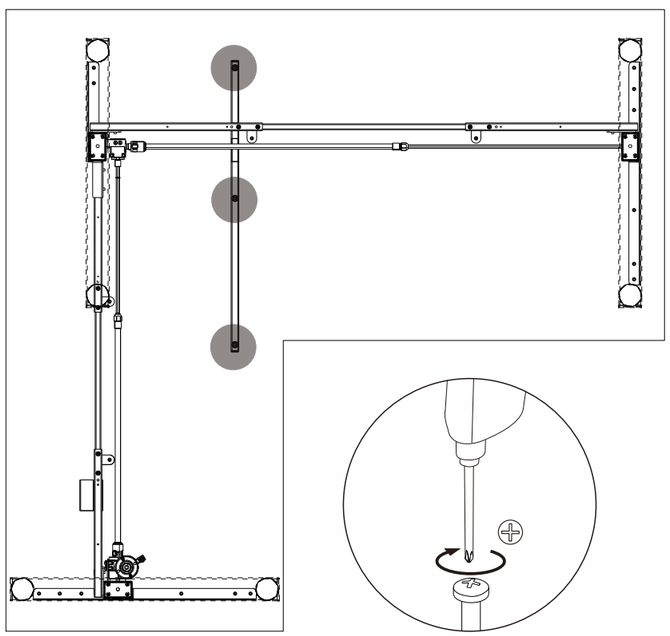


A-11 Secure the cross beams and drive rods




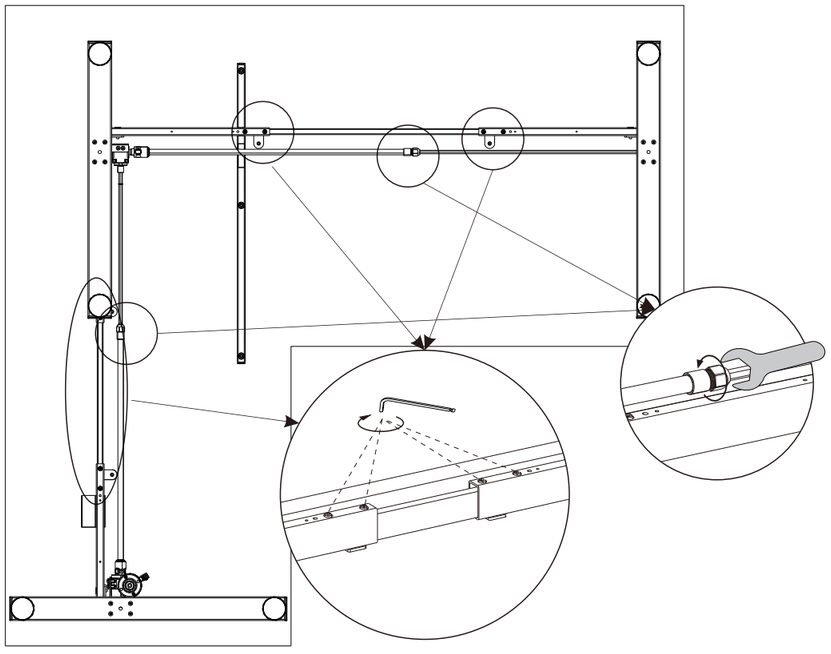


A-12 Install the adaptor

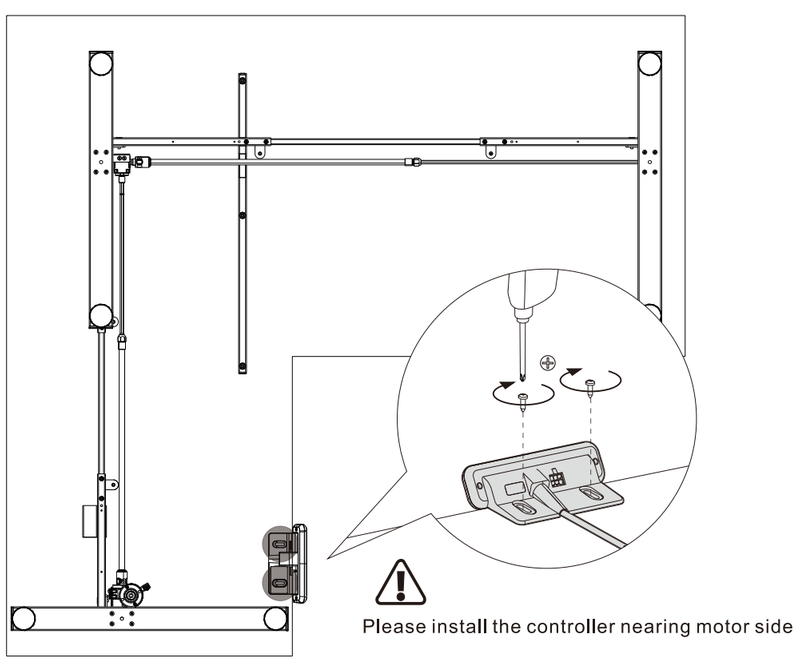


A-13 Install the adaptor

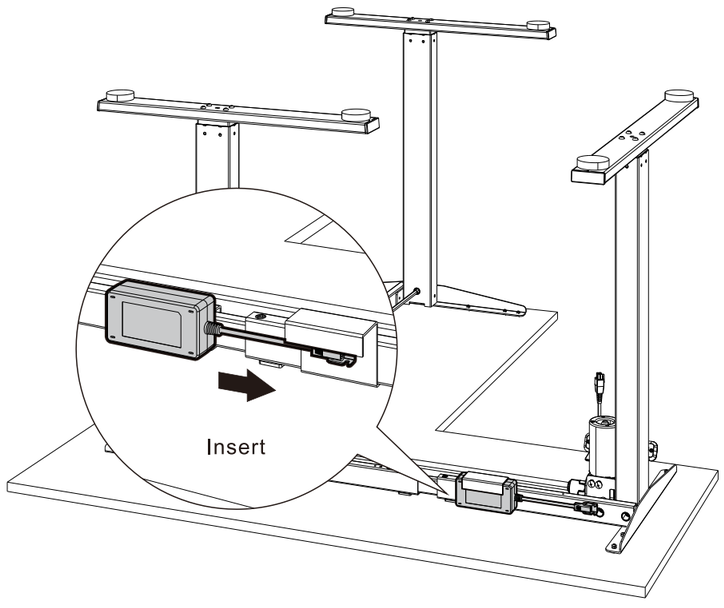


A-14 Install the baffle

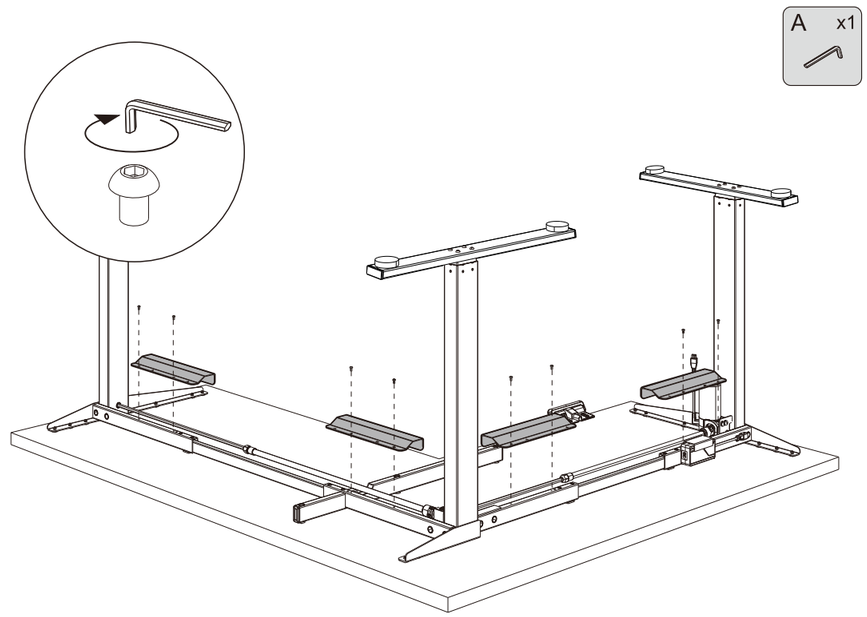

A-15 Wiring

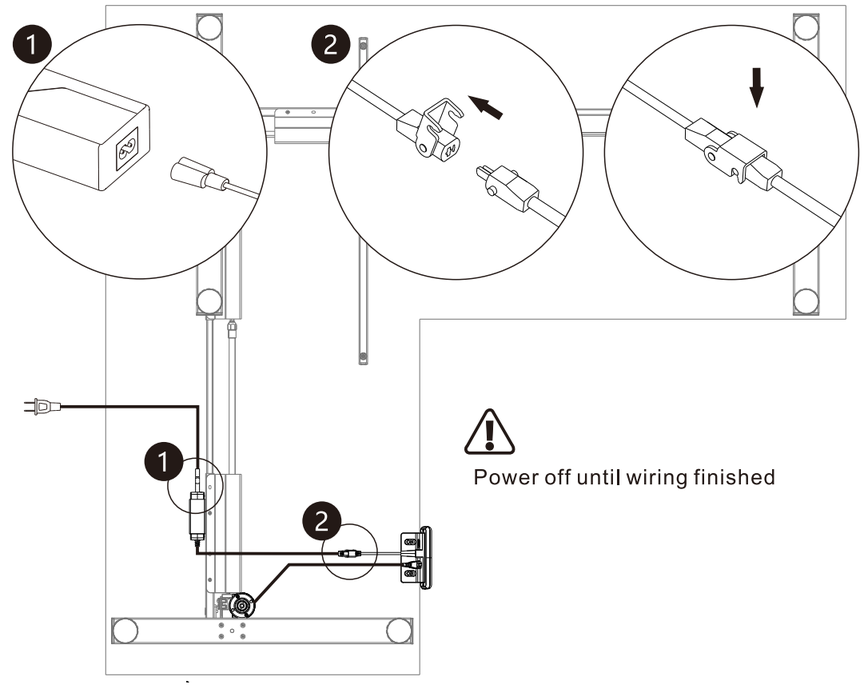


Fix the cables to desktop with cable clip to keep the desk clean.

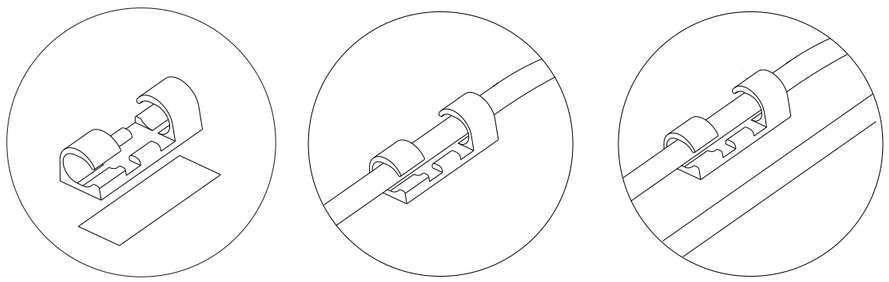

Tear off　　Manage cables　　Fix


A-16 Turn over the desk

When turning the table over, be careful not to squeeze the handset and turn the end with the handset upwards.

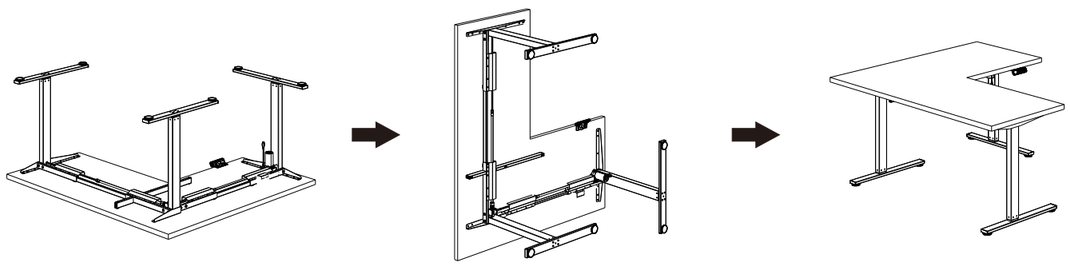


B-3 Install the crossbeam

B x1　E x8

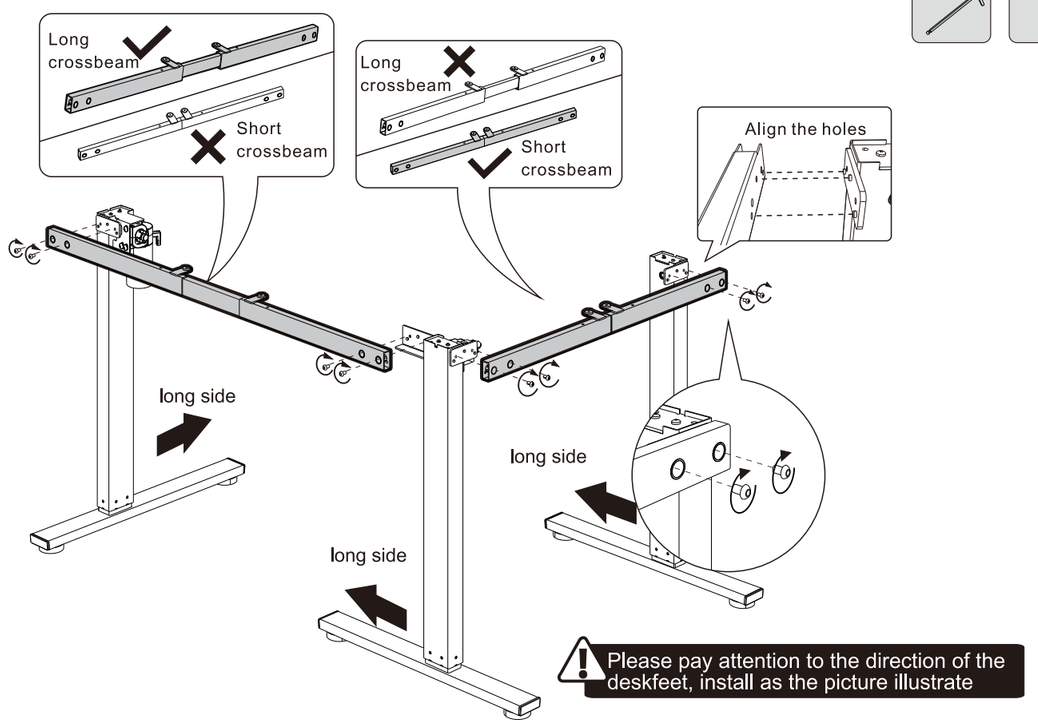


B-4 Extend the crossbeam


B x1

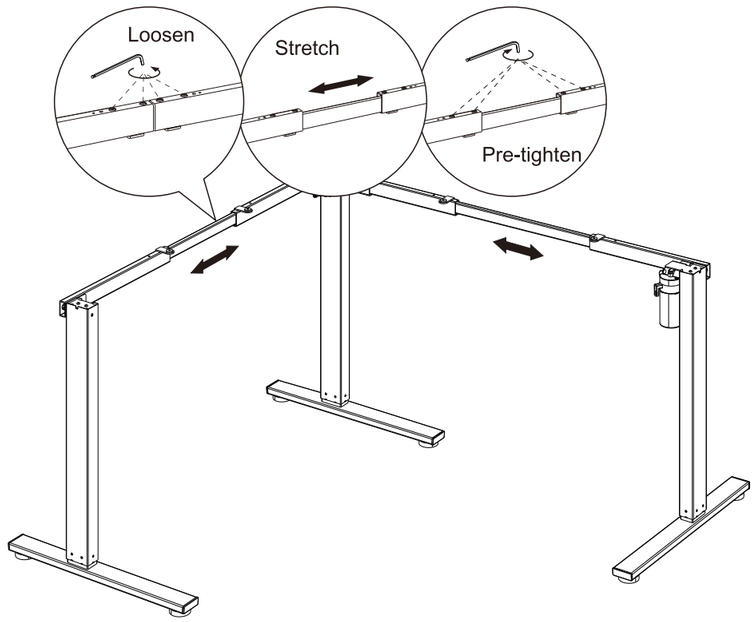



B-5 Install the drive rod


A x1 B x1 I x1

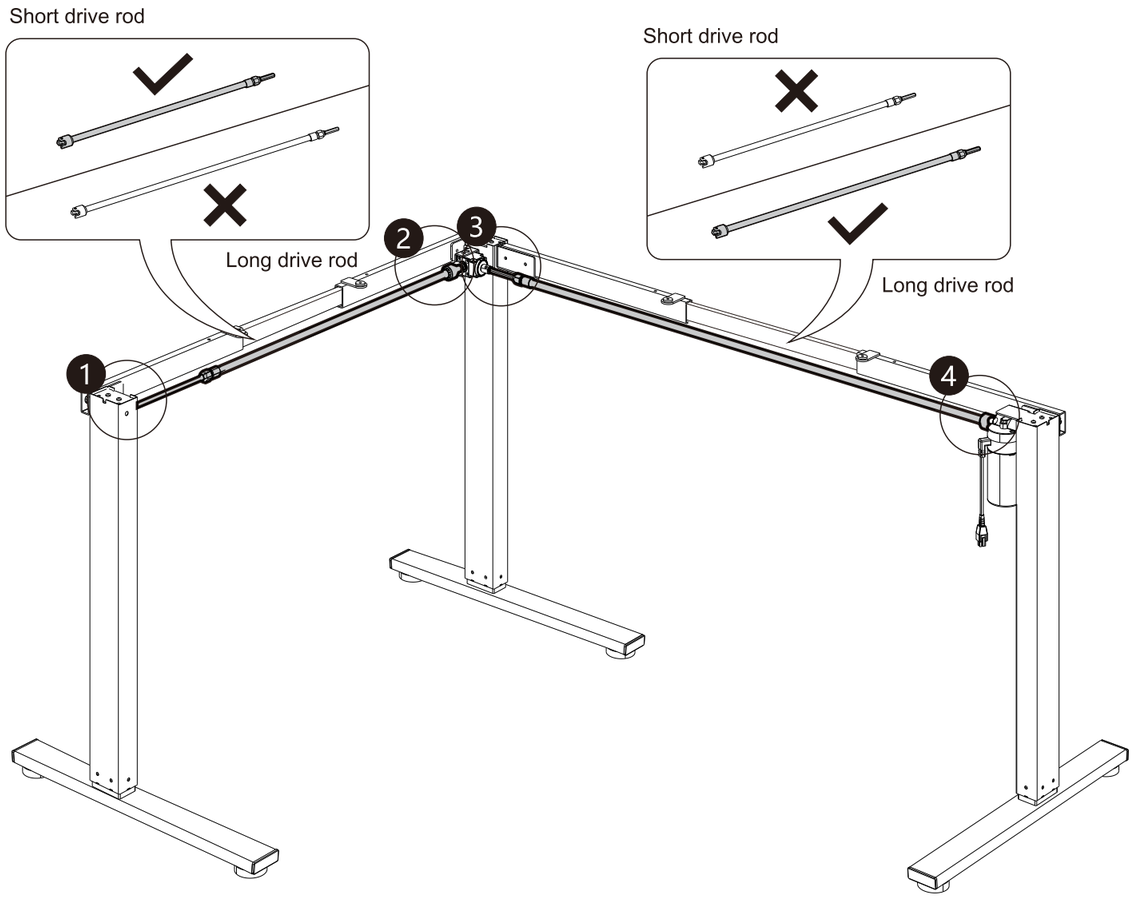


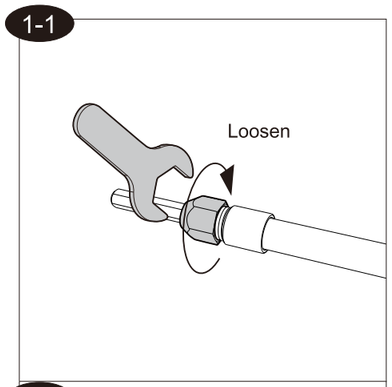


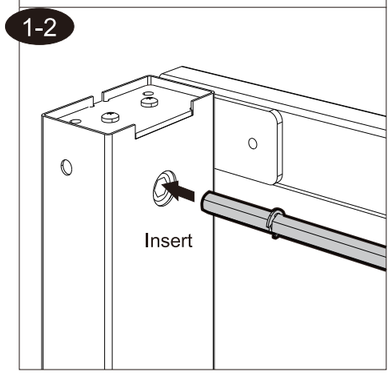


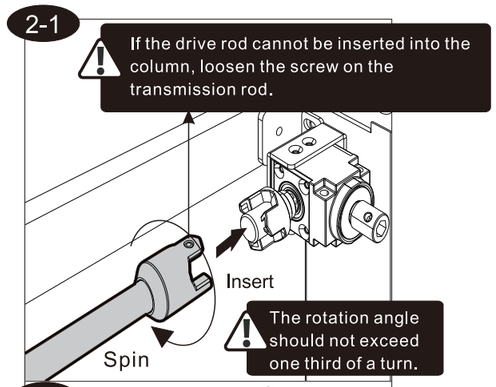


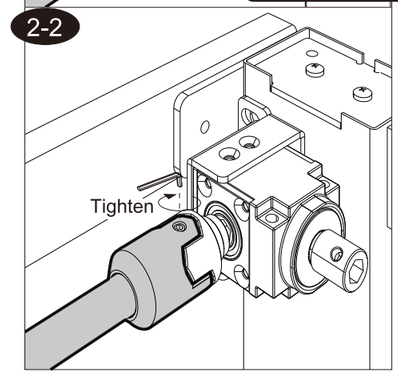

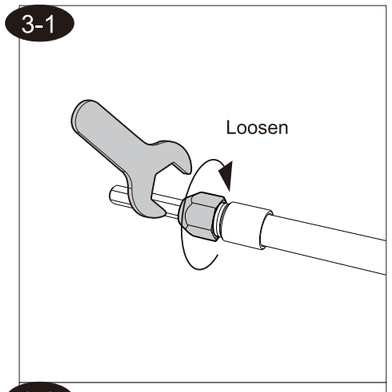

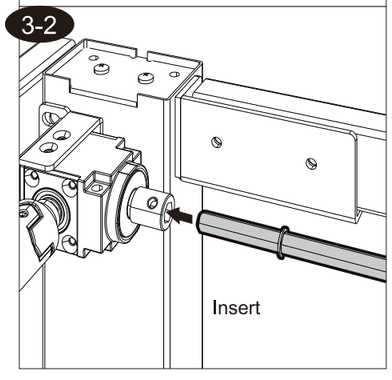

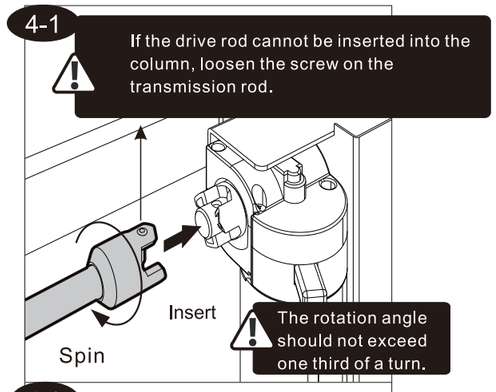

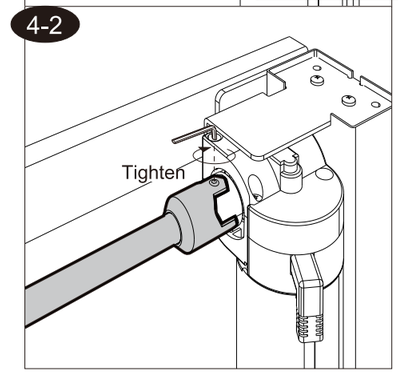



B-6 Install the support plate

Make sure the longer side of deskfeet⑯ and support plate⑦⑧ face the same direction

B x1


F x6

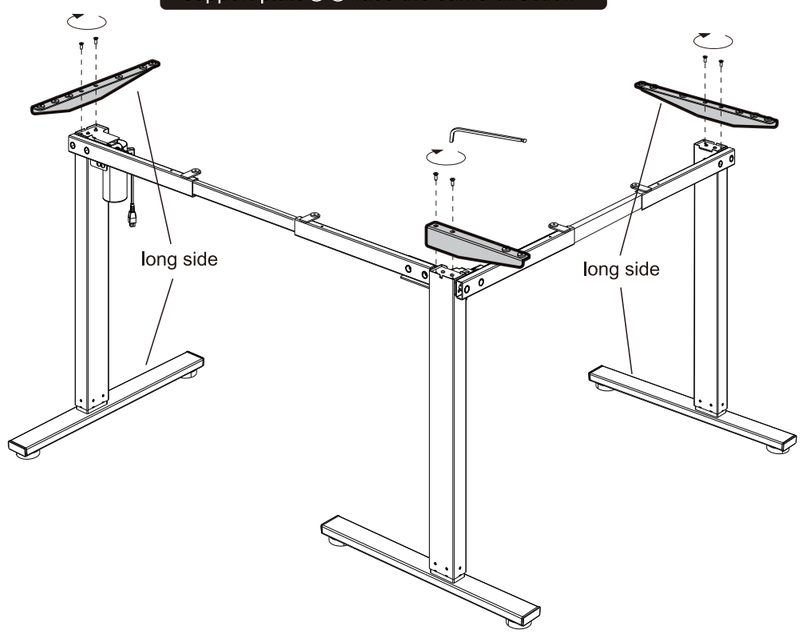

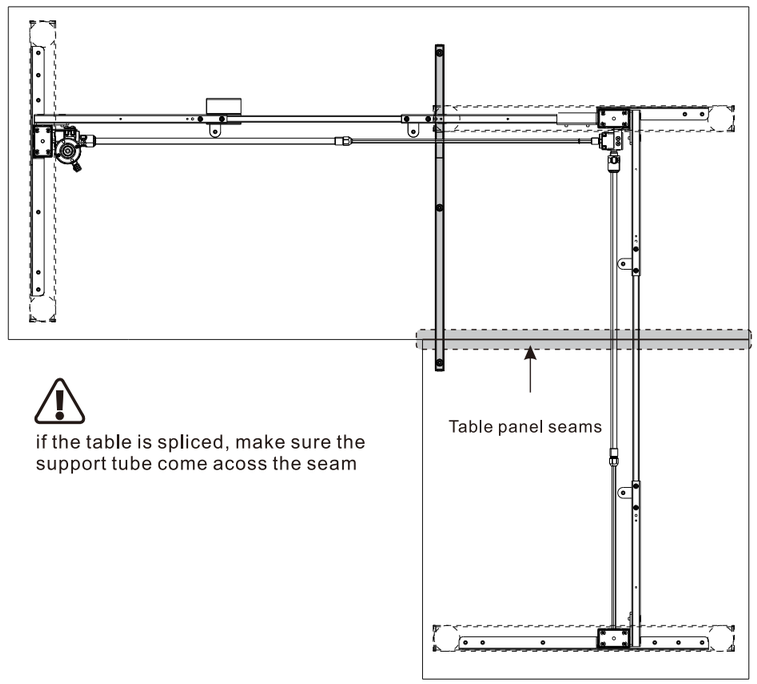

if the table is spliced, make sure the support tube come acoss the seam


B-7 Place the frame on the desktop and install the adaptor holder&support tube

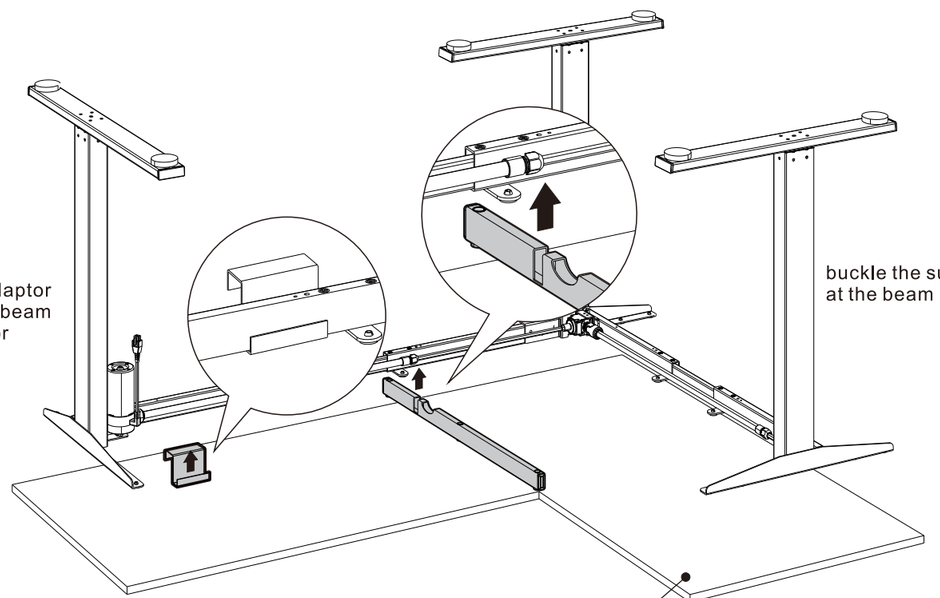

buckle the adaptor holder at the beam nearing motor

buckle the support tube at the beam


If the table board is provided by yourself, please ensure that the table board is strong enough. 100kg load bearing is the reference value of the frame, the actual use should be subtracted from the weight of the table board.

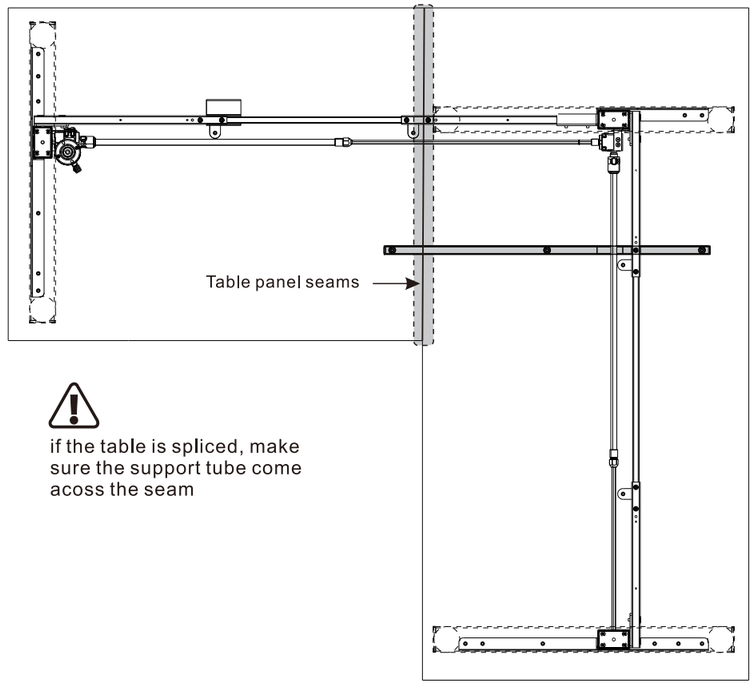

if the table is spliced, make sure the support tube come acoss the seam

B-8 Adjust the cross beams and drive rods to appropriate position



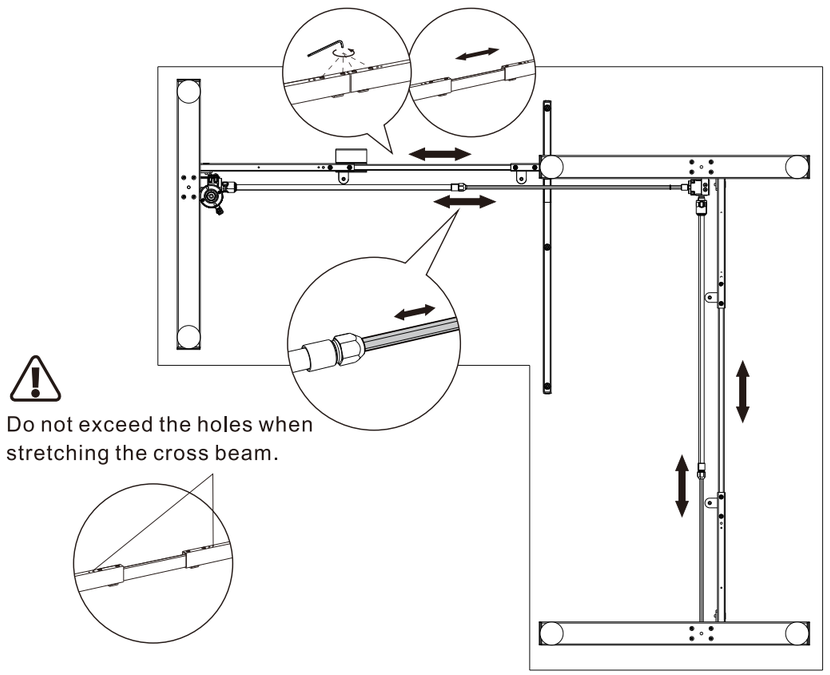

Do not exceed the holes when stretching the cross beam.


Leave at least 200 mm space to he edge.

B-9 Attach the frame to the top






Screw sequences are

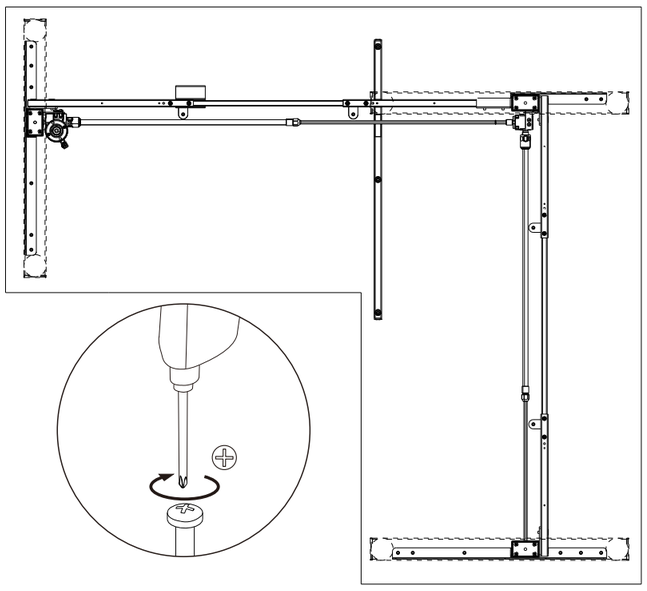

B-10 Tighten the screw on the support tube






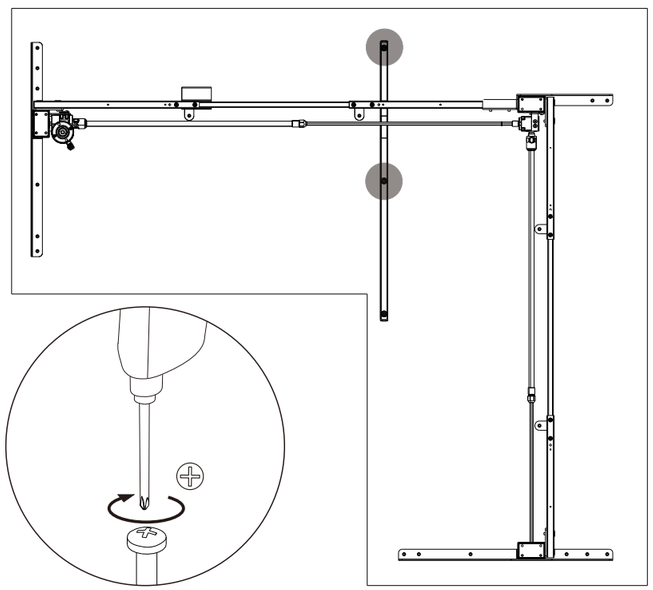


B-11 Secure the cross beams and drive rods






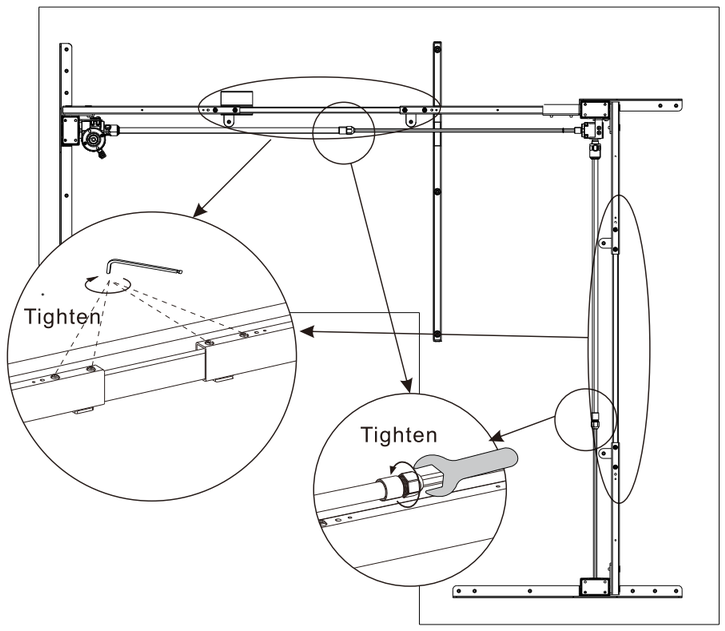


B-12 Install the adaptor




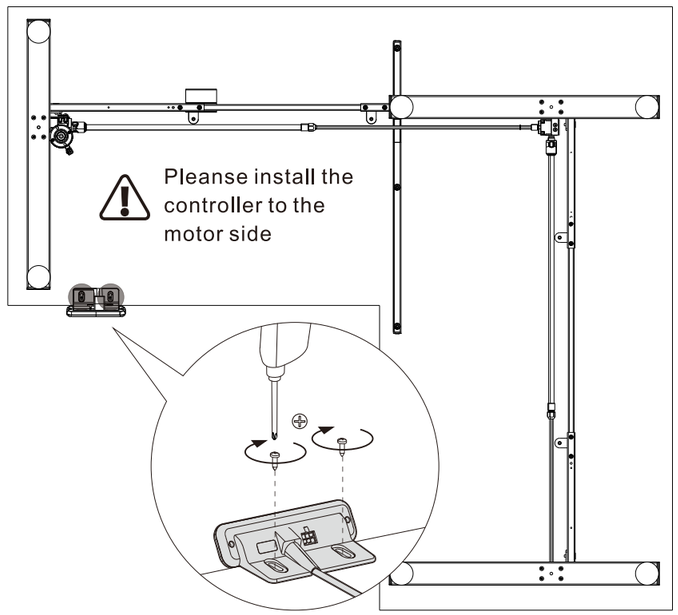


B-13 Install the adaptor

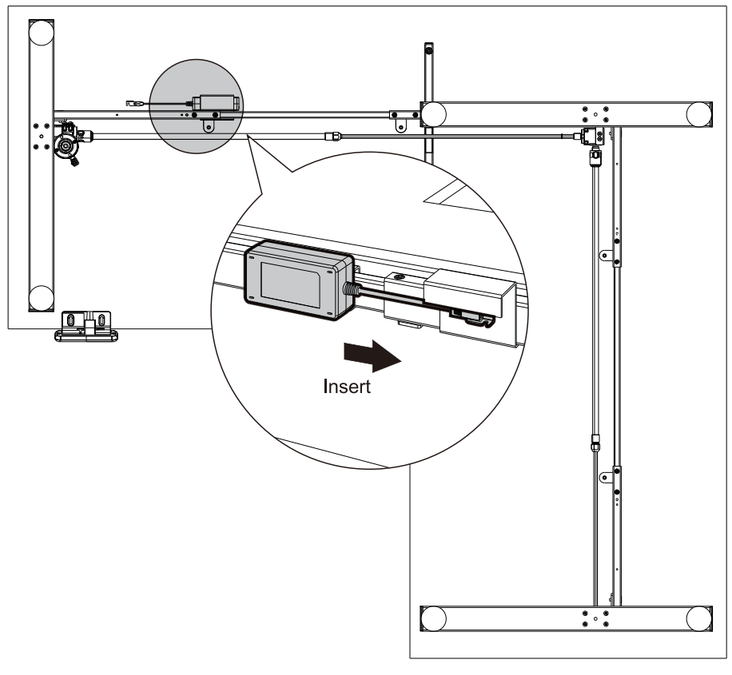


B-14 Install the baffle




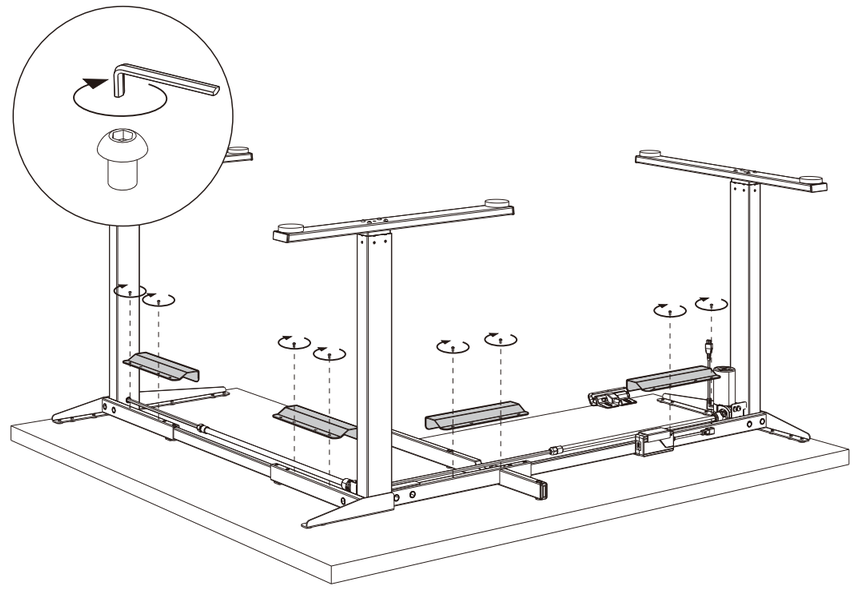

B-15 Wiring

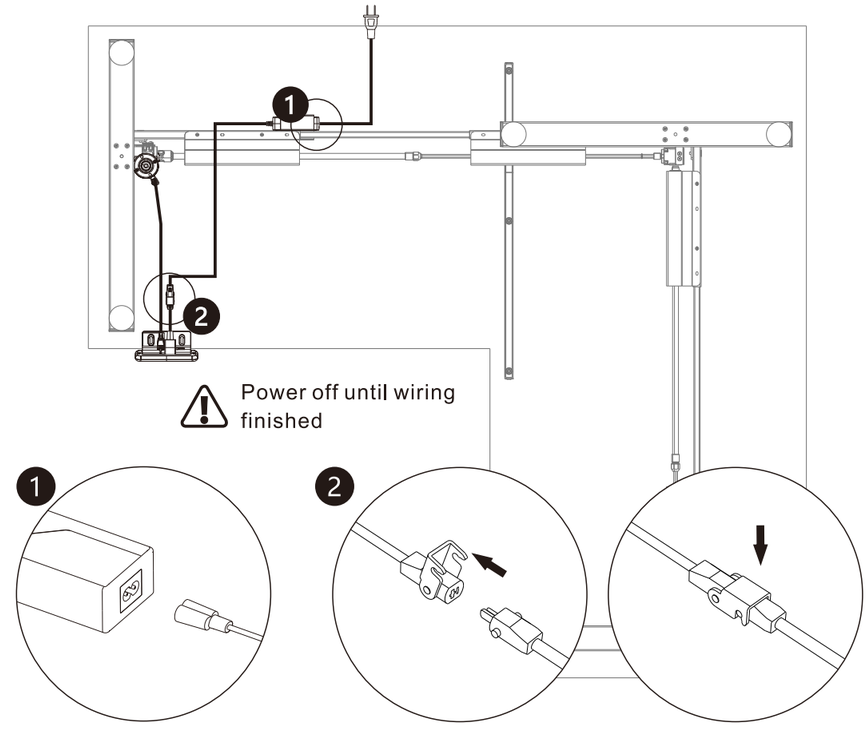


Fix the cables to desktop with cable clip to keep the desk clean.

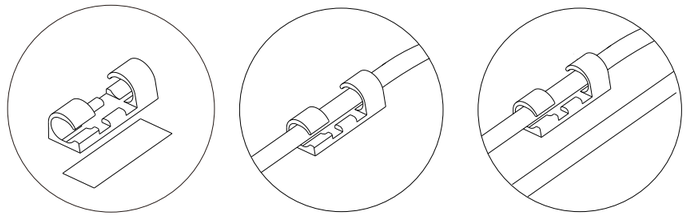


Tear off　　Manage cables　　Fix

B-16 Turn over the desk

When turning the table over, be careful not to squeeze the handset and turn the end with the handset upwards.

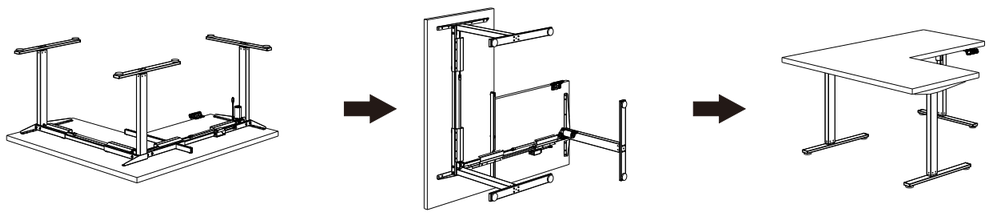

Keypad Instruction

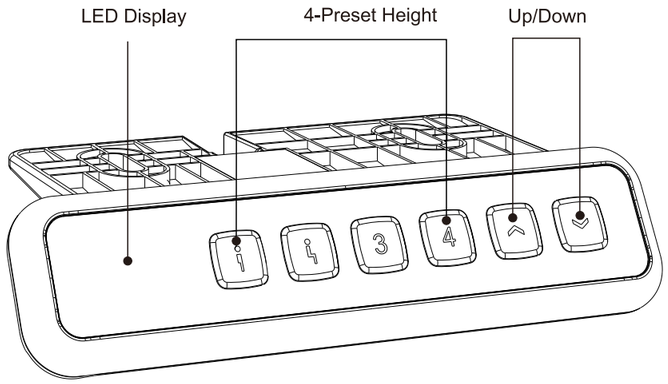


Attention

Please ensure that there are no obstructions to the table anld that all wires are long enough to move the table up and down.

Advice


Preset your comfort level to " " , when sitting and " " when standing, plus other preset heights can be freely set to other heights.

- Lifting function:

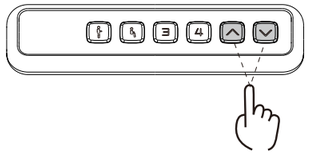


a. The height of the standing desk can be adjusted upwards or downwards by pressing the "∧" or "∨" keys.

- Memory Height Function:

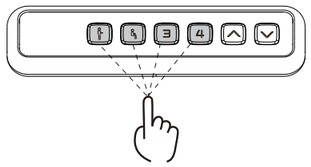


a. When the height-adjustable desk is stationary, press and hold the button " " for 3 seconds. The display will show "S-1", indicating that the current position has been successfully saved.
b. The keys denoted as " ", "3 ", and "4 ", possess the same memory height functionality as the key labeled " ". To save the height, repeat the aforementioned steps. The positions corresponding to " ", "3 ", and "4 " will store the height, and the display will indicate this with either "S-2", "S-3", or "S-4".
c. When the desktop is at any height, click the " " or " " or "3" or "4" key, and the lifting table will automatically adjust to the previously saved position.


- Anti-Collision Funtion:

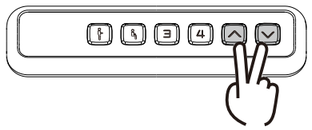

a. Simultaneously press and hold the "∧" and "∨" for 5 seconds to switch the sensitivity. One operation can switch to one level, divided into 4 levels—"A-0", "A-1", "A-2", "A-3".
b. The display shows "A-0" means the anti-collision function is turned off; the display shows "A-1" means low sensitivity; the display shows "A-2" means medium sensitivity; the display shows "A-3" means high sensitivity.
c. When the desk rises or falls, it will rebound immediately when encountering obstacles to prevent damage.


- Reset Funtion:



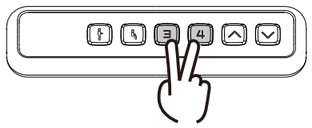

a. Press and hold the "∨" until the desk lowers to its lowest position, then release the key. Next, press and hold the "∨" until the digital display shows the current height, then release to complete the reset.
b. Simultaneously press and hold the "3" and the "4" for 3 seconds until the LED display shows "rSt", then release the buttons to enter reset mode. Next, press and hold the "∨" until the digital display shows the current height, then release to complete the reset.
c. When the lift system malfunctions, press and hold the "∨" until the desk lowers to its lowest position, then release the button. Next, press and hold the "∨" until the digital display shows the current height, then release to complete the reset.

- Code Processing:



a. Reset function definition, the LED display screen displays "rSt", press and hold the "∨" button until the display number shows the current height, release the "∨" button, the reset is completed, and the table can be used normally.
b. If the words "E01" or "E02" appear, please let the desk rest for more than 18 minutes before it can be used normally.
c. If other codes appear and there is no response after pressing the "∨" button, please make sure that the cable is not damaged and the connection is normal, and power off for more than 10 seconds, then turn on the power again, "rSt" is displayed, then long press the "∨" button to reset.
d. If the above operations are performed, the table still does not operate normally, please contact customer service.

Troubleshooting

The following guidelines will assist you in identifying and rectifying common This list is used for checking and solving common faults and errors. Please contact the manufacturer if problem you encounter is not on the list below.

Faults	Solution
Electronic functions are not functioning properly	Check whether the cable connection is normal;
Rising in a low speed	Check if overloaded, max loading: 220 lbs;
Downward sliding	
Frequently Reposition	
Only down but not up or only up but not down	Reset funtion;
Not enough up&down height	
The bottom cannot rise	
Overwork (Duty cycle: Max2min on/18min OFF)	Restart after suspend for 18mins while connecting with power;
Press the down button and the desk goes down instead of up	Check for obstructions underneath the desk or any wire harnesses hanging down.

Attention

1. Power supply: AC100V - 240V, frequency 50/60HZ;
2. Working environment: 32 - 104℉;
3. Before cleaning, you have to unplug the power supply cable. Clean with a slightly damp cloth to wipe away the surface dust. Keep all electrical components away from liquids. Do not damage the connection line and keep the plug in a safe position.
4. Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused or does not work, contact the supplier for further information.
5. Inside the control box, there are electronic components, metal parts, plastic parts, wires and so on. They should be disposed in accordance with the local laws and regulations. They cannot be disposed as household waste.
6. Before using the product, please make sure the product has been installed correctly.
7. When operating a switch that initiates and maintains the movement of the furniture or terminates the movement of the furniture or causes a change of the direction of the movement of the furniture, make sure that other persons are kept away.
8. Placement of furniture to avoid creating entrapment hazards with other furniture.
9. Before starting use of the product, please read the instructions to fully understand all the product's functions and settings.
10. Keep children away from electric height-adjustable desks, control units and handsets. Manufacturer is not responsible of any damages that result from children's unpredictable behaviour.
11. Slight noise caused by the multi wedge belt or brake system will not impact the use of this product.
12. Do not use corrosive or abrasive materials to clean this product and please dispose of cleaning solutions in an environmentally friendly manner.
13. Understand the risks associated with using this product. Children or those with cognitive impairment should not use this product without supervision.
14. If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a relevant specialist to avoid any injuries.
15. Please operate in a clean and safe environment. For example, do not left around your tools. And always be careful to deal with packaging materials, in order to avoid any kinds of possible danger. Potential chocking risk exists when children play with plastic bags!
16. The appliance is only to be used with the unit provided
17. For indoor use only.
18. If necessary, retain the original package for future transportation.

Recycling and Disposal

This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contract the distributor or manufacturer for recycling assistance.

Limited Warranty

This limited warranty covers defects in material or workmanship in new products. This warranty extends to the original purchaser only and is non- transferable.

What is Covered?

The limited warranty covers our products against defects in material or workmanship as follows:

Standing Desk

All standing desks feature a 5-year warranty for the frame and 2-year warranty for the controller, electronics and other mechanisms.

What are your Remedies?

We will replace at no charge to the consumer the defective parts only or, at our option, replace any product or part of the product that is defective because of improper workmanship and/or material, under normal installation, use, service and maintenance. If we are unable to provide a replacement and repair is not practical or cannot be completed in a timely fashion, we may elect to refund the purchase price in exchange for the return of the product. In the rare event that your product is defective, we will provide you with a replacement item shipped at no cost to you within the continental United States. The shipping method for replacement products is FedEx Ground, but expedited shipping is available if you choose to pay the additional expense. In addition, you will need to pay the shipping costs if any products need to be shipped to you at an address outside the continental United States.

REPAIR OR REPLACEMENT (OR, IN LIMITED CIRCUMSTANCES, REFUND OF THE PURCHASE PRICE) AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. WE NEITHER ASSUME NOR AUTHORIZE ANY PERSON TO CREATE FOR ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH THIS PRODUCT.

What is Not Covered?

Our limited warranty does not cover any problem that is caused by:

1. Conditions, malfunctions or damage not resulting from defects in material or workmanship.
2. Conditions, malfunctions or damage resulting from normal wear and tear, improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration.
3. Accessories, connected materials and products, or related products not manufactured by ours.
4. Conditions, malfunctions or damage resulting from failure to follow the instructions and guidelines relating to the product's intended use.

Our limited warranty is void if a product is returned with removed, damaged or tampered labels or any alterations (including removal of any component or external cover).

How to File a Claim?

In order to receive the benefit of our limited warranty, you need to process your claim in compliance with the terms of this limited warranty and follow proper return procedure. To request warranty service, please contact customer service, toll free at +1 (855) 585-5618. You will need to provide the sales receipt or other evidence of the date and place of purchase for your product.

Implied Warranties and Limitation of Damages

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES (INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY, AND WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS OR REVENUE, RESULTING FROM ANY BREACH OF EXPRESS OR IMPLIED WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some jurisdictions do not allow limitations on the duration of an implied warranty or the exclusion or limitation of special, indirect, incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Governing Law

This Warranty shall be governed by the laws of the State of California, USA, without giving effect to any conflict of laws principles that may provide the application of the law of another jurisdiction.

How State Law Applies

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.