


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618

Mail: contact@flexispot.com


Address: 728 W Rider St Perris, CA 92571

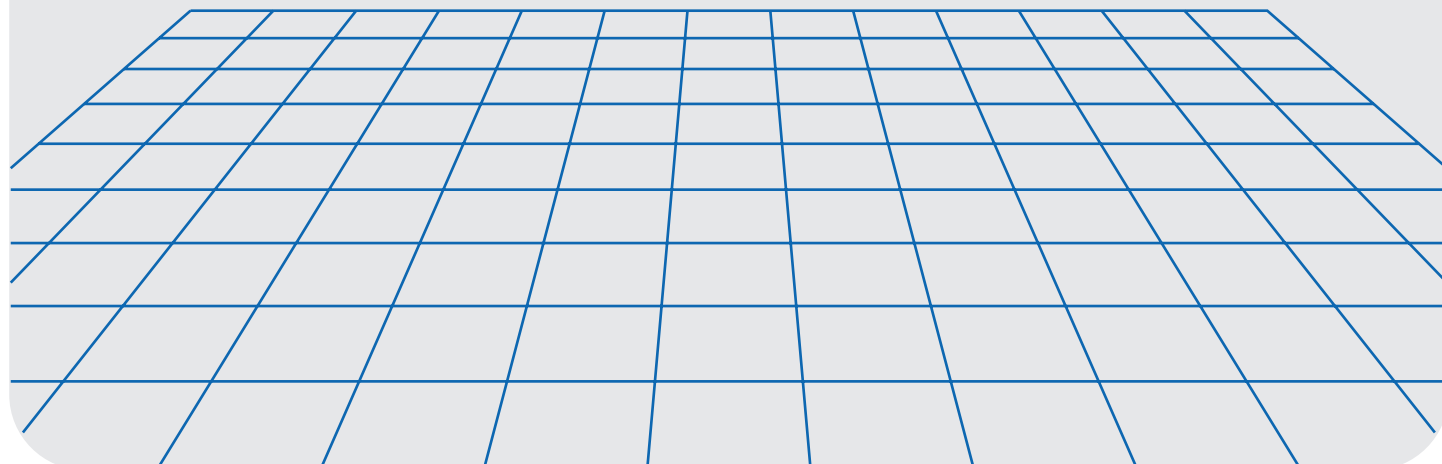

FlexiSpot


User Manual

Item No. XC6

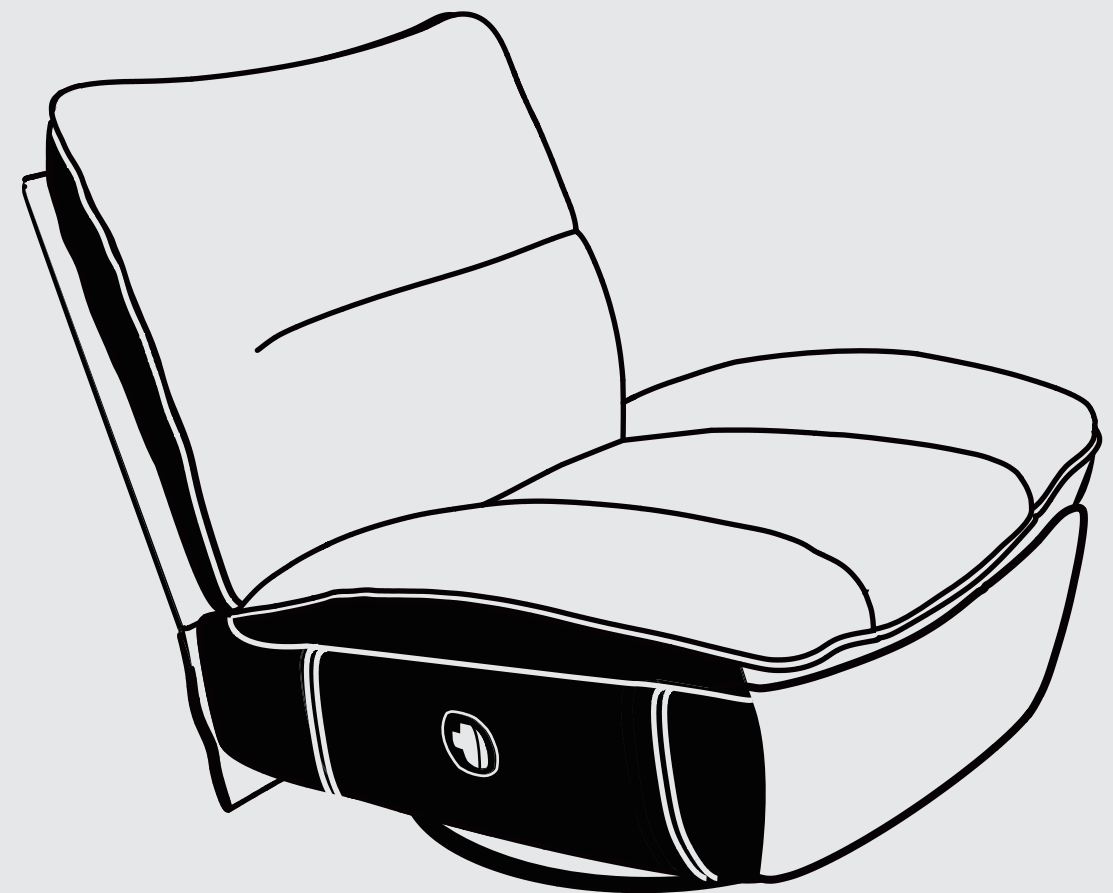


INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE


Installation Preparation

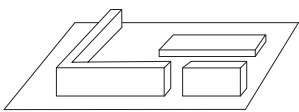

Assemble on flat floor to avoid scratches




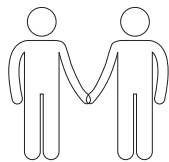


Installation should be done with two or more people

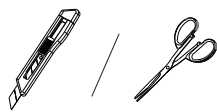

Prepare a knife or scissors

Components List

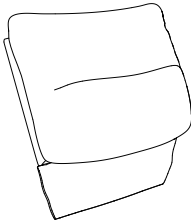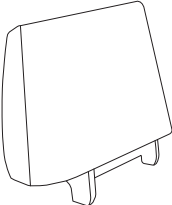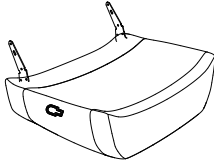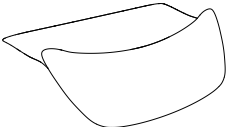A x1  4x4	B x4 	1 Backrest padding x1 	2 Backrest frame x1 
3 Recliner base x1 	4 Seat cushion x1 	5 Legrest x1 	

Assembly Instructions


1

Assemble the backrest and backrest frame





Make sure to align the flat side of the backrest frame with the backrest padding for proper installation.

1

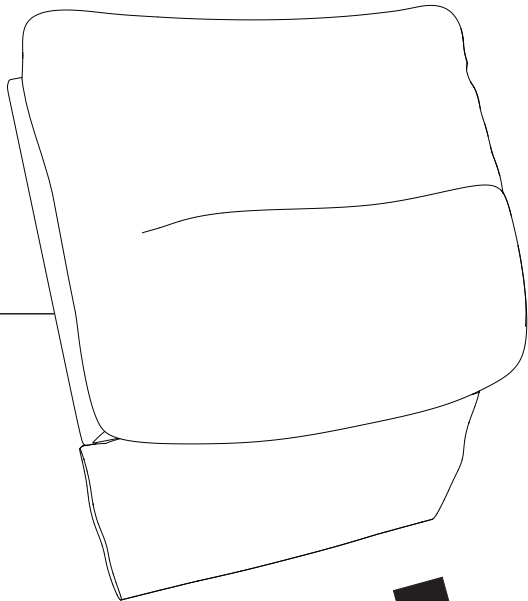


Peel off the protective layer from the Velcro and attach it to the Velcro on the lower layer.

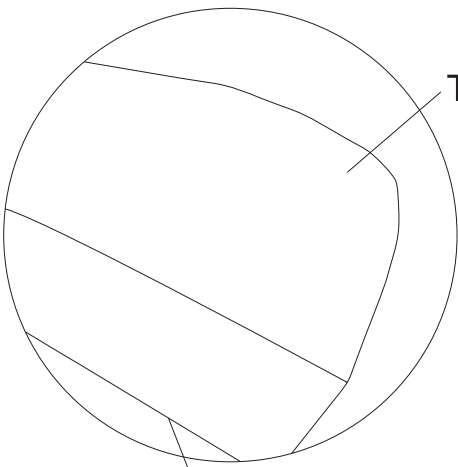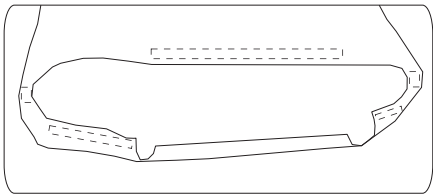

The curve side

The flat side

2


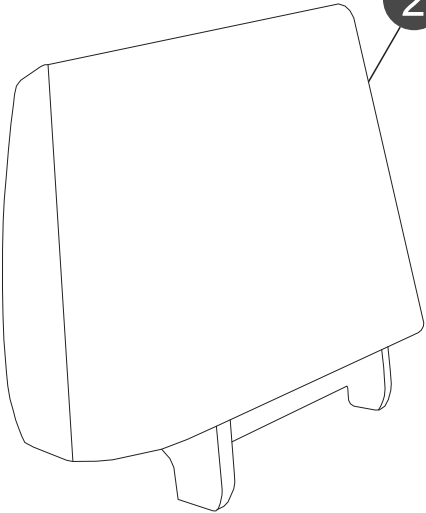


2


When installing the base and legrest, it is recommended to open the recliner by pulling the side handle before installation. Ensure no one stands in front of the recliner while it is opening to avoid injury.




During installation, first pre-lock one side, then install the other side and tighten the screws of both sides simultaneously.

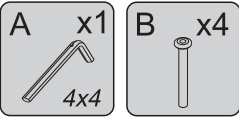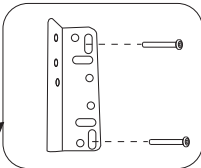

The Velcro here needs to be adhered.


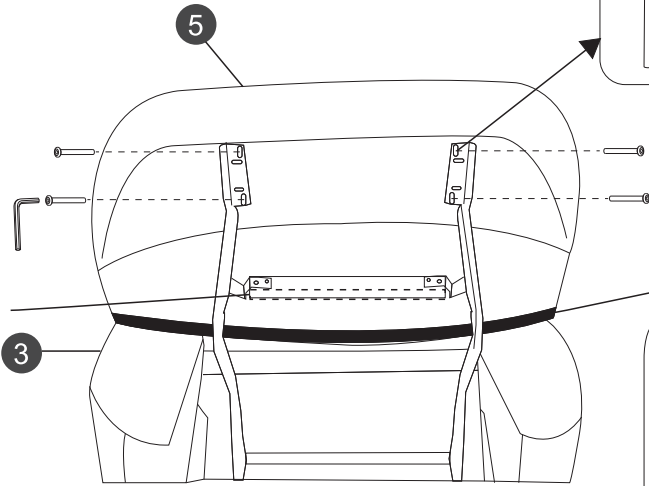


It is recommended to adhere the Velcro here to the black brushed fabric near the exterior fabric.

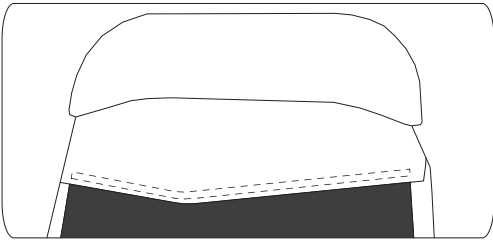

3

Install the seat cushion, ensuring that the front edge of the cushion is flush with the legrest.

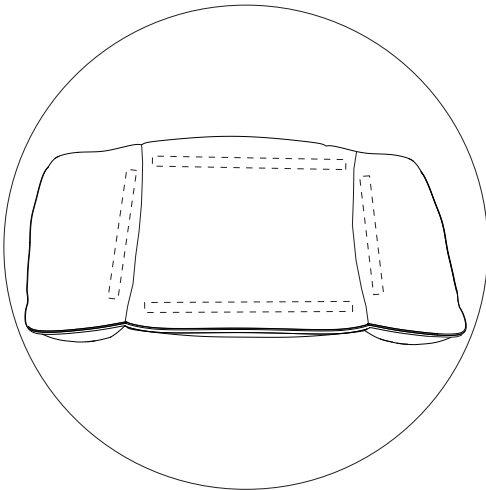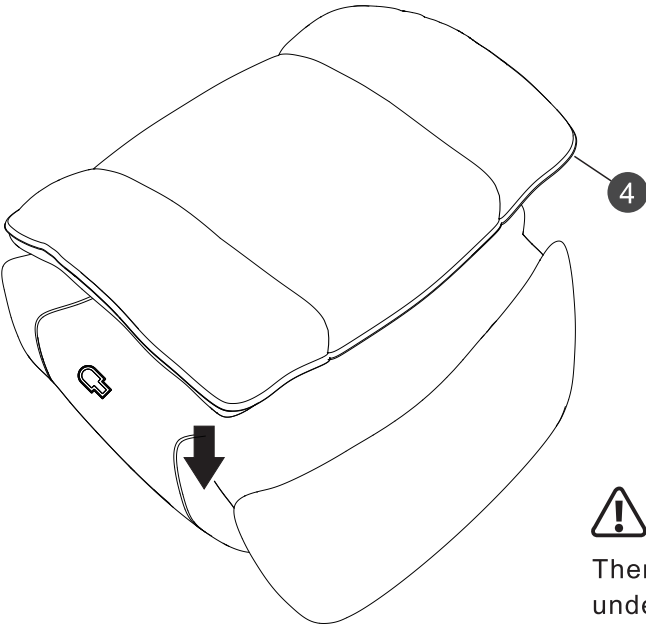




There is a protective layer of Velcro on the underside of the seat cushion. Peel it off before installation.

4

Install the backrest.




The Velcro here should be adhered to the bottom of the recliner

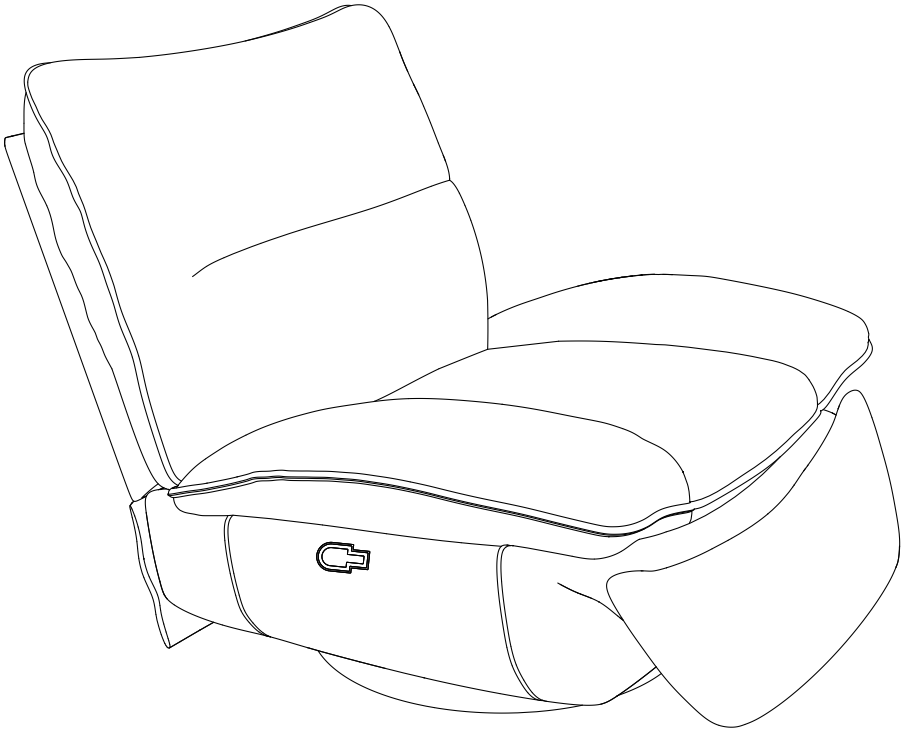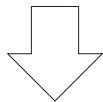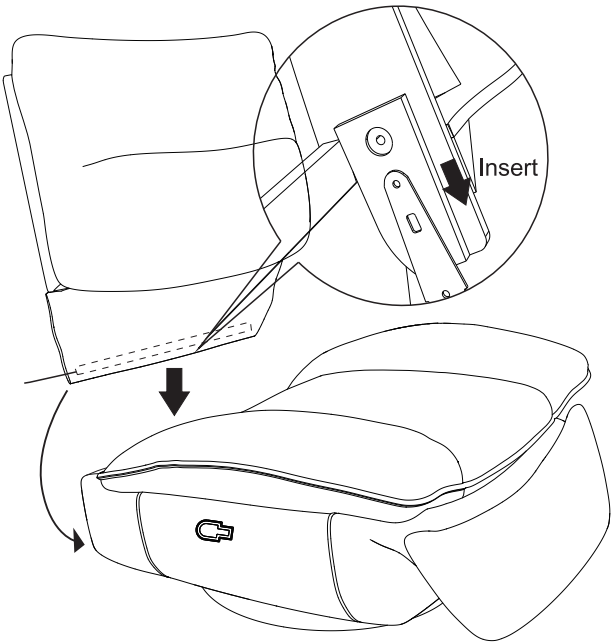


Usage and Maintenance Instructions


Before Use

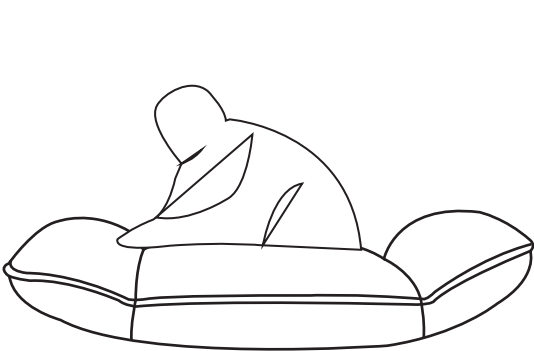


1. Open the vacuum compression bag of the seat bag, and allow the contents to bounce back. Then, gently pat with your hand to make it fluffy and smooth.

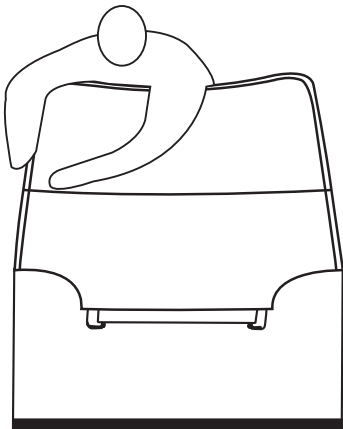

2. Repeat step 1 with the backpack to ensure it is also properly fluffed and smoothed.

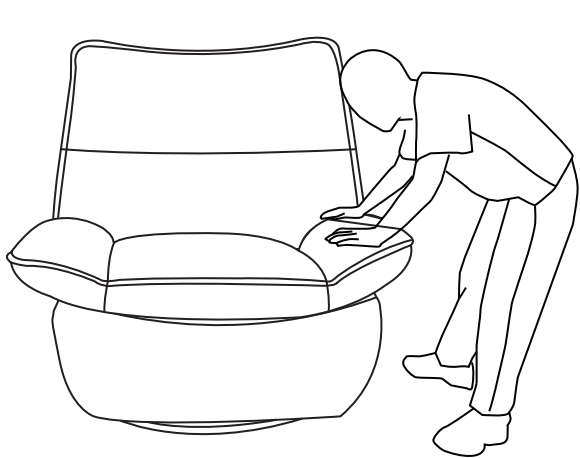



3. The seat bag is glued under the seat, and the seat bag is sorted out smoothly with a pat.

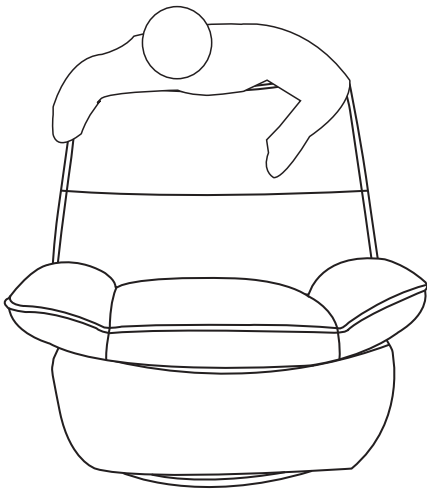


4. The backrest padding is set in the back inner frame, and then inserted on the iron frame to install. Pat the backrest with your hands to make it smooth and tidy.

During Use

We recommend this product for individuals aged 10 to 65 who weigh less than 300 lbs, regardless of gender.

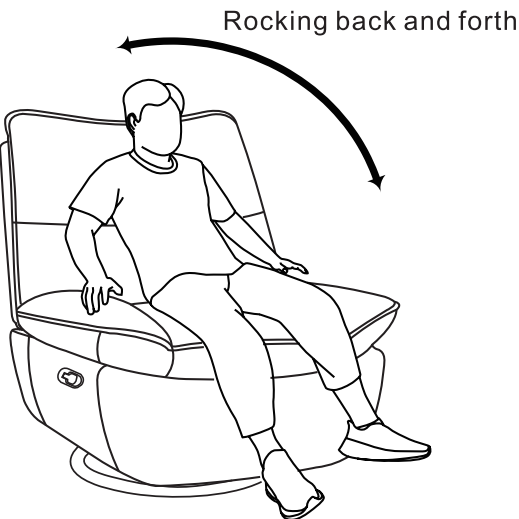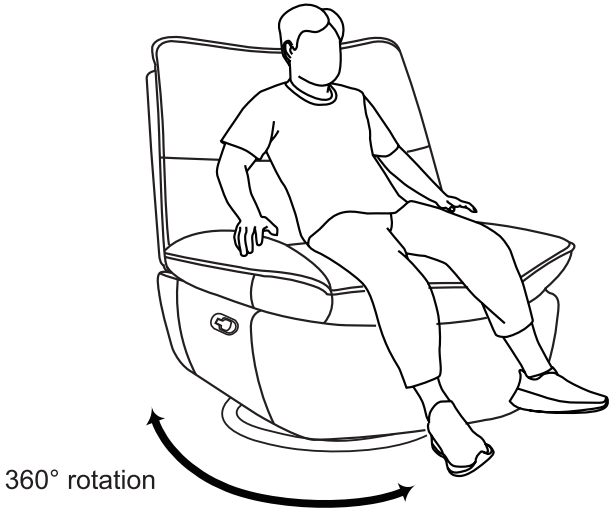


The manual switch controls the legrest completely open, and the backrest can be fully expanded by the user lying back.

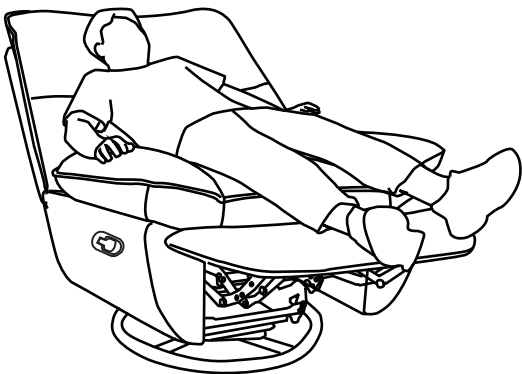


Leisure lying mode.



Warning

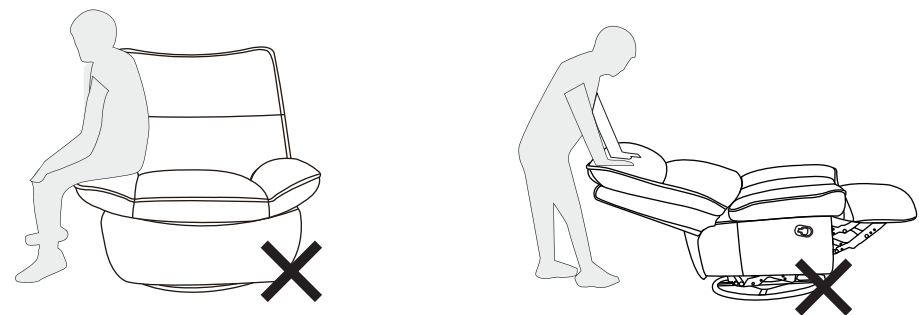

Do not sit on or press armrest. Do not press backrest after reclining.

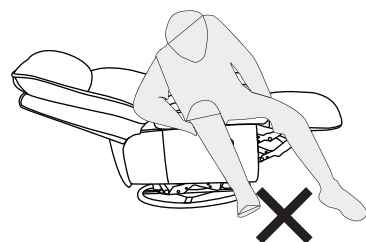


Do not get off the chair while it is reclined.

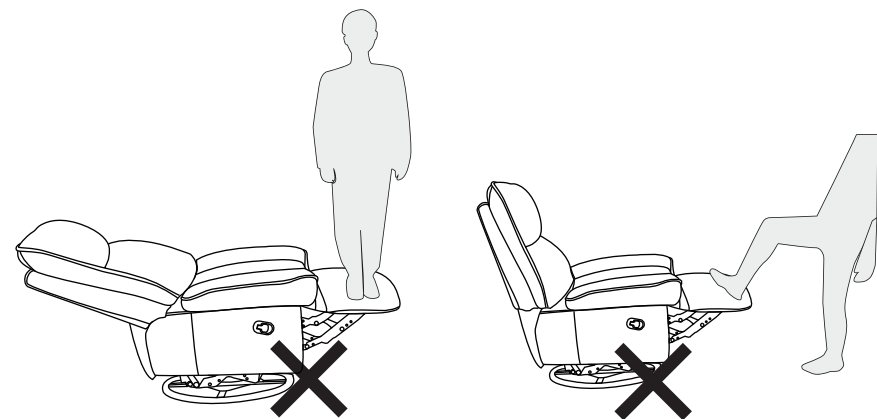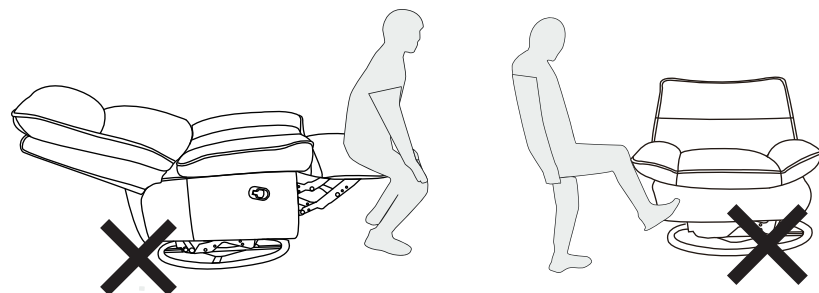

Do not sit/kick/stand on the footrest at any time.


Warning

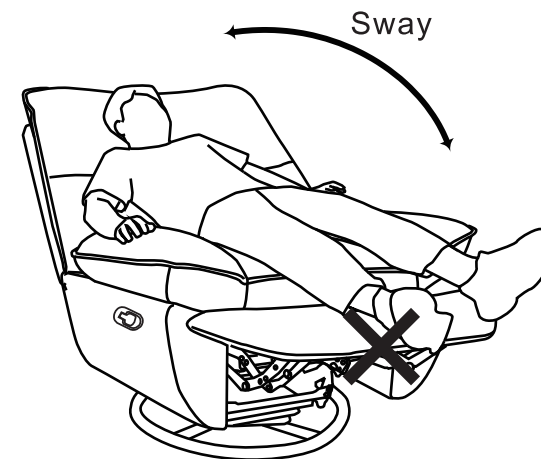

Do not sway back and forth when the recliner is fully open.



Do not force the recliner to lean back or lie on its back, as it is easy to tip.

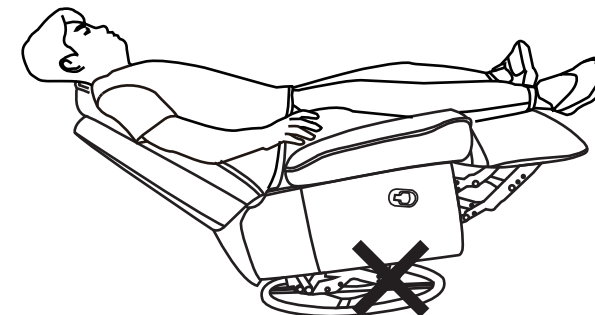

Avoid heavily sitting, and when reclining, ensure that your buttocks are positioned on the cushion and avoid sitting on the backrest of the recliner.



Do not sit on the front edge of the recliner or on the footrest of the recliner, which is prone to tipping forward.

Troubleshooting

If this product malfunctions, please refer to the following situations and possible solutions:

Situations	Solutions
Frame is not flexible during usage	1. Adjust the product's position (level it) 2. Apply a small amount of lubricant to the sticking points
The product exhibits a non-smooth feeling during operation	Remove any debris or obstacles from beneath and around the recliner
The product has an odor	Keep the area well-ventilated or spray with a recliner-specific deodorizer.
If issues persist after following the above troubleshooting solutions, please contact our customer service team.	